

Braun BT5265

Braun BT5265 Beard Trimmer and Hair Clipper User Manual

Model: BT5265

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Braun BT5265 Beard Trimmer and Hair Clipper. Please read all instructions carefully before using the appliance and retain this manual for future reference. The Braun BT5265 is designed for precise beard trimming and hair clipping, featuring a precision dial for length settings, Lifetime Sharp Blades, and a washable design for easy maintenance.

IMPORTANT SAFETY INFORMATION

When using an electrical appliance, basic precautions should always be followed to reduce the risk of electric shock, burns, fire, or injury to persons. Read all instructions before using this appliance.

DANGER

- Use only in dry condition.
- Do not submerge in water. When disconnected, the hand-held part of this appliance may be cleaned under water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place, store or charge the appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning.
- This appliance is provided with a special cord set with integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it.
- Do not use an extension cord with this appliance.

WARNING

- Close supervision is necessary when this appliance is used by, on, or near children or persons with

disabilities.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if the power supply has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this appliance with a damaged or broken cutter or comb, as serious skin injuries may occur.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls off, then remove plug from outlet.
- When plugging to an electrical outlet outside North America, use a plug adapter to match the outlet's pin configuration.
- **Caution:** The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100 °C (212 °F) or incinerate.
- To recharge the battery, only use the detachable power supply provided with this appliance. If the appliance is marked 491 or 492, only use Braun power supplies coded 491-XXXX or 492-XXXX.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Beard Trimmer & Hair Clipper (Main Unit)
- 1 x Precision Beard Comb (1-10mm)
- 1 x Precision Hair Comb (11-20mm)
- 1 x Mini Foil Shaver
- 1 x Smart Plug Charger
- 1 x Cleaning Brush
- 1 x Gillette Fusion5 ProGlide Razor
- User Manual (this document)



Figure 1: Braun BT5265 Beard Trimmer and included accessories: main trimmer unit, two precision combs, mini foil shaver, cleaning brush, and Gillette Fusion5 ProGlide razor.

PRODUCT OVERVIEW

The Braun BT5265 is engineered for precision and ease of use, featuring several key components:

- **Lifetime Sharp Blades:** Designed to deliver consistent performance and precise trimming without pulling or tugging.
- **Precision Dial:** Offers 39 length settings in 0.5 mm step sizes for ultimate control over your desired style.
- **AutoSensing Motor:** Adapts to your beard density, providing efficient trimming for all beard types.
- **Cordless & Rechargeable:** Provides up to 100 minutes of cordless trimming on a 1-hour charge.



Lifetime
Sharp blades



Figure 2: Close-up of the Braun BT5265 trimmer's blades, highlighting the 'Lifetime Sharp Blades' feature.



Figure 3: Close-up of the Braun BT5265 precision dial, indicating its function for adjusting trimming length.

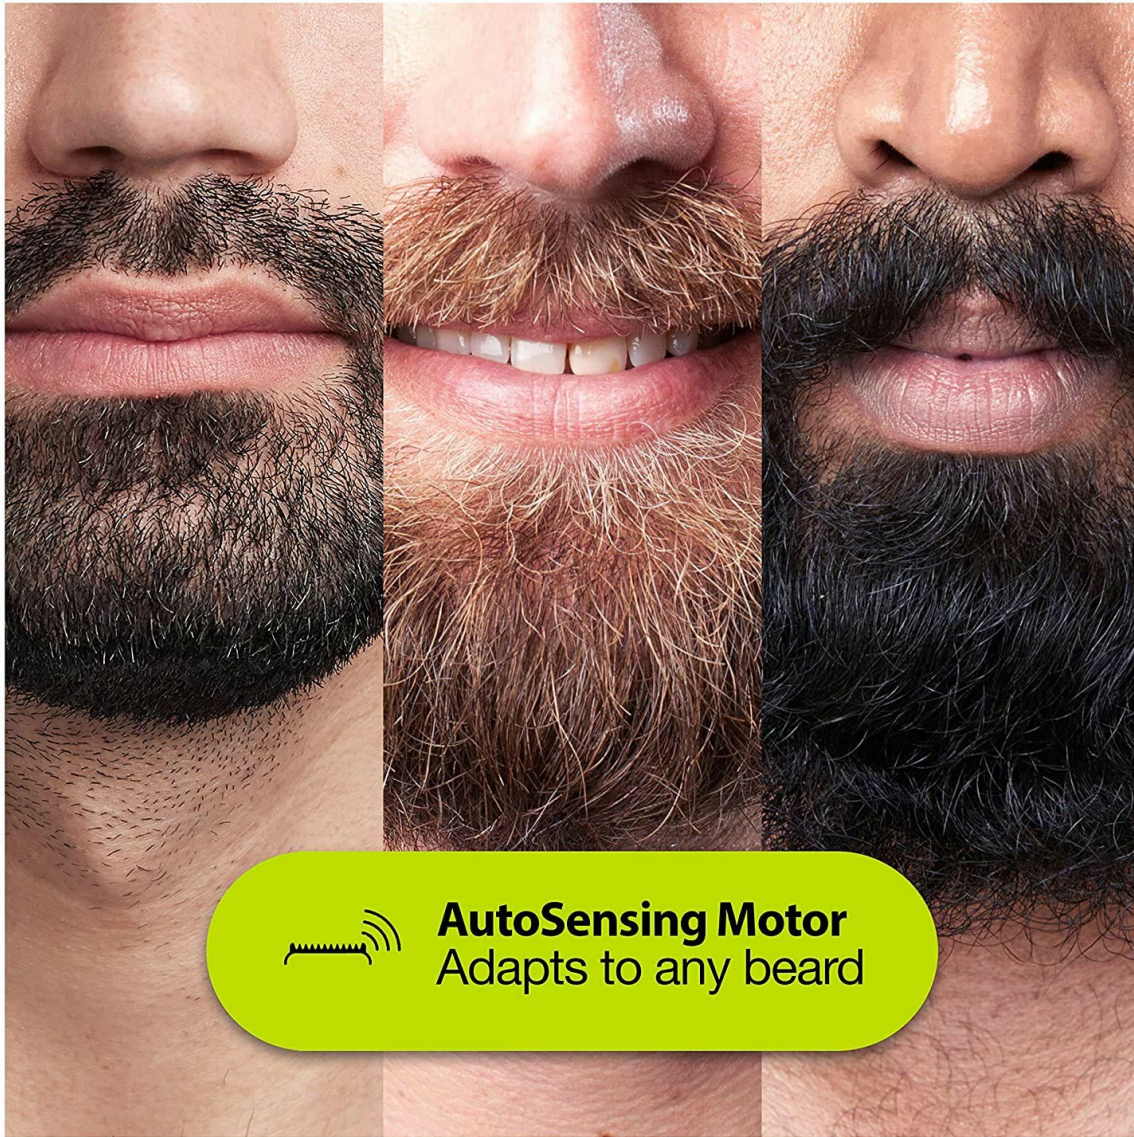


Figure 4: Three distinct beard types, illustrating how the AutoSensing Motor adapts to different hair densities.

CHARGING THE APPLIANCE

Before first use, or when the battery is low, charge your trimmer fully.

1. Ensure the trimmer is switched off.
2. Connect the smart plug charger to the trimmer's charging port.
3. Plug the charger into an electrical outlet. The charging indicator light will illuminate.
4. A full charge takes approximately 1 hour and provides up to 100 minutes of cordless trimming.
5. Once fully charged, unplug the charger from the outlet and the trimmer.

SETUP

Attaching and Removing Combs

1. To attach a comb: Align the comb with the trimmer head and push it down until it clicks into place.
2. To remove a comb: Gently pull the comb upwards from the trimmer head.

Adjusting Trimming Length

The precision dial allows you to select your desired trimming length.

1. Ensure a comb is attached to the trimmer head.
2. Rotate the precision dial to select one of the 39 length settings (0.5 mm increments). The selected length will be indicated on the dial.

OPERATING INSTRUCTIONS

Always ensure your skin and hair are clean and dry before trimming.



Figure 5: Individuals demonstrating the use of the Braun BT5265 trimmer for various beard styles and hair lengths.

Beard Trimming

1. Attach the appropriate precision beard comb (1-10mm) and select your desired length using the precision dial.
2. Turn on the trimmer.
3. Hold the trimmer with the comb flat against your skin.
4. Move the trimmer against the direction of hair growth, using slow and even strokes.
5. For defining lines and edges, remove the comb and use the trimmer head directly.

Hair Clipping

1. Attach the precision hair comb (11-20mm) and select your desired length using the precision dial.
2. Turn on the trimmer.
3. Hold the trimmer with the comb flat against your head.
4. Move the trimmer against the direction of hair growth, ensuring even coverage.

Using the Mini Foil Shaver

The mini foil shaver is designed for clean shaves on small areas and detailing.

1. Ensure the trimmer is off and attach the mini foil shaver head.
2. Turn on the trimmer.
3. Gently press the shaver against your skin and move it in short, circular motions to remove fine hairs.

Using the Gillette Fusion5 ProGlide Razor

The included Gillette Fusion5 ProGlide razor is for achieving a close, smooth shave on areas where you desire complete hair removal.

1. Wet the area to be shaved and apply shaving gel or foam.
2. Shave with light, gentle strokes.
3. Rinse the razor blades frequently during shaving.

MAINTENANCE

Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the trimmer and disconnect it from the power outlet.
2. Remove any attached comb.
3. Use the cleaning brush to remove loose hairs from the trimmer head and combs.
4. The trimmer head and combs are washable. Rinse them under running tap water until clean.
5. Allow all parts to air dry completely before reattaching or storing.

Blade Care

The blades are designed for lifetime sharpness. No oiling is required.

TROUBLESHOOTING

If you encounter issues with your Braun BT5265, refer to the following common problems and solutions:

- **Trimmer not turning on:** Ensure the device is charged. Connect it to the charger and check if the charging indicator illuminates.
- **Reduced trimming performance:** Clean the trimmer head and comb thoroughly to remove any accumulated hair. Ensure the blades are free from debris.
- **Battery not holding charge:** Ensure you are using the original smart plug charger. If the issue persists, contact customer support.
- **Irritation after using mini foil shaver:** Ensure skin is clean and dry. Use gentle pressure. If irritation persists, discontinue use of the mini foil shaver.

SPECIFICATIONS

Model Number	BT5265
Power Source	Battery Powered (Rechargeable Li-ion)
Battery Type	1 AA battery (included)
Charging Time	1 hour for full charge
Operating Time	Up to 100 minutes cordless trimming
Length Settings	39 (in 0.5 mm steps)
Washable	Trimmer head and combs
Product Dimensions	5.39 x 2.24 x 9.92 inches
Item Weight	0.79 Pounds (12.64 ounces)
Manufacturer	Procter & Gamble
UPC	069055888056

WARRANTY AND SUPPORT

Your Braun BT5265 Beard Trimmer and Hair Clipper comes with a manufacturer's warranty. Please refer to the warranty information provided in your package for details on coverage and duration.

For further assistance, troubleshooting not covered in this manual, or to inquire about replacement parts, please contact Braun customer support through their official website or the contact information provided in your product documentation.