

[Manuals.plus](#) /

› [Salton](#) /

› Salton Cool Touch Digital Temperature Control Electric Kettle User Manual

Salton JK1956

Salton Cool Touch Digital Temperature Control Electric Kettle

Model: JK1956

INTRODUCTION

Thank you for choosing the Salton Cool Touch Digital Temperature Control Electric Kettle. This manual provides important information for the safe and efficient operation of your new appliance. Please read it thoroughly before first use and keep it for future reference.

This 1.5-liter electric kettle features seamless double-wall construction, ensuring the exterior remains cool to the touch even when filled with hot water. With 1500 watts of power, water heats quickly. The large LED display and touch controls allow for precise temperature selection from 700C to 1000C (1580F to 2120F), along with a 2-hour keep warm function.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or the kettle base in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- Ensure the lid is securely closed before operating.
- Do not fill above the MAX line or below the MIN line.

PARTS AND FEATURES



Figure 1: Labeled diagram of the Salton Cool Touch Digital Temperature Control Electric Kettle, highlighting its key components including the push-button lid, wide opening, LED display, temperature settings, touch control buttons, 3600 swivel base, 1500 watts power, and cord wrap.

- **Push-button Lid:** For easy opening and closing.

- **Wide Opening:** Facilitates easy filling and cleaning.
- **LED Display:** Large digital display for temperature indication.
- **Pre-set Temperature Settings:** Four options: 700C (1580F), 800C (1760F), 900C (1940F), 1000C (2120F).
- **Touch Control Buttons:** For power and temperature selection.
- **3600 Swivel Base:** Allows the kettle to be placed in any direction.
- **Cool Touch Exterior:** Double-wall construction keeps the outside cool.
- **Cord Wrap:** Integrated into the base for tidy storage.



Figure 2: Image showing hands comfortably holding the kettle, illustrating its cool-touch exterior feature.



DOUBLE WALL

Cool touch exterior and stainless steel interior - HOT inside and COOL outside



DIGITAL DISPLAY

Large LED display with touch control

Figure 3: Detailed view highlighting the double-wall construction for cool touch and the clear digital temperature display.

SETUP AND FIRST USE

1. Unpack the kettle and all accessories. Remove any packaging materials.
2. Before first use, fill the kettle with cold water to the MAX fill line.
3. Boil the water (select 1000C) and then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
4. Wipe the exterior of the kettle with a damp cloth. Do not immerse the kettle or its base in water.

OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Press the button on the handle to open the lid. Fill the kettle with the desired amount of fresh, cold water. Do not fill below the MIN mark or above the MAX mark. Close the lid securely.
2. **Place on Base:** Place the kettle firmly onto its 3600 swivel power base. Ensure it is properly seated.

3. **Connect Power:** Plug the power cord into a standard electrical outlet. The LED display will illuminate briefly.
4. **Select Temperature:** Press the power button () to turn on the kettle. The display will show the current water temperature or a default setting. Repeatedly press the temperature selection button (labeled with a thermometer icon) to cycle through the pre-set temperatures: 700C (1580F), 800C (1760F), 900C (1940F), and 1000C (2120F).
5. **Start Boiling:** Once the desired temperature is selected, the kettle will begin heating. The LED display will show the rising temperature.
6. **Automatic Shut-off:** The kettle will automatically shut off once the selected temperature is reached.
7. **Keep Warm Function:** After reaching the selected temperature, the kettle will automatically enter a 2-hour keep warm mode, maintaining the set temperature.
8. **Pouring:** Carefully lift the kettle from the base and pour the hot water. The cool-touch exterior ensures safe handling.
9. **Disconnect:** Unplug the kettle from the outlet when not in use.



Figure 4: The kettle pouring hot water, demonstrating the ease of use and spout design.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

- **Always unplug the kettle** and allow it to cool completely before cleaning.
- **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- **Interior Cleaning:** The wide opening makes the interior easy to clean by hand.
- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. This can affect performance.
 - Fill the kettle with a mixture of 1 part white vinegar to 2 parts water.
 - Bring the mixture to a boil and let it stand for at least 30 minutes, or longer for heavy deposits.
 - Empty the kettle and rinse thoroughly several times with fresh water.
 - For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.
- **Storage:** When not in use, store the kettle in a clean, dry place. Use the cord wrap feature on the base to keep the cord tidy.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply. Kettle not properly seated on base.	Check if the kettle is plugged in. Ensure the kettle is correctly placed on the power base. Try a different outlet.
Water is not heating.	Kettle has automatically shut off. Insufficient water.	Ensure the kettle is filled above the MIN line. If it just boiled, allow it to cool slightly before restarting.
Kettle shuts off before boiling.	Limescale buildup.	Descale the kettle as per the 'Maintenance and Cleaning' section.
Water tastes strange or has particles.	New kettle residue. Limescale buildup.	For first use, boil and discard water 2-3 times. Regularly descale the kettle.

SPECIFICATIONS

Feature	Detail
Brand	Salton
Model Name	Cool Touch Digital Temperature Control Kettle, 1.5 L (JK1956)
Capacity	1.5 Liters
Power	1500 Watts
Material	Double wall insulation, Stainless Steel interior
Color	Black
Product Dimensions	9.1"L x 6.5"W x 9.9"H

Feature	Detail
Special Features	3600 Swivel Base, Adjustable Temperature (700C - 1000C), BPA Free, Cool Touch Housing, Keep Warm Function (2-hour), Easy Clean, Cord Wrap
Item Weight	3.45 Pounds
Country of Origin	China

WARRANTY AND SUPPORT

This Salton product is covered by a limited warranty against defects in material and workmanship. For specific warranty details, terms, and conditions, please refer to the warranty card included with your purchase or visit the official Salton website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Salton customer service. You can also find more information and support resources by visiting the [Salton Brand Store on Amazon](#).