

## Disney AW164

# Halloweentown Complete 4 Movie Series Disney DVD Collection Instruction Manual

Model: AW164

[Introduction](#)   [Package Contents](#)   [Setup](#)   [Operating](#)  
[Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Support](#)

## 1. INTRODUCTION

This manual provides instructions for the proper use and care of your Halloweentown Complete 4 Movie Series Disney DVD Collection. This collection includes the films *Halloweentown*, *Halloweentown II: Kalabar's Revenge*, *Halloweentown High*, and *Return to Halloweentown*. Please read this manual thoroughly before use to ensure optimal viewing experience and longevity of your discs.

## 2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Halloweentown Complete 4 Movie Series DVD Set (4 discs)
- Bonus Glossy Art Print (3.5" x 5")



Image 1: Front packaging of the Halloweentown Complete 4 Movie Series Disney DVD Collection.

# + Bonus Art Card

## 3.5" x 5"



Image 2: The Halloweentown Complete 4 Movie Series Disney DVD Collection, showing the DVD case and the bonus art card.



Image 3: The bonus art card included with the DVD collection, depicting a castle silhouette under a starry, colorful sky. The card measures 3.5" x 5".

### 3. SETUP

---

To begin watching your Halloweentown DVD collection, follow these steps:

1. **Prepare your DVD Player:** Ensure your DVD player is properly connected to your television or display device and is powered on. Refer to your DVD player's instruction manual for specific connection details.
2. **Select a Disc:** Open the DVD case and carefully remove the desired Halloweentown movie disc by pressing down on the center hub and lifting the disc by its edges. Avoid touching the playback surface.
3. **Insert the Disc:** Open the disc tray of your DVD player and place the disc with the label side facing up. Close the disc tray.
4. **Select Input:** On your television, select the correct input source (e.g., HDMI 1, AV) that corresponds to your DVD player's connection.

### 4. OPERATING INSTRUCTIONS

---

Once the disc is loaded, the DVD player will typically display the movie's main menu. Use your DVD player's remote control to navigate:

- **Play Movie:** Select "Play Movie" or "Start" to begin watching the film.
- **Scene Selection:** Choose "Scene Selection" to jump to specific chapters or scenes within the movie.
- **Audio Options:** Access "Audio" or "Language" settings to change audio tracks (if available) or adjust volume.
- **Subtitles:** Select "Subtitles" or "Captions" to turn on or off subtitles, or choose a different language (English subtitles are available for these DVDs).
- **Special Features:** Explore "Special Features" for bonus content, if included on the disc.
- **Ejecting the Disc:** Press the "Eject" button on your DVD player or remote control to remove the disc when finished.

### 5. MAINTENANCE AND CARE

Proper care will extend the life of your DVD collection:

- **Handling Discs:** Always hold discs by their edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning Discs:** If a disc becomes dirty, gently wipe it with a soft, lint-free cloth from the center outwards. Do not use abrasive materials or harsh cleaning chemicals. Specialized DVD cleaning kits are available if needed.
- **Storage:** Store discs in their original case, away from direct sunlight, extreme temperatures, and high humidity. Keep them in a vertical position to prevent warping.
- **Avoid Scratches:** Do not stack discs without their cases, as this can lead to scratches.

## 6. TROUBLESHOOTING

If you encounter issues while playing your DVDs, consider the following:

Problem	Possible Cause	Solution
Disc does not play or load.	Disc inserted incorrectly, dirty disc, or incompatible DVD player.	Ensure disc is inserted label-side up. Clean the disc gently. Verify your DVD player supports standard DVD format.
Video or audio skipping/freezing.	Scratched or dirty disc.	Inspect the disc for scratches. Clean the disc thoroughly. If heavily scratched, the disc may be permanently damaged.
No picture or sound.	Incorrect TV input, loose cables, or DVD player issue.	Check your TV's input selection. Ensure all cables between the DVD player and TV are securely connected. Test with another DVD to rule out a player issue.

## 7. SPECIFICATIONS

- **Product Title:** Halloweentown Complete 4 Movie Series Disney DVD Collection
- **Model Number:** AW164
- **ASIN:** B07XKLSN38
- **Media Format:** DVD
- **Subtitles:** English
- **Package Dimensions:** 8.23 x 6.77 x 1.46 inches
- **Item Weight:** 7.16 ounces

## 8. WARRANTY AND SUPPORT

Specific warranty information for this DVD collection is not provided within this manual. For details regarding warranty, returns, or customer support, please refer to the retailer or the original manufacturer's official website where the product was purchased. You may also contact the seller directly for assistance.

For general inquiries about Disney products, visit the official Disney website: [www.disney.com](http://www.disney.com)



