

Hilax Centrifugal Juicer with LED Light and 2 Speed Mode

Hilax Centrifugal Juice Extractor Instruction Manual

Model: Centrifugal Juicer with LED Light and 2 Speed Mode

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the juicer is properly assembled and the locking arm is securely in place before operation. The appliance will not operate if not correctly assembled.
- Do not operate the juicer with a damaged cord or plug. If the appliance malfunctions or is damaged, contact customer support.
- Keep hands and utensils out of the feed chute during operation to prevent injury. Use the food pusher provided.
- Do not immerse the motor base in water or other liquids.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Avoid contact with moving parts.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not use the appliance outdoors.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
- Place the appliance on a firm, flat surface to prevent vibration and ensure stability.
- The juicer features an overload protection system that automatically shuts down the unit if it overheats. Allow the unit to cool down before resuming operation.

Hilax Centrifugal Juicer Extractor Machines

Large Capacity

2000ML

Pulp Collector

40cm / 15.75"



1100ML

Juice Container

30cm / 11.81"

20cm / 7.87"

Image: The juicer features a safety locking arm that must be engaged for operation, preventing accidental spills and ensuring user safety.

2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Hilax Centrifugal Juice Extractor before first use.

- Food Pusher
- Feed Chute
- Transparent Lid
- Stainless Steel Filter Basket
- Juicer Cover

- Pulp Container
- Motor Base with Control Dial
- Safety Locking Arm
- Juice Pitcher

High Juice Yield

304 Stainless Steel Blade and Precision Filter



Carrot 50%-65%



Orange 78%-87%



Cucumber 80%-88%



Celery 82%-87%

Image: An exploded view showing all detachable components of the juicer, including the food pusher, lid, filter basket, pulp container, motor base, and juice pitcher.

3. SETUP AND ASSEMBLY

Follow these steps to correctly assemble your juicer before use.

1. Place the motor base on a dry, stable, and flat surface.
2. Insert the juicer cover onto the motor base, ensuring it fits securely.
3. Place the stainless steel filter basket into the juicer cover.
4. Attach the transparent lid onto the juicer cover, aligning the spout with the juice outlet.
5. Secure the safety locking arm by lifting it and hooking it over the lid. The juicer will not operate unless the locking arm is in place.
6. Position the pulp container under the pulp outlet.
7. Place the juice pitcher under the juice spout.
8. Insert the food pusher into the feed chute.
9. Plug the power cord into a grounded electrical outlet.

Your browser does not support the video tag.

Video: This video demonstrates the step-by-step assembly process of the Hilax Centrifugal Juicer, showing how each component fits together securely before operation.

4. OPERATING INSTRUCTIONS

Prepare your fruits and vegetables and follow these steps for optimal juicing.

4.1 Fruit and Vegetable Preparation

- Wash all fruits and vegetables thoroughly.
- For fruits and vegetables with large seeds or hard pits (e.g., peaches, cherries, mangoes), remove them before juicing.
- The 3-inch wide feed chute can accommodate whole fruits like small apples or oranges. For larger items, cut them into pieces that fit comfortably into the chute.
- Peel citrus fruits (oranges, lemons, grapefruits) to avoid bitterness from the rind.



**Powerful 700W/
18000RPM Motor**



**Detachable for
Easy Cleaning**



**Non-Slip
Cooling Base**



**Over-Heating
Protection System**

Image: The 3-inch wide feed chute allows for whole fruits and vegetables, reducing preparation time. An apple is shown being placed into the chute.

4.2 Juicing Process

1. Ensure the juicer is properly assembled and plugged in.
2. Turn the control dial to the desired speed setting:
 - **"1" (Low Speed, 12000-15000 RPM):** Ideal for soft fruits and vegetables such as peeled oranges, tomatoes, strawberries, grapes, and melons.
 - **"2" (High Speed, 15000-18000 RPM):** Suitable for hard fruits and vegetables like carrots, celery, beets, kale, ginger, and apples.

Choosing the correct speed helps maximize juice extraction.

3. With the motor running, gradually feed the prepared fruits or vegetables into the feed chute.
4. Use the food pusher to gently guide the produce down the chute. Do not force the food pusher, as this can affect juice quality and potentially damage the motor.
5. The juice will flow into the juice pitcher, and the pulp will collect in the pulp container.
6. Once juicing is complete, turn the control dial to "0" (Stop) and unplug the appliance.

20S Quick Centrifugal Juicer with LED Lights



2 Speed Mode



"1" — Low Speed for Soft Fruits and Vegetables



"2" — High Speed for Hard Fruits and Vegetables

Image: Illustration of the two-speed control dial, indicating "1" for soft fruits like strawberries and oranges, and "2" for hard vegetables like carrots and apples.



Image: A diagram illustrating the high juice yield achieved by the 304 stainless steel blade and precision filter, with examples like carrot (50%-65%), orange (78%-87%), cucumber (80%-88%), and celery (82%-87%).

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your juicer.

1. Always unplug the juicer before cleaning.
2. Disassemble all removable parts: food pusher, lid, filter basket, juicer cover, pulp container, and juice pitcher.
3. Rinse all removable parts under running water immediately after use to prevent pulp from drying and sticking.
4. Use the provided cleaning brush to thoroughly clean the stainless steel filter basket. Pay special attention to the mesh to remove all pulp residue.
5. All detachable parts are dishwasher safe (top rack recommended).
6. Wipe the motor base with a damp cloth. Never immerse the motor base in water.

7. Ensure all parts are completely dry before reassembling or storing the juicer.

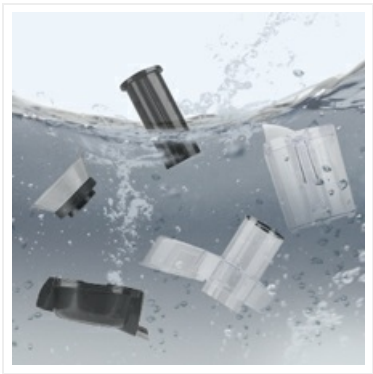


Image: The juicer's design allows for easy disassembly of components, facilitating thorough cleaning by hand or in a dishwasher.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in. Safety locking arm not engaged. Overload protection activated.	Ensure the power cord is securely plugged into a working outlet. Check that the safety locking arm is firmly locked into place over the lid. Unplug the unit, allow it to cool for 15-30 minutes, then try again. Reduce the load on the motor.
Low juice yield or wet pulp.	Incorrect speed setting. Feeding produce too quickly. Filter basket clogged.	Use speed "1" for soft produce and "2" for hard produce. Feed produce slowly and steadily. Clean the filter basket thoroughly.
Excessive vibration or noise.	Uneven placement. Filter basket not properly seated or damaged.	Place the juicer on a flat, stable surface. Check that the filter basket is correctly installed and not damaged. Replace if necessary.

7. SPECIFICATIONS

- **Brand:** Hilax
- **Model:** Centrifugal Juicer with LED Light and 2 Speed Mode
- **Motor Power:** 700W (Upgraded)
- **Speed Modes:** 2 (12000-15000 RPM for soft, 15000-18000 RPM for hard)
- **Feed Chute Size:** 3 inches (75mm)
- **Material:** Stainless Steel (Blade and Filter)
- **Pulp Collector Capacity:** 2000ML
- **Juice Container Capacity:** 1100ML
- **Product Dimensions:** 11.8"D x 7.87"W x 15.74"H
- **Voltage:** 120 Volts
- **Controller Type:** Button/Dial
- **Care Instructions:** Dishwasher Safe (detachable parts)

2 Sides Safety Locking Arm

No juice spilling and ensure the safety



Image: A visual representation of the juicer's dimensions, including the 2000ML pulp collector and 1100ML juice container.

8. WARRANTY AND SUPPORT

The Hilax Centrifugal Juice Extractor comes with a one-year quality service warranty.

For any issues such as unstable power supply, improper assembly, idling, or other operational concerns, please contact Hilax customer support. We can provide further instructions, including video guides, to assist you.

Refer to your purchase documentation or the official Hilax website for contact information.



