

[manuals.plus](#) /

› [SEIKO](#) /

› [Seiko QXH202ZLH Alder Wood Wall Clock with Dual Quarter Hour Chimes - Instruction Manual](#)

SEIKO QXH202ZLH

Seiko QXH202ZLH Alder Wood Wall Clock

INSTRUCTION MANUAL

Model: QXH202ZLH

1. INTRODUCTION

Thank you for choosing the Seiko QXH202ZLH Alder Wood Wall Clock. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new clock. Please read this manual thoroughly before use to ensure optimal performance and longevity of your timepiece.

2. PRODUCT FEATURES

- Classic Design:** Features a round wooden case with a rich brown wood grain finish and a cream clock face.
- Dual Chimes:** Offers a choice of two chime melodies, playing on the quarter hour.
- Hourly Strikes:** Follows the hourly chime with corresponding strikes.
- Automatic Chime Silencer:** Automatically silences chimes between 11 PM and 6 AM.
- Volume Control:** Adjustable volume for the chimes.
- Clear Display:** Features Arabic numerals and a separate minute track for easy readability.
- Quiet Sweep Second Hand:** Ensures silent operation without a ticking sound.
- Durable Construction:** Equipped with crystal glass for protection.

3. SETUP

3.1 Unpacking

Carefully remove the clock from its packaging. Inspect the clock for any signs of damage. Retain the packaging for future transport or storage.

3.2 Battery Installation

The clock requires one (1) C battery (included). To install the battery:

- Locate the battery compartment on the back of the clock.
- Insert one C battery, ensuring the polarity (+ and -) matches the indicators inside the compartment.

Note: For optimal performance, use a high-quality alkaline battery. Replace the battery annually or when the clock's performance diminishes.

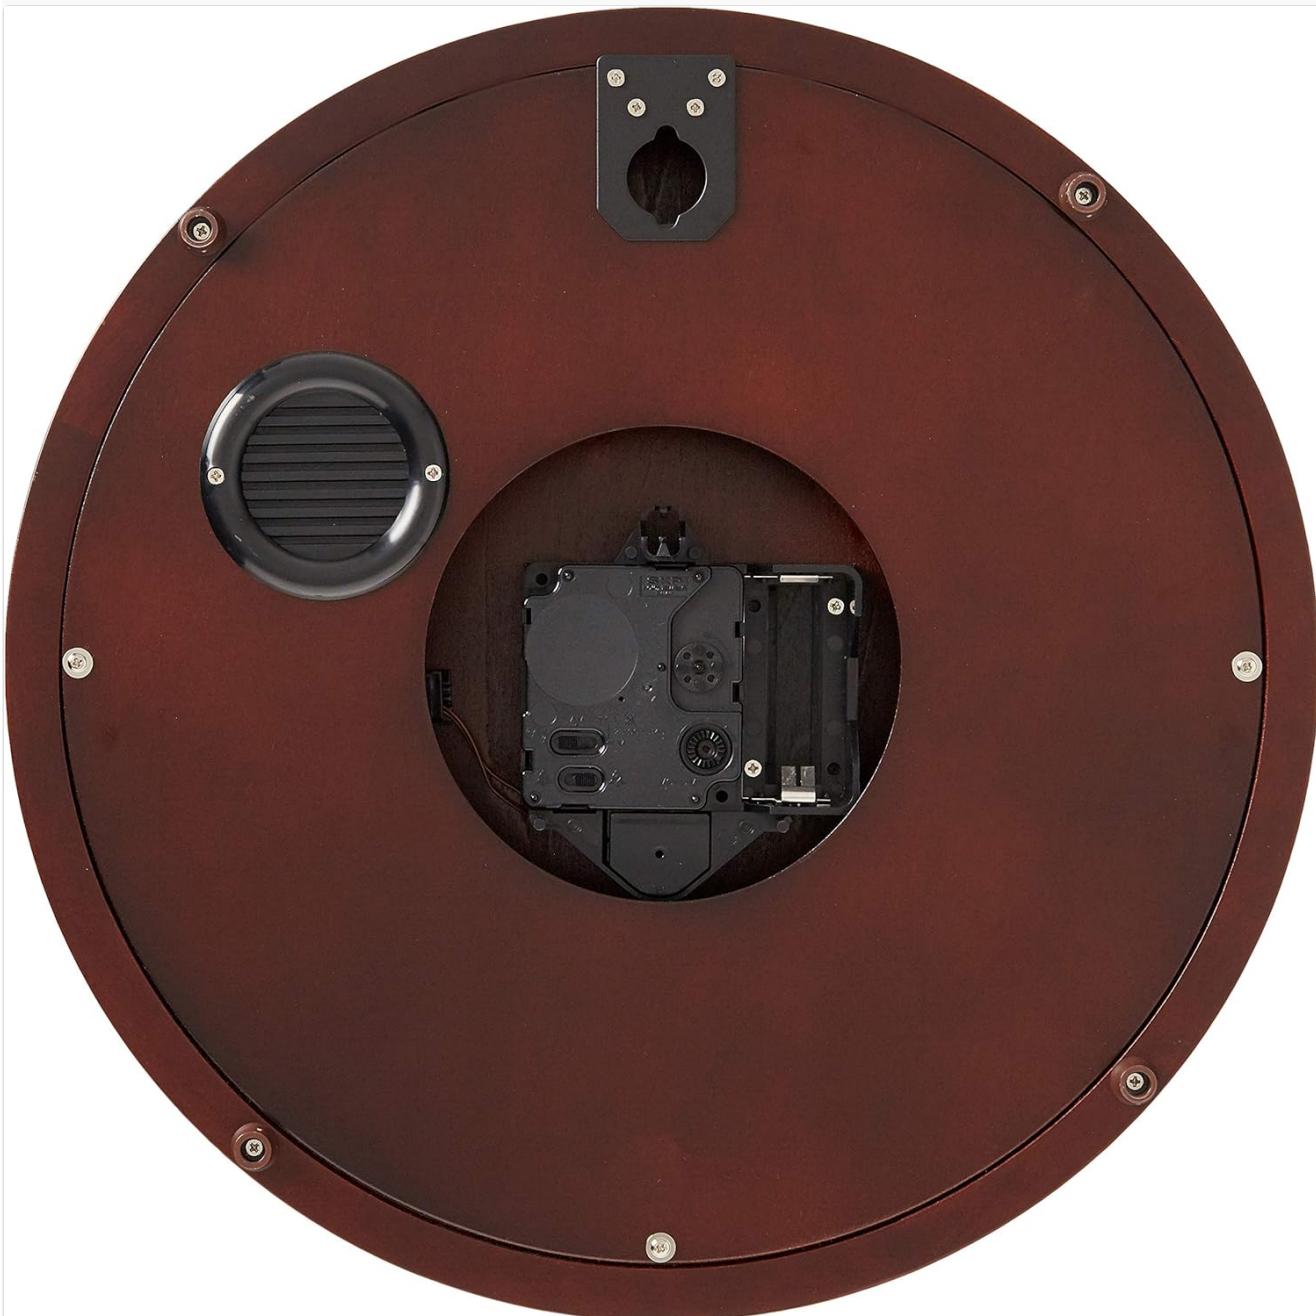


Image: Rear view of the clock, highlighting the battery compartment and wall mounting slot.

3.3 Setting the Time

To set the correct time:

1. Locate the time setting knob on the back of the clock, usually near the battery compartment.
2. Turn the knob clockwise to advance the hands to the correct time.
3. Ensure the minute hand is aligned with the minute markers for precise timekeeping.

3.4 Mounting the Clock

The clock is designed for easy wall mounting:

1. Choose a suitable location on a wall, ensuring it is sturdy enough to support the clock's weight (approximately 2.76 pounds).
2. Install a screw or hook into the wall at the desired height.

3. Align the keyhole slot on the back of the clock with the installed screw/hook and carefully hang the clock.



Image: The Seiko QXH202ZLH clock displayed in a home environment.

4. OPERATION

4.1 Timekeeping

Once the battery is installed and the time is set, the clock will begin accurate timekeeping with its quiet sweep second hand, providing a silent environment.

4.2 Chime Function

This clock features dual chimes that play on the quarter hour, with hourly strikes following the full hourly chime. You can select your preferred chime melody using the chime selection switch located on the back of the clock.

4.3 Automatic Chime Silencer

The clock is equipped with an automatic chime silencer that prevents chimes from sounding between 11 PM and 6 AM, ensuring undisturbed sleep.

4.4 Volume Control

Adjust the chime volume to your preference using the volume control dial located on the back of the clock. Turn the dial to increase or decrease the sound level.

Your browser does not support the video tag.

Video: A brief product overview demonstrating the clock's features and design.

5. MAINTENANCE

5.1 Cleaning

To maintain the appearance of your clock:

- Wipe the wooden case with a soft, dry cloth.
- For the crystal glass, use a soft, lint-free cloth and a mild glass cleaner if necessary. Avoid abrasive cleaners.
- Do not use harsh chemicals or solvents, as these may damage the finish.

5.2 Battery Replacement

Replace the C battery annually or immediately if the clock stops running or the chimes become weak or inconsistent. Follow the battery installation steps in Section 3.2.

6. TROUBLESHOOTING

- **Clock not running:** Check if the battery is inserted correctly with the correct polarity. Replace the battery if it is old or depleted.
- **Chimes not sounding:** Ensure the chime volume is not set to minimum or off. Verify the battery is fresh. The automatic chime silencer may be active if it's between 11 PM and 6 AM.
- **Incorrect time:** Adjust the time using the setting knob on the back of the clock.
- **Irregular chimes:** This could indicate a low battery. Replace the C battery.

If problems persist after following these steps, please contact Seiko customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	SEIKO
Model Number	QXH202ZLH
Material	Alder Wood, Crystal Glass
Color	Brown (Wood Grain Finish)
Display Type	Analog with Arabic Numerals
Chime Type	Dual Quarter Hour Chimes, Hourly Strikes
Special Features	Automatic Chime Silencer (11 PM - 6 AM), Volume Control, Quiet Sweep Second Hand
Power Source	Battery Powered

Feature	Detail
Batteries Required	1 C battery (included)
Product Dimensions	12.3"W x 12.3"H x 2.4"D (approx.)
Item Weight	2.76 pounds (1250 Grams)
Mounting Type	Wall Mount

8. WARRANTY AND SUPPORT

This Seiko QXH202ZLH Alder Wood Wall Clock comes with a **1-year manufacturer warranty**. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please refer to the official Seiko website or contact their customer service department.

Online Resources: For additional information and support, visit the [SEIKO Store on Amazon](#).

© 2026 SEIKO. All rights reserved.