

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Satisfyer](#) /

› [Satisfyer Sparkling Darling Bullet Vibrator User Manual](#)

Satisfyer 4217

Satisfyer Sparkling Darling Bullet Vibrator User Manual

Model: 4217

1. PRODUCT OVERVIEW

The Satisfyer Sparkling Darling is a compact bullet vibrator designed for targeted stimulation. It features a sleek design and is made from body-friendly silicone. The device offers multiple vibration programs and is waterproof for versatile use and easy cleaning.



Image 1.1: The Satisfyer Sparkling Darling Bullet Vibrator with its protective cap.



Image 1.2: Key features of the Sparkling Darling, including its smooth silicone surface, rounded tip, and control buttons.

2. SAFETY INFORMATION

- Read all instructions before first use and retain for future reference.
- This device is intended for personal use only.
- Do not use if the device appears damaged or if the silicone is torn.
- Clean the device thoroughly before and after each use.
- Use only water-based lubricants with this product. Silicone-based lubricants may damage the silicone material.
- Keep out of reach of children.
- If you experience any discomfort or irritation, discontinue use immediately.
- The device is waterproof (IPX7), meaning it can be submerged in water up to 1 meter for 30 minutes. Ensure the charging port is dry before charging.

3. PACKAGE CONTENTS

Your Satisfyer Sparkling Darling package should contain the following items:

- 1 x Satisfyer Sparkling Darling Bullet Vibrator
- 1 x Hygienic Cap
- 1 x Magnetic USB Charging Cable
- 1 x User Manual (this document)

4. SETUP AND CHARGING

Initial Charge

Before first use, fully charge your Satisfyer Sparkling Darling. The device is powered by a Lithium Polymer battery.

1. Connect the magnetic end of the USB charging cable to the charging contacts on the device. Ensure a secure connection.
2. Plug the USB-A end of the cable into a standard USB power adapter (not included) or a computer's USB port.
3. The device will indicate charging status (e.g., an LED light may blink or illuminate steadily).
4. A full charge typically takes less than one hour. Disconnect the charger once fully charged.



Image 4.1: The magnetic USB charging cable.

5. OPERATING INSTRUCTIONS

Power On/Off

To turn the device on or off, press and hold the '+' button for approximately 2-3 seconds.

Adjusting Vibration Settings

The Satisfyer Sparkling Darling offers 15 vibration programs, combining 10 patterns and 5 speeds.

- Press the '+' button briefly to increase the vibration intensity or cycle through patterns.
- Press the '-' button briefly to decrease the vibration intensity or cycle through patterns.

PRODUCT FEATURES



Image 5.1: Close-up view of the '+' and '-' control buttons on the device.

Usage with Cap

The device can be used with or without its hygienic cap, offering versatility in application.

Video 5.2: Official product video demonstrating the features and use of the Satisfyer Sparkling Darling, including its versatile use and waterproof design.

6. CLEANING AND MAINTENANCE

Cleaning

To ensure hygiene and prolong the life of your device:

1. Always clean the device before its first use and after each subsequent use.
2. Wash the device with warm water and a mild, antibacterial soap or a specialized toy cleaner.
3. Rinse thoroughly with clean water to remove all soap residue.
4. Dry the device completely with a lint-free cloth before storing.

Storage

Store the Satisfyer Sparkling Darling in a clean, dry, and dust-free environment, away from direct sunlight and extreme temperatures. Keep the hygienic cap on when not in use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or incorrect power-on procedure.	Ensure the device is fully charged. Press and hold the '+' button for 2-3 seconds to power on.
Device does not charge.	Magnetic cable not properly connected or faulty cable/charger.	Ensure the magnetic charging cable is securely attached to the device's charging contacts. Try a different USB power source.
Vibrations are weak or inconsistent.	Low battery.	Recharge the device fully.

8. SPECIFICATIONS

Feature	Detail
Model Number	4217
Product Dimensions (L x W x H)	6.5 x 2.56 x 1.81 inches
Weight	7.05 ounces
Material	Silicone
Waterproof Rating	IPX7
Battery Type	1 Lithium Polymer (included)
Vibration Programs	15 (10 patterns, 5 speeds)

9. WARRANTY AND SUPPORT

Warranty

The Satisfyer Sparkling Darling comes with a 15-year product protection warranty, ensuring long-lasting satisfaction and peace of mind.

Customer Support

For any questions, technical assistance, or warranty claims, please contact Satisfyer customer support through their official website or the retailer where the product was purchased. Please have your proof of purchase and model number (4217) ready when contacting support.