

[Manuals.plus](#) /

> [COLOR TREE](#) /

> COLOR TREE Remote Controller User Manual for Daikin Air Conditioners (Model: SKU01741)

COLOR TREE SKU01741

COLOR TREE Remote Controller User Manual

For Daikin Air Conditioners (Model: SKU01741)

INTRODUCTION

This manual provides instructions for the proper use and maintenance of your COLOR TREE remote controller, designed for various Daikin air conditioner models. Please read this manual thoroughly before operating the device.

Compatible Daikin Air Conditioner Models: BRC4C65, BRC7EB518, BRC7E618, BRC7E619, BRC4C66, BRC7F530W, BRC7FA532F, BRC7C58, BRC7G53, BRC7C52, BRC4C61, BRC4C62, BRC7G53, BRC7C510, BRC7EB530W, BRC7GA53, BRC79A53, BRC79A56, BRC7C59, BRC7C58, BRC7CA52, BRC7EA618, BRC7C62, BRC7E530, BRC7E530W, BRC7C528, BRC7F528, BRC7EA66, BRC7EA63W, BRC7F532F, BRC4C651, BRC1D528, BRC7E531.

PACKAGE CONTENTS

- 1 x COLOR TREE Remote Controller (Model: SKU01741)

Note: 2 AAA batteries are required and are not included in the package.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote controller.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Important: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

OPERATING INSTRUCTIONS

This remote controller is pre-programmed for compatible Daikin air conditioner models. No additional setup or pairing is typically required after battery installation.

Remote Controller Layout



Figure 1: Front view of the remote controller. Displays the LCD screen, ON/OFF button, UP/DOWN temperature controls, and FAN button.

The remote controller features an LCD screen displaying current settings and various buttons for controlling your air conditioner. Key buttons include:

- **ON/OFF Button:** Powers the air conditioner on or off.
- **UP/DOWN Buttons:** Adjust the temperature setting.
- **FAN Button:** Cycles through fan speed settings.
- **MODE Button:** (If present, often under a slide cover) Selects operating modes (e.g., Cool, Heat, Dry, Fan).
- **SWING Button:** (If present) Controls the louver swing function.
- **TIMER Button:** (If present) Sets the on/off timer.

Basic Operation

1. **Power On/Off:** Press the **ON/OFF** button to turn the air conditioner on or off.
2. **Adjusting Temperature:** Use the **UP** or **DOWN** arrow buttons to set your desired temperature. The current temperature will be displayed on the LCD screen.
3. **Changing Fan Speed:** Press the **FAN** button repeatedly to cycle through available fan speeds (e.g., Auto, Low, Medium, High).
4. **Selecting Operating Mode:** If your remote has a **MODE** button (often under a sliding cover), press it to select the desired operating mode (e.g., Cool, Heat, Dry, Fan).



Figure 2: Remote controller with the sliding cover open, showing advanced function buttons and internal labels.

Some models may feature a sliding cover to reveal additional functions such as MODE, SWING, and TIMER settings. Refer to the markings on your specific remote for detailed button functions.

MAINTENANCE

Cleaning the Remote Controller

- Wipe the remote controller with a soft, dry cloth.
- Do not use liquid cleaners, abrasive cleaners, or chemical sprays, as these can damage the surface or internal components.

Battery Care

- Remove batteries if the remote controller will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote not controlling AC unit	Obstruction between remote and AC unit sensor. Remote is too far from AC unit. AC unit sensor is dirty or blocked.	Ensure a clear line of sight to the AC unit. Move closer to the AC unit. Clean the AC unit's infrared receiver.

Problem	Possible Cause	Solution
LCD screen is dim or blank	Low battery power.	Replace batteries.

SPECIFICATIONS

- **Brand:** COLOR TREE
- **Model Number:** SKU01741
- **Compatible Devices:** Daikin Air Conditioners (Specific models listed in Introduction)
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Features:** Infrared, Pre-Programmed
- **Color:** Black (Remote body is typically white/light grey with black accents)

WARRANTY AND SUPPORT

This product is typically covered by the retailer's standard return policy. For specific warranty information or technical support, please refer to the seller or the original purchase documentation.

For further assistance, please contact your point of purchase.