

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal EasyFry EY101815 Air Fryer User Manual

Tefal EY101815

Tefal EasyFry EY101815 Air Fryer User Manual

Model: EY101815

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Tefal EasyFry EY101815 Air Fryer. Please read all instructions carefully before first use and retain this manual for future reference.



Figure 1: Front view of the Tefal EasyFry EY101815 Air Fryer.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Do not immerse the appliance, cord, or plug in water or other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.

- Supervise children closely when the appliance is in use.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Do not place anything on top of the appliance.
- During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- Always ensure the basket is properly inserted before operating.

SETUP AND FIRST USE

Unpacking

Carefully remove all packaging materials, stickers, and labels from the appliance. Ensure all components are present: main unit, cooking basket, and removable grid.

Cleaning Before First Use

Before using for the first time, clean the cooking basket and removable grid with hot water, dish soap, and a non-abrasive sponge. The cooking basket and grid are dishwasher-safe. Wipe the inside and outside of the main unit with a damp cloth. Do not immerse the main unit in water.

Placement

Place the appliance on a stable, horizontal, and level surface. Ensure there is adequate ventilation around the unit.



Figure 2: The cooking basket and removable grid of the air fryer.

OPERATING INSTRUCTIONS

The Tefal EasyFry EY101815 features Air Pulse technology for hot air circulation, ensuring even cooking.

1. **Preparation:** Place the removable grid inside the cooking basket. Place your ingredients into the cooking basket. Do not exceed the MAX fill line.
2. **Insert Basket:** Slide the cooking basket back into the main unit until it clicks securely into place.

3. **Set Temperature:** Turn the temperature control dial (located on top) to your desired cooking temperature. The appliance supports temperatures up to 200°C (392°F).



Figure 3: Temperature and timer controls.

4. **Set Timer:** Turn the timer dial (also on top) to the required cooking time. The timer can be set for up to 30 minutes. The appliance will automatically switch off and emit an acoustic alarm when the timer reaches zero.
5. **Cooking Process:** The appliance will begin heating. The hot air circulation will cook your food. For best results with certain foods, shake the basket halfway through the cooking time. To do this, carefully pull out the basket, shake the contents, and then slide the basket back in. The appliance will resume cooking.



Figure 4: Air Pulse technology for hot air flow.

6. **Completion:** When the timer rings, carefully pull out the basket and empty the cooked food. Use tongs to remove food, especially if the grid is hot.
7. **Switching Off:** The appliance automatically switches off when the timer completes. If you need to stop cooking before the timer finishes, simply turn the timer dial back to zero or unplug the appliance.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Basket and Grid:** The cooking basket and removable grid have a non-stick coating and are dishwasher-safe. Alternatively, they can be cleaned with hot water, dish soap, and a non-abrasive sponge. Do not use metal utensils or abrasive cleaning materials, as this may damage the non-stick coating.
3. **Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn residue, use a mild detergent.
4. **Exterior:** Clean the exterior of the appliance with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not work.	The appliance is not plugged in. The timer is not set.	Plug the main plug into an earthed wall socket. Turn the timer dial to the required cooking time.
Food is not cooked evenly.	Too much food in the basket. Temperature too low.	Reduce the amount of food per batch. Increase the temperature. Shake the basket halfway through cooking.
White smoke comes out of the appliance.	Fat residues from previous use.	Clean the basket and grid thoroughly after each use.
Appliance smells of burning plastic/rubber.	New appliance odor. Rubber stoppers on grid not removed.	This is normal for first few uses. Ensure all packaging materials, especially rubber stoppers on the grid, are removed before use.

If the problem persists after trying these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

Brand:	Tefal
Model Name:	EasyFry EY1018
Model Number:	EY101815
Product Dimensions:	10.63"D x 14.21"W x 12.76"H
Color:	Black
Capacity:	1.6 Liters
Material:	Metal (Inner: Aluminum, Outer: Plastic)
Output Wattage:	1030 Watts
Wattage (Input):	1400 Watts
Voltage:	230 Volts
Control Method:	Manual Dials (Temperature, Timer)
Max Temperature Setting:	200 Degrees Celsius
Non-stick Coating:	Yes
Dishwasher Safe	
Parts:	Basket and Removable Grid

Item Weight: 1.74 Kilograms (3.83 pounds)

WARRANTY INFORMATION

Tefal products are manufactured to high quality standards. This product comes with a standard manufacturer's warranty covering defects in materials and workmanship under normal use. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of the warranty applicable to your region. Retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any questions, technical assistance, or service requests not covered in this manual, please contact Tefal customer support.

Online Support: Visit the official Tefal website for FAQs and support resources.

Contact Information: Refer to the contact details provided in your product packaging or on the official Tefal website for your specific country.

When contacting support, please have your product model number (EY101815) and purchase date ready.

© 2024 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

