

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Canon](#) /
- › [Canon EOS M200 Digital Camera Instruction Manual](#)

Canon EOS M200 (3700C009)

Canon EOS M200 Digital Camera Instruction Manual

Your comprehensive guide to operating and maintaining your Canon EOS M200 Mirrorless Digital Camera.

PRODUCT OVERVIEW

The Canon EOS M200 is a compact mirrorless digital camera designed for high-quality imaging and video recording. It features a 24.1 Megapixel APS-C CMOS sensor, Dual Pixel CMOS AF with Eye Detection AF, and supports 4K video recording. Its user-friendly interface, including a 3.0-inch tilt-type touch panel LCD, makes it suitable for both beginners and experienced users. Built-in Wi-Fi and Bluetooth technologies enable seamless connectivity and image transfer.



Figure 1: The Canon EOS M200 camera with the EF-M 15-45mm lens attached, showing the tiltable LCD screen and a detached lens cap.

SETUP

1. Unboxing and Initial Inspection

Upon opening the package, ensure all components are present and undamaged. The standard package includes the Canon EOS M200 camera body and the EF-M 15-45mm lens.

- Canon EOS M200 Camera Body
- EF-M 15-45mm f/3.5-6.3 IS STM Lens
- Battery Pack LP-E12
- Battery Charger LC-E12
- Neck Strap EM-200DB
- Lens Cap E-49
- Camera Cover R-F-4
- User Manual (this document)

2. Attaching the Lens

1. Remove the camera body cap and the rear lens cap.
2. Align the white index mark on the lens with the white index mark on the camera body.
3. Insert the lens into the camera mount and rotate it clockwise until it clicks into place.



Figure 2: The Canon EOS M200 camera body, illustrating the lens mount where the EF-M lens attaches.

3. Inserting the Battery and Memory Card

1. Open the battery/card compartment cover on the bottom of the camera.
2. Insert the battery pack with the electrical contacts facing the correct direction until it locks into place.
3. Insert a compatible SD, SDHC, or SDXC memory card into the card slot until it clicks. Ensure the card is facing the correct way.
4. Close the compartment cover securely.



Figure 3: Side view of the Canon EOS M200, highlighting the compartment for the battery and memory card.

4. Charging the Battery

Use the supplied battery charger to charge the battery. The indicator lamp on the charger will show the charging status.

- **Orange:** Charging
- **Green:** Fully Charged

OPERATING INSTRUCTIONS

1. Powering On/Off

To power on the camera, slide the power switch to the **ON** position. To power off, slide it to **OFF**.

2. Basic Shooting Modes

The EOS M200 offers various shooting modes accessible via the mode dial on top of the camera:

- **Scene Intelligent Auto (A+):** Fully automatic mode for easy shooting.
- **Creative Assist:** Adjust settings like brightness, background blur, and color tone with a visual guide.
- **Self-Portrait Mode:** Optimized for selfies, utilizing the 180° tiltable LCD.
- **Movie Mode:** For recording videos, including 4K and vertical video.
- **Manual (M), Aperture-priority (Av), Shutter-priority (Tv), Program AE (P):** Advanced modes for greater control.



Figure 4: Front view of the Canon EOS M200, showing the lens and camera body.

3. Using the Touch Panel LCD

The 3.0-inch LCD screen is touch-sensitive, allowing for intuitive operation:

- **Touch Shutter:** Tap the screen to focus and take a picture.
- **Menu Navigation:** Tap icons and options to navigate menus.
- **Playback:** Swipe to browse images, pinch-to-zoom.
- **Tilt Function:** The screen can be tilted up to 180° for self-portraits and vlogging.



Figure 5: Rear view of the Canon EOS M200, displaying the LCD screen and physical controls.

4. Wi-Fi and Bluetooth Connectivity

The camera features built-in Wi-Fi and Bluetooth for easy sharing and remote control:

- **Canon Camera Connect App:** Download the app to your smartphone or tablet.
- **Image Transfer:** Wirelessly transfer photos and videos to your smart device.
- **Remote Live View Shooting:** Control the camera and capture images remotely from your device.
- **Auto Image Transfer:** Configure the camera to automatically send images to your device after shooting.

MAINTENANCE

1. Cleaning the Camera and Lens

- Use a soft, lint-free cloth to wipe the camera body.
- For the lens, use a lens brush to remove dust, then a lens cleaning solution and a microfiber cloth.
- Avoid touching the lens surface directly with your fingers.
- Keep the lens cap on when not in use to protect the front element.



Figure 6: The Canon EOS M200 with the lens cap in place, emphasizing lens protection.

2. Battery Care

- Store batteries in a cool, dry place.
- Do not expose batteries to extreme temperatures.
- Charge batteries fully before extended storage.

3. Storage

When storing the camera for extended periods, remove the battery and memory card. Store the camera in a dry, well-ventilated area, preferably in a camera bag with desiccant packets to prevent mold and mildew.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge the battery fully and ensure it is inserted correctly.
Images are blurry.	Incorrect focus, camera shake, or dirty lens.	Ensure proper focus, use a faster shutter speed or tripod, clean the lens.
Memory card error.	Card is full, corrupted, or incompatible.	Delete unnecessary files, format the card (backup data first), or try a different compatible card.
Wi-Fi/Bluetooth connection issues.	Incorrect settings, interference, or app issues.	Check camera and device settings, restart both, ensure Canon Camera Connect app is updated.

SPECIFICATIONS

Feature	Detail
Model Number	3700C009
Sensor Type	24.1 Megapixel APS-C CMOS
Autofocus System	Dual Pixel CMOS AF with Eye Detection AF
Video Recording	4K UHD (24p/25p), Full HD (60p/50p), Vertical Video Support
LCD Screen	3.0-inch Touch Panel LCD, 180° Tilttable
Connectivity	Built-in Wi-Fi, Bluetooth
Image Stabilization	Optical (with compatible lenses)
Dimensions (W x H x D)	1.4 x 4.3 x 2.6 inches (approx.)
Weight (Body only)	1.19 pounds (approx.)
Supported File Format	JPEG, RAW, MP4

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Canon website. Canon provides customer support for product inquiries, technical assistance, and service requests.

Online Resources:

- Official Canon Support Website: www.usa.canon.com/support
- Product Registration: Register your product online to receive updates and support.

Contact Information:

Please refer to the Canon website for the most current contact details for customer service and technical support in your region.