Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Progress Lighting /
- > Progress Lighting Crofton 3-Light Chandelier Instruction Manual

Progress Lighting Crofton B07XM9JMTR

Progress Lighting Crofton 3-Light Chandelier Instruction Manual

Model: Crofton B07XM9JMTR

PRODUCT OVERVIEW



Image: The Progress Lighting Crofton 3-Light Chandelier, featuring a rustic pewter finish, brushed nickel accents, and three seeded glass shades housing exposed bulbs. The fixture is suspended by a chain.

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Progress Lighting Crofton 3-Light Chandelier. Please read all instructions carefully before beginning installation and retain this manual for future reference.

SAFETY INFORMATION

WARNING: Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing. Consult a qualified electrician if you are unsure about electrical wiring.

• Ensure all electrical connections comply with local codes and ordinances, as well as the National Electric

Code (NEC).

- Do not install this fixture in wet locations. Suitable for dry or damp locations only.
- Use only the specified bulb type and wattage. Exceeding maximum wattage may cause overheating.
- Handle glass components with care to prevent breakage.
- Keep flammable materials away from the light fixture when in operation.

PACKAGE CONTENTS

Verify that all components listed below are present before beginning installation. If any parts are missing or damaged, do not attempt to assemble or install the product. Contact customer service for assistance.

- Chandelier Frame Assembly (Rustic Pewter/Brushed Nickel)
- Seeded Glass Shades (3)
- Mounting Hardware Kit (includes mounting strap, screws, wire nuts)
- · Canopy and Collar Ring
- · Chain Assembly
- Light Bulbs (3, if included with your specific package)

SETUP AND INSTALLATION

Professional installation is recommended for optimal safety and performance. Follow these general steps for installation:

- 1. **Turn Off Power:** Locate the circuit breaker or fuse box that supplies power to the fixture location. Turn off the power completely before proceeding.
- 2. **Prepare Mounting:** Secure the mounting strap to the outlet box using the provided screws. Ensure the mounting strap is firmly attached.
- 3. **Adjust Chain Length:** Determine the desired hanging height for your chandelier. Open a chain link to remove excess chain, if necessary. Thread the fixture wires through the chain and canopy.
- 4. Connect Wiring: Carefully connect the fixture's electrical wires to the corresponding house wires using the provided wire nuts. Connect the bare copper ground wire from the fixture to the house ground wire. Connect the white fixture wire to the white (neutral) house wire. Connect the black fixture wire to the black (hot) house wire. Ensure all connections are secure.
- 5. **Secure Canopy:** Tuck the connected wires neatly into the outlet box. Raise the canopy to the ceiling and secure it to the mounting strap using the collar ring.
- 6. **Install Glass Shades and Bulbs:** Carefully attach the seeded glass shades to the fixture. Insert the recommended light bulbs (not exceeding maximum wattage) into the sockets.
- 7. **Restore Power:** Once installation is complete and all components are secure, restore power at the circuit breaker or fuse box.

OPERATING INSTRUCTIONS

This chandelier is designed for easy operation.

• Wall Switch: The primary method of operation is via a standard wall switch connected to the fixture's power supply. Flip the switch to turn the chandelier on or off.

Remote Control: This fixture supports remote control operation. If a remote control unit was included or
purchased separately, refer to its specific instructions for pairing and functionality. Typically, the remote
allows for on/off control and potentially dimming functions, depending on the remote and bulb
compatibility.

MAINTENANCE

Regular maintenance ensures the longevity and appearance of your chandelier.

- Cleaning: To clean the fixture, turn off the power and allow it to cool. Wipe the metal surfaces with a soft, dry cloth. For glass shades, use a mild glass cleaner on a soft cloth, then wipe dry. Avoid abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** Turn off the power and allow bulbs to cool completely before replacing. Unscrew the old bulb and screw in a new bulb of the same type and wattage. Refer to the specifications section for recommended bulb types.

TROUBLESHOOTING

If your chandelier is not functioning correctly, consult the following common issues:

Problem	Possible Cause	Solution
Light does not turn on	No power to fixture Loose wiring connection Faulty bulb	Check circuit breaker/fuse Verify all wire connections are secure (power off) Replace bulb
Lights flicker	Loose bulb Incompatible dimmer switch Loose wiring	Tighten bulb Ensure dimmer is compatible with bulbs Check wiring connections (power off)
Remote control not working	Remote batteries dead Remote not paired Obstruction	Replace batteries Refer to remote's pairing instructions Ensure clear line of sight to fixture's receiver

If these steps do not resolve the issue, contact a qualified electrician or customer support.

SPECIFICATIONS

• Brand: Progress Lighting

• Model: Crofton (B07XM9JMTR)

• Finish Type: Brushed Nickel, Rustic Pewter

• Number of Light Sources: 3

Light Fixture Form: Chandelier

• Power Source: Corded Electric

• Control Method: Remote

• Product Dimensions: 20 x 12 x 17 inches

• Item Weight: 10.53 pounds

• UPC: 785247218356

• Mounting Type: Ceiling Mount

• Shade Color: Clear (Seeded Glass)

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Progress Lighting customer service. Keep your purchase receipt as proof of purchase for any warranty claims.

Contact Information: Refer to the Progress Lighting official website or product packaging for the most current customer service contact details.

© 2023 Progress Lighting. All rights reserved.

Related Documents - Crofton B07XM9JMTR



 
Progress Lighting Riley P400209-031 5-Light Black Chandelier - Specifications and Overview

Detailed specifications, features, and product overview for the Progress Lighting Riley P400209-031 5-light black chandelier with clear glass shades. Includes dimensions, electrical, mounting, and warranty information.



Progress Lighting Hartwick P710087-009 Brushed Nickel Wall Sconce

Detailed specifications for the Progress Lighting Hartwick P710087-009 wall sconce, featuring a brushed nickel finish, etched opal glass, ADA compliance, and suitability for modern interiors. Includes dimensions, electrical, and mounting details.



Progress Lighting P400395 6-Light Chandelier Assembly Instructions

Comprehensive assembly and installation guide for the Progress Lighting P400395 6-Light Chandelier. Features package contents, hardware details, safety precautions, and step-by-step installation procedures.



 
Progress Lighting Atwell Pendant Light - P500284-109

Discover the Progress Lighting Atwell pendant light (P500284-109) in Brushed Bronze. This statement-making fixture features a unique blend of circular and architectural designs with clear globe shades, ideal for foyers, kitchens, and dining rooms in mid-century modern, modern, contemporary, or luxury settings. It uses two 60W max. E12 base bulbs and is fully dimmable.



Progress Lighting P400345/P400349 3-Light Chandelier Installation Guide

Step-by-step installation instructions for the Progress Lighting P400345/P400349 3-Light Chandelier/Convertible fixture. Includes package contents, hardware, safety precautions, care, and assembly steps for ceiling and hanging installations.



Progress Lighting P400391 & P400392 Chandelier Installation and Assembly Guide

Detailed installation and assembly instructions for Progress Lighting P400391 (5-Light Chandelier) and P400392 (6-Light Chandelier). Includes safety information, parts list, hardware details, and step-by-step guidance.