

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CHACON](#) /

› [CHACON 54671 Mini Remote Control Smart Plugs User Manual](#)

## CHACON 54671

# CHACON 54671 Mini Remote Control Smart Plugs User Manual

Model: 54671 | Brand: CHACON

## INTRODUCTION

Welcome to the user manual for your CHACON 54671 Mini Remote Control Smart Plugs. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

## PACKAGE CONTENTS

- 4 x CHACON Mini Remote Control Plugs
- 1 x Remote Control (with 1 CR2032 battery included)
- 1 x User Manual (this document)



Image: The CHACON set includes four mini remote control plugs and one remote control unit.

## IMPORTANT SAFETY INFORMATION

- For indoor use only.
- Do not exceed the maximum load of 2300W.

- Ensure the plugs are fully inserted into the wall socket.
- Do not immerse in water or expose to excessive moisture.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the device.

## SETUP AND PAIRING

Your CHACON Mini Remote Control Plugs are pre-paired from the factory. If re-pairing is necessary or if you wish to change the assigned channel, follow these steps:

1. Plug the mini remote control plug into a wall socket. The LED indicator on the plug will flash.
2. Within 6 seconds of plugging in, press the desired "ON" button (1, 2, 3, or 4) on the remote control.
3. The LED indicator on the plug will stop flashing and remain lit for a moment, then turn off, indicating successful pairing.
4. Repeat for each plug and desired remote control channel.



Image: A single CHACON mini plug shown next to the remote control, illustrating the components involved in the pairing process.

## OPERATION

The remote control allows you to switch connected devices ON and OFF wirelessly.

### Using the Remote Control

- Each pair of "ON" and "OFF" buttons (1-4) corresponds to a specific plug.
- To turn a device ON: Press the corresponding "ON" button (e.g., "1 ON").
- To turn a device OFF: Press the corresponding "OFF" button (e.g., "1 OFF").

### Manual Override

Each plug has a manual button on its side. Pressing this button will toggle the power state (ON/OFF) of the connected device.



Image: Close-up of the CHACON remote control, showing the numbered ON/OFF buttons.

## MAINTENANCE

---

### Cleaning

Wipe the plugs and remote control with a dry, soft cloth. Do not use abrasive cleaners or solvents.

### Remote Control Battery Replacement

The remote control uses one CR2032 battery.

1. Locate the battery compartment on the back of the remote control.
2. Open the compartment using a small screwdriver or coin.
3. Remove the old battery and insert a new CR2032 battery, ensuring correct polarity (+/-).
4. Close the battery compartment securely.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Plug does not respond to remote.	Not paired correctly.	Re-pair the plug with the remote control (see Setup section).
Plug does not respond to remote.	Remote control battery is low or dead.	Replace the CR2032 battery in the remote control.
Plug does not respond to remote.	Obstruction or distance.	Ensure the remote is within the 30m range and there are no major obstructions.

Problem	Possible Cause	Solution
Device connected to plug does not turn on.	Device is faulty or switched off manually.	Check the device's power switch and ensure it is functioning correctly.
Plug LED does not light up.	No power to the wall socket.	Check the wall socket with another device.



Image: A CHACON mini plug inserted into a wall socket, demonstrating typical installation.

## TECHNICAL SPECIFICATIONS

**Brand:** CHACON

**Model Number:** 54671

**Color:** White

**Dimensions (L x W x H):** 7 x 6 x 6 cm

**Weight:** 470 g (total for set)

**Material:** Plastic

**Radio Frequency:** 433.92 MHz

**Transmission Distance:** Up to 30 meters (open field)

**Maximum Power:** 2300W

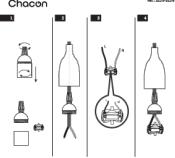
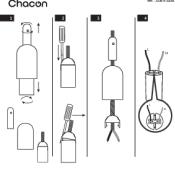
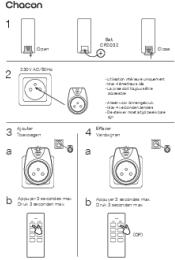
**Power Source:** Cable Electric (for plugs), 1 x CR2032 battery (for remote)

**Special Feature:** Remote Controlled Outlets

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided by your retailer or visit the official CHACON website. Keep your proof of purchase for warranty claims.

## Related Documents - 54671

	<p><a href="#"><b>Chacon 32175-32176 Installation Guide and Instructions</b></a></p> <p>Step-by-step installation instructions for the Chacon 32175-32176 electrical accessory, including assembly diagrams described textually, manufacturer details, and recycling information. This guide is designed for clarity and accessibility.</p>
	<p><a href="#"><b>Chacon Wi-Fi Timer User Manual (53022/53023)</b></a></p> <p>User manual for the Chacon Wi-Fi Timer plug (models 53022 and 53023), detailing setup, usage, troubleshooting, and technical specifications. Compatible with My Chacon and DiO one apps, and voice control via Google Home and Amazon Alexa.</p>
	<p><a href="#"><b>Manual de Instalação e Utilizador do Vídeoportero CHACON (Modelos 34801, 34802)</b></a></p> <p>Guia completo para a instalação e utilização do vídeoportero CHACON, incluindo especificações técnicas, resolução de problemas e notas de segurança.</p>
	<p><a href="#"><b>Chacon 32180-32181 Lamp Holder Installation Guide</b></a></p> <p>Step-by-step instructions for installing the Chacon 32180-32181 lamp holder. Includes wiring guidance and product information.</p>
	<p><a href="#"><b>Manuel d'utilisation et spécifications du programmeur Wi-Fi Chacon 53025/53026</b></a></p> <p>Guide détaillé pour l'installation et l'utilisation du programmeur Wi-Fi Chacon (modèles 53025, 53026), incluant la création de compte, la connexion Wi-Fi, l'utilisation, le dépannage et les spécifications techniques.</p>
	<p><a href="#"><b>Chacon Remote Control Socket User Manual and Specifications</b></a></p> <p>User manual and technical specifications for Chacon remote control sockets, including setup, usage, and safety information. Covers models 54661, 54662, 54663, and 54664.</p>