

ReplacementScrews 40PFL4909/F7

ReplacementScrews Wall Mount Screws Instruction Manual

Compatible with Philips 40PFL4909/F7 Television

1. PRODUCT OVERVIEW

This manual provides instructions for the proper installation and maintenance of ReplacementScrews wall mount screws, specifically designed for compatibility with the Philips 40PFL4909/F7 television model. This screw set ensures a secure attachment of your television to a VESA-compatible wall mount.



Image 1.1: Complete set of four black wall mount screws, four flat washers, and four split lock washers.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 4 x Black Machine Screws (M4 thread, specific length for Philips 40PFL4909/F7)
- 4 x Flat Washers (extra large)
- 4 x Split Lock Washers



Image 2.1: Individual components of the screw set.

3. SETUP AND INSTALLATION

Important: Always consult your television's official manual and your wall mount's manual for specific mounting instructions and safety guidelines before proceeding. Ensure your wall mount is VESA compatible with M4 screws.

3.1. Preparation

1. **Review Manuals:** Read the installation instructions for both your Philips 40PFL4909/F7 TV and your wall mount. Confirm the required screw type and length.
2. **Identify Mounting Holes:** Locate the VESA mounting holes on the back of your Philips 40PFL4909/F7 television.
3. **Gather Tools:** You will need a Phillips head screwdriver or appropriate tool for tightening the screws.



Image 3.1: Wall mount screws designed for Philips 40PFL4909/F7.

3.2. Attaching Screws to TV

1. For each mounting hole, place one flat washer onto a machine screw, followed by one split lock washer. The flat washer should be against the TV mount bracket, and the split lock washer against the screw

head.

2. Insert the assembled screw and washers through the corresponding holes on your VESA wall mount bracket.
3. Align the screws with the mounting holes on the back of your Philips 40PFL4909/F7 TV.
4. Carefully hand-tighten each screw until snug. Do not overtighten, as this can damage the TV or the screws. The split lock washers will provide pressure to prevent loosening.
5. Ensure all four screws are securely fastened and the bracket is firmly attached to the television.



Image 3.2: Proper assembly of screw, flat washer, and split lock washer.



4. FUNCTIONALITY AND USAGE

Once installed, these screws, in conjunction with the flat and split lock washers, provide a secure and stable connection between your Philips 40PFL4909/F7 television and its VESA-compatible wall mount. The flat washers distribute the load evenly, while the split lock washers apply continuous pressure to prevent the screws from loosening due to vibrations or minor movements, ensuring a long-lasting and safe installation.



Image 4.1: Close-up of the screw and washer components.

5. MAINTENANCE

These screws feature a black oxide plating, which provides resistance to corrosion. Regular maintenance is minimal, but it is recommended to periodically check the tightness of the screws, especially after initial installation and during routine cleaning of your television. Ensure they remain snug to maintain a secure mount. Do not use abrasive cleaners on the screws.



Image 5.1: Black oxide plated screws for durability and corrosion resistance.

6. TROUBLESHOOTING

Issue	Possible Cause	Solution
Screws do not fit into TV mounting holes.	Incorrect screw size for your TV model; TV not Philips 40PFL4909/F7.	Verify your TV model number. Consult your TV manual for the correct screw specifications. These screws are M4.
Wall mount feels loose after installation.	Screws not tightened sufficiently; improper wall mount installation.	Ensure screws are snug (do not overtighten). Re-check wall mount installation according to its manual.
Screws appear to be backing out.	Split lock washers may be missing or improperly installed.	Confirm that both flat and split lock washers are used with each screw, with the split lock washer positioned correctly to exert pressure.

7. SPECIFICATIONS

Brand: ReplacementScrews

Compatible TV Model: Philips 40PFL4909/F7

Fastener Type: Machine Screw

Thread Size: M4 (Metric)

Exterior Finish: Black Oxide (Corrosion Resistant)

Included Components: 4 x Machine Screws, 4 x Flat Washers, 4 x Split Lock Washers

VESA Compatibility: Yes

Color: Black

Item Weight: Approximately 0.34 Ounces (total for set)

8. WARRANTY AND SUPPORT

For any questions regarding the installation or compatibility of your ReplacementScrews wall mount screws, please contact ReplacementScrews customer support. While specific warranty details are not provided in this manual, ReplacementScrews is committed to providing quality fasteners. Please refer to your purchase documentation or the official ReplacementScrews website for the most current warranty information and support contact details.

Contact Information: Please visit the [ReplacementScrews Store on Amazon](#) for support resources.

