

[manuals.plus](#) /

› [Aluratek](#) /

› **Aluratek 7-inch LCD WiFi Digital Photo Frame (Model AWDMPF107F) User Manual**

Aluratek AWDMPF107F

Aluratek 7-inch LCD WiFi Digital Photo Frame (Model AWDMPF107F) User Manual

Model: AWDMPF107F

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Aluratek 7-inch LCD WiFi Digital Photo Frame. This device features a touchscreen IPS display, 8GB of built-in memory, and supports wireless photo sharing, as well as USB and SD/SDHC card input. Please read this manual thoroughly before using your new digital photo frame.



Image: The Aluratek 7-inch LCD WiFi Digital Photo Frame, black, shown displaying a vibrant image of a woman. The frame is positioned on a flat surface with a slight tilt.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Aluratek 7-inch LCD WiFi Digital Photo Frame
- Power Adapter
- USB Cable
- Instruction Manual (this document)
- Frame Stand



Image: An overhead view of the Aluratek 7-inch LCD WiFi Digital Photo Frame and its accessories, including the frame, power adapter, USB cable, frame stand, and a printed instruction manual.

DEVICE LAYOUT

Familiarize yourself with the physical components and ports of your digital photo frame.



Image: A side profile of the digital photo frame, highlighting the various input ports. Visible ports include a full-size USB port, a micro-USB port, and an SD/SDHC card slot.

Ports and Buttons:

- **Power Input:** Connects to the included power adapter.
- **USB Port:** For connecting USB flash drives to display photos, music, or videos.

- **SD/SDHC Card Slot:** For inserting SD/SDHC memory cards (up to 32GB) to display media.
- **Power Button:** To turn the device on or off.
- **Touchscreen Display:** For interactive navigation and control.

SETUP

1. Power Connection:

1. Connect the power adapter to the power input port on the frame.
2. Plug the power adapter into a standard electrical outlet. The frame will typically power on automatically.

2. Initial Configuration:

1. Upon first power-on, the frame will guide you through initial setup steps, including language selection and time zone.
2. Connect to a WiFi network by selecting your network from the list and entering the password using the on-screen keyboard. A stable WiFi connection is required for app-based photo sharing and weather updates.

3. Stand Installation:

Insert the included frame stand into the designated slot on the back of the frame. The stand allows for adjustable viewing angles and supports both horizontal and vertical orientation.

OPERATING INSTRUCTIONS

Touchscreen Navigation:

The frame features a responsive touchscreen display for easy navigation through menus and settings. Tap icons to select options and swipe to browse content.

Touchscreen Display

Fast navigation on the 8" screen with no required setup and no software to install.




Image: A hand is shown tapping an icon on the touchscreen display of the digital photo frame, demonstrating the interactive user interface.

Wireless Photo Sharing:

Share photos directly to your frame using the dedicated smartphone application, Facebook Messenger, Twitter Messages, or email.

- 1. Using the Smartphone App:** Download the official Aluratek app from your device's app store. Follow the in-app instructions to pair your smartphone with the digital photo frame. Once paired, you can select and send photos directly from your phone's gallery to the frame.
- 2. Via Email/Social Media:** The frame can be configured to receive photos from specific email addresses or social media accounts. Refer to the frame's settings for detailed instructions on enabling these features.

Wireless Photo Sharing

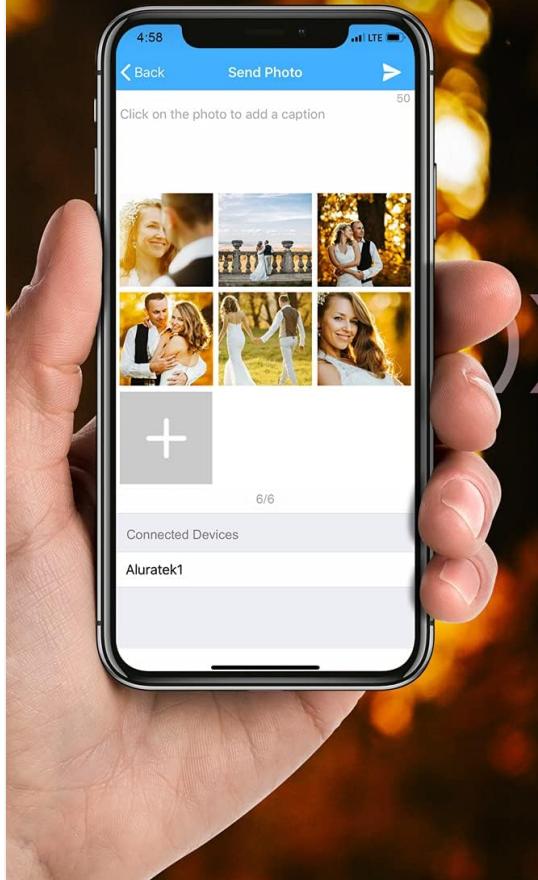

Send photos to the frame using our smartphone app, Facebook Messenger, Twitter messages or even email!



Image: A smartphone screen displaying the Aluratek photo sharing app, showing multiple photos selected for upload to the digital photo frame, which is visible in the background.

USB/SD Card Media Playback:

The frame supports playback of photos, music, and videos from USB flash drives and SD/SDHC memory cards (up to 32GB).

1. Insert a USB flash drive into the USB port or an SD/SDHC card into the card slot.
2. The frame will automatically detect the inserted media. Navigate to the 'USB' or 'SD Card' option on the main menu to browse and play your content.



Image: A close-up of a hand inserting a USB flash drive into the USB port and an SD card into the SD card slot on the side of the

Clock, Calendar, and Weather:

The frame includes built-in clock, calendar, and weather display functions. Ensure the frame is connected to WiFi for accurate time and weather updates.

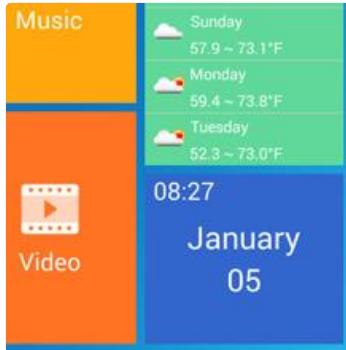


Image: A section of the digital photo frame's screen showing the current time, date (January 05), and a three-day weather forecast with temperatures.

MAINTENANCE

Cleaning the Screen:

To clean the touchscreen, gently wipe it with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid using harsh chemicals or abrasive materials.

General Care:

- Keep the frame away from direct sunlight, excessive heat, and moisture.
- Do not expose the frame to extreme temperatures.
- Avoid dropping or subjecting the frame to strong impacts.
- Ensure proper ventilation around the device.

TROUBLESHOOTING

No Power:

- Ensure the power adapter is securely connected to both the frame and a working electrical outlet.
- Try a different outlet to rule out power source issues.

Cannot Connect to WiFi:

- Verify that your WiFi network is active and within range.
- Double-check the WiFi password for accuracy.
- Restart your WiFi router and the digital photo frame.

Photos Not Displaying from USB/SD Card:

- Ensure the USB drive or SD card is properly inserted into the correct slot.
- Check that the media files are in a supported format (e.g., JPEG for photos).
- Verify that the storage device is not corrupted and contains actual media files.
- The frame supports SD/SDHC cards up to 32GB. Ensure your card is within this limit.

Touchscreen Unresponsive:

- Restart the frame by unplugging and re-plugging the power adapter.
- Ensure the screen is clean and free of debris.

SPECIFICATIONS

Model Number	AWDMPF107F
Screen Size	7 Inches
Display Type	IPS LCD Touchscreen
Resolution	1024 x 600 (16:9 aspect ratio)
Built-in Memory	8GB
Supported Memory Cards	SD / SDHC / SDXC (up to 32GB)
Connectivity	WiFi, USB
Compatible Devices	Personal Computer, Smartphone
Product Dimensions	10.5 x 3.5 x 8.75 inches
Item Weight	1.81 pounds
Color	Black



WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Aluratek website or contact their customer service department. Keep your purchase receipt for warranty claims.

Official Aluratek Website: www.aluratek.com

Related Documents - AWDMPF107F

	<p>Aluratek AWDMPF8BB 8" WiFi Digital Photo Frame Instructional Manual</p> <p>This instructional manual provides detailed guidance for the Aluratek AWDMPF8BB 8-inch WiFi Digital Photo Frame with Touchscreen LCD Display. It covers setup, Wi-Fi connection, linking to social media (Facebook, Twitter) and the Aluratek WiFi Frame app, transferring photos via USB or network, and navigating system and album settings. Includes technical support and warranty information.</p>
	<p>Aluratek 11.6-inch WiFi Digital Photo Frame Instructional Manual</p> <p>Comprehensive instructional manual for the Aluratek 11.6-inch WiFi Digital Photo Frame, covering setup, app configuration, social media integration, file transfer, and troubleshooting.</p>

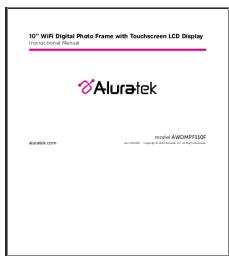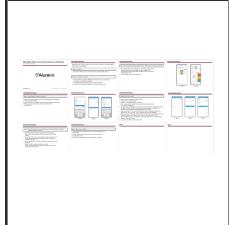	<p><u>Aluratek 10" WiFi Digital Photo Frame AWDMPF110F: Instructional Manual</u></p> <p>Comprehensive instructional manual for the Aluratek 10-inch WiFi Digital Photo Frame (Model AWDMPF110F). Learn setup, Wi-Fi connection, social media integration (Facebook, Twitter), Photo Partner app usage, and system settings.</p>
	<p><u>Aluratek AWDMPF208F 8-Inch WiFi Digital Photo Frame: Instructional Manual & Setup Guide</u></p> <p>Comprehensive guide for the Aluratek AWDMPF208F 8-inch WiFi Digital Photo Frame. Learn how to set up, connect to Wi-Fi, link social media accounts (Facebook, Twitter), use the Photo Partner app, and navigate system settings for optimal photo display.</p>
	<p><u>Aluratek WiFi Digital Photo Frame Quick Start Guide</u></p> <p>A quick start guide for setting up and using the Aluratek WiFi Digital Photo Frame, including connecting to WiFi, downloading the Aluratek Smart Frame app, creating an account, binding the frame, and sending photos. Covers steps for powering on, WiFi connection, app installation, account creation, frame binding, photo transfer, and enjoying photos.</p>
	<p><u>Aluratek AWDMPF110F 10" WiFi Digital Photo Frame Instructional Manual</u></p> <p>Comprehensive guide to setting up and operating the Aluratek AWDMPF110F 10-inch WiFi Digital Photo Frame, including connecting to Wi-Fi, linking social media accounts, transferring photos, and managing settings.</p>

Documents - Aluratek – AWDMPF107F



[\[pdf\] User Manual Quick Start Guide Instructions](#)

User Manual JIANGXI JOYHONG TECHNOLOGY CO LTD AWDMPF107F Digital photo frames 2AQTC 2AQTCAWDMPF107F awdmpf107f

WiFi Digital Photo Frame with Touchscreen LCD Display Instructional Manual Digital photo frames **AWDMPF107F**JT070E-F02 Skyline Photoelectric Industrial Park, Economic and Technological Development Industrial, Ji an City, Jiangxi, China
aluratek.com Copyright 2019 Aluratek, Inc. All Rights Reserve...
lang:en score:35 filesize: 2.64 M page_count: 79 document date: 2019-09-10