

[manuals.plus](#) /

› [KRUPS](#) /

› [KRUPS KH320D50 My Memory Digital Stainless Steel Toaster Instruction Manual](#)

KRUPS KH320D50

KRUPS KH320D50 My Memory Digital Stainless Steel Toaster Instruction Manual

Model: KH320D50

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- To avoid possibility of fire, do not leave toaster unattended during use.

2. PRODUCT OVERVIEW

The KRUPS KH320D50 My Memory Digital Stainless Steel Toaster offers advanced features for personalized toasting. It includes two dedicated memory settings, 7 browning levels, and wide slots to accommodate various bread types.



Image: Front view of the KRUPS KH320D50 toaster highlighting its premium chrome stainless steel finish, automatic bread centering, high lift, wide slots, extra-large LED digital display with countdown timer, 7 browning levels, cancel toasting button, pre-programmed bagel function, defrost function, and two memory settings.

Key Features:

- Personalized Toasting:** Two dedicated memory settings to program your favorite toasting preferences.
- Customizable and Versatile:** 7 browning levels for optimal toasting results and wide slots for all types of breads and pastries, from sliced toast to thick bagels.
- Practical Design:** Extra-large LED digital display with live toasting progress countdown clock. Premium chrome stainless steel finishes.
- Easy-to-Use:** Features automatic bread centering and high lift for optimal toasting and safe removal. Dedicated programs for Bagel and Defrost.

3. SETUP

- Unpack:** Carefully remove the toaster and all packaging materials.
- Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials. Ensure adequate ventilation around the toaster.
- Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.
- Initial Use:** Before first use, operate the toaster without bread on the highest browning setting (7) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal.

4. OPERATING INSTRUCTIONS

4.1 Basic Toasting

1. Insert bread slices into the toasting slots. For best results, always toast 2 slices of bread. The automatic bread centering feature will position the bread correctly.
2. Select your desired browning level using the 'SELECT 1-7' button. The LED display will show the selected level.
3. Press down the toasting lever until it locks into place. The toasting cycle will begin, and the LED display will show a countdown timer.
4. Once the cycle is complete, the toast will automatically pop up. The high lift feature allows for easy and safe removal of smaller items.

4.2 Personalized Memory Settings

The toaster features two dedicated memory settings (FAV. 1 and FAV. 2) to save your preferred toasting levels for different bread types or family members.



2 DEDICATED MEMORY SETTINGS

Image: A hand pressing one of the two 'FAV.' memory buttons on the KRUPS KH320D50 toaster, indicating the personalized toasting feature.

1. Set your desired browning level using the 'SELECT 1-7' button.
2. Press and hold either the 'FAV. 1' or 'FAV. 2' button for approximately 3 seconds until you hear a beep. Your current browning setting is now saved to that memory button.
3. To use a saved setting, simply press the corresponding 'FAV.' button before lowering the toasting lever.

4.3 Special Functions: Bagel and Defrost



4 PRE-PROGRAMMED SETTINGS

Image: A close-up view of the control panel of the KRUPS KH320D50 toaster, showing the 'CANCEL', 'SELECT 1-7', 'BAGEL', and 'DEFROST' buttons, highlighting the pre-programmed settings.

- **Bagel Function:** Insert bagels into the slots. Press the 'BAGEL' button, then lower the toasting lever. This function toasts the cut side of the bagel while gently warming the other side.
- **Defrost Function:** Insert frozen bread into the slots. Press the 'DEFROST' button, then lower the toasting lever. This function thaws and toasts frozen items in one cycle.

4.4 Cancel Toasting

To stop the toasting cycle at any time, simply press the 'CANCEL' button. The toasting lever will immediately release, and the bread will pop up.

4.5 Countdown Timer



COUNTDOWN TIMER TRACKS TOASTING PROGRESS

Image: The KRUPS KH320D50 toaster displaying a digital countdown timer on its LED screen, tracking the toasting progress. The extra-large LED digital display provides a live countdown clock, allowing you to know exactly when your toast will be ready.

5. MAINTENANCE

5.1 Cleaning the Crumb Tray

The toaster features an easily removable crumb tray for convenient cleaning.

1. Ensure the toaster is unplugged and completely cool before cleaning.
2. Locate the removable crumb tray at the back of the toaster.
3. Slide the tray out to remove accumulated crumbs.
4. Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.
5. Push the crumb tray back into place until it clicks securely.

5.2 Exterior Cleaning

Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the stainless steel finish.

6. TROUBLESHOOTING

- **Toaster not turning on:** Ensure the toaster is properly plugged into a working electrical outlet. Check your circuit breaker.
- **Bread not toasting evenly:** Ensure bread slices are centered in the slots. Some bread types may toast differently; adjust browning level as needed.
- **Bread stuck in toaster:** Unplug the toaster immediately. Carefully remove the bread using non-metallic utensils. Do not use metal objects.
- **Smoke coming from toaster:** Unplug immediately. This may be due to crumbs in the tray or food lodged inside. Clean the crumb tray and check for any obstructions.

7. SPECIFICATIONS

Feature	Detail
Brand	KRUPS
Model Number	KH320D50
Color	Black
Material	Stainless Steel
Product Dimensions	7.68"D x 12.4"W x 9.13"H
Wattage	850 watts
Number of Slices	2
Browning Levels	7
Special Feature	Programmable Memory Settings
Voltage	120 Volts



Image: The KRUPS KH320D50 toaster with its dimensions (7.68"D x 12.4"W x 9.13"H) clearly labeled, providing a visual reference for its size.

8. PRODUCT VIDEO OVERVIEW

Your browser does not support the video tag.

Video: A 360-degree product overview of the KRUPS KH320D50 My Memory Digital Toaster, showcasing its design and features from various angles.

9. WARRANTY AND SUPPORT

This KRUPS product is covered by a 2-year International Guarantee. For detailed warranty information, product registration, or customer support, please visit the official KRUPS website or contact their customer service department. Keep your proof of purchase for warranty claims.

For further assistance, please refer to the contact information provided in your product packaging or visit the [KRUPS Store on Amazon](#).

