

Billboard BB2260

Billboard BB2260 Flashing Portable Bluetooth Speaker User Manual

Model: BB2260

1. INTRODUCTION

Thank you for purchasing the Billboard BB2260 Flashing Portable Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

The BB2260 speaker offers portable audio with Bluetooth connectivity, hands-free calling, and integrated LED lighting for an enhanced listening experience.

2. SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Contact qualified service personnel for any repairs.
- Keep the speaker away from water and liquids. Although it is waterproof, prolonged submersion or exposure to high-pressure water jets should be avoided.
- Use only the specified charging cable and power source to prevent damage or fire.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Please check that all items are present in your package:

- Billboard BB2260 Flashing Portable Bluetooth Speaker
- USB Charging Cable (*Note: Wall adapter not included*)

- Auxiliary Audio Cable (if included, check packaging)
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components:



Image: Front view of the Billboard BB2260 speaker. This image displays the main speaker grille and the typical location for control buttons and ports.

Controls and Ports (Typical Layout):

- **Power Button:** Press and hold to turn the speaker ON/OFF.
- **Play/Pause Button:** Press to play or pause audio. Also used to answer/end calls.
- **Volume Up/Next Track Button:** Press to increase volume. Hold to skip to the next track.
- **Volume Down/Previous Track Button:** Press to decrease volume. Hold to go to the previous track.
- **Mode Button:** Press to switch between Bluetooth, Aux-in, or other available modes.
- **LED Light Button:** Press to cycle through or turn off LED lighting modes.
- **Microphone:** For hands-free calling.
- **USB Charging Port:** For charging the internal battery.

- **AUX Input Port:** For connecting external audio devices via a 3.5mm audio cable.

5. SETUP

5.1 Charging the Speaker

1. Connect the small end of the USB charging cable to the USB charging port on the speaker.
2. Connect the large end of the USB charging cable to a USB power source (e.g., computer USB port, USB wall adapter *not included*).
3. The charging indicator light will illuminate, typically red, during charging.
4. Once fully charged, the indicator light will usually turn off or change color (e.g., blue). A full charge provides approximately 10 hours of battery life.
5. Disconnect the charging cable once charging is complete.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button for approximately 3 seconds. You will hear an audible tone or voice prompt, and the LED lights may activate.
- **To Power Off:** Press and hold the Power button for approximately 3 seconds. You will hear an audible tone or voice prompt, and the LED lights will turn off.

5.3 Bluetooth Pairing

Pair your speaker with a Bluetooth-enabled device (smartphone, tablet, laptop) to stream audio wirelessly.

1. Ensure the speaker is powered on and in Bluetooth pairing mode. The LED indicator will typically flash blue rapidly, indicating it's ready to pair. If not, press the Mode button to switch to Bluetooth mode.
2. On your device, go to the Bluetooth settings menu.
3. Enable Bluetooth and scan for available devices.
4. Select "BB2260" (or similar name) from the list of found devices.
5. Once paired, the speaker will emit an audible confirmation, and the LED indicator will typically stop flashing and remain solid blue.
6. You can now play audio from your device through the speaker. The Bluetooth range is up to 32 feet (approximately 10 meters).

Note: The speaker will automatically attempt to reconnect to the last paired device when powered on, if that device's Bluetooth is active and within range.

6. OPERATING THE SPEAKER

6.1 Playing Audio via Bluetooth

- Ensure the speaker is paired with your device (refer to Section 5.3).
- Start playing music or other audio on your connected device.
- Use the Volume Up/Down buttons on the speaker or your device to adjust the volume.
- Press the Play/Pause button to pause or resume playback.
- Hold the Volume Up/Down buttons to skip to the next/previous track.

6.2 Playing Audio via AUX Input

For devices without Bluetooth, use the AUX input.

1. Connect one end of a 3.5mm audio cable (*not always included*) to the AUX input port on the speaker.
2. Connect the other end of the 3.5mm audio cable to the headphone jack or audio output of your external device (e.g., MP3 player).
3. Power on the speaker and press the Mode button until it enters AUX mode.
4. Start playing audio on your external device.
5. Adjust volume using either the speaker's controls or your external device's volume controls.

6.3 Hands-Free Calling

When connected via Bluetooth to a smartphone, you can use the speaker for hands-free calls.

- **Answering a Call:** When a call comes in, the speaker will ring. Press the Play/Pause button once to answer the call.
- **Ending a Call:** During a call, press the Play/Pause button once to end the call.
- **Rejecting a Call:** Press and hold the Play/Pause button for approximately 2 seconds to reject an incoming call.
- **Redialing Last Number:** In Bluetooth mode, double-press the Play/Pause button to redial the last number called.

6.4 LED Lighting

The speaker features integrated LED lighting that can be customized.

- Press the LED Light button (if available) to cycle through different lighting modes or to turn the lights off.
- Refer to the specific button layout on your speaker for the exact LED control.

7. MAINTENANCE

7.1 Cleaning

- Ensure the speaker is powered off and disconnected from any power source before cleaning.
- Wipe the exterior of the speaker with a soft, damp cloth.
- Do not use abrasive cleaners, alcohol, benzene, or other chemical solvents, as these may damage the surface.
- Do not allow water to enter any openings.

7.2 Storage

- Store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically (e.g., every 3-6 months) to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the provided USB cable.
No sound from the speaker.	Volume is too low or muted. Device not properly connected.	Increase volume on both the speaker and the connected device. Ensure Bluetooth is paired or AUX cable is securely connected.
Cannot pair via Bluetooth.	Speaker not in pairing mode. Device Bluetooth is off or out of range. Interference.	Ensure speaker is in Bluetooth pairing mode (flashing LED). Turn off and on Bluetooth on your device. Move speaker closer to device (within 32 ft). Turn off other Bluetooth devices.
Poor audio quality or distortion.	Low battery. Device too far from speaker. Source audio quality is poor.	Charge the speaker. Move device closer to speaker. Try a different audio source or file.
Hands-free calling not working.	Speaker not connected to phone via Bluetooth. Microphone blocked.	Ensure Bluetooth is connected. Check if anything is obstructing the microphone.

9. SPECIFICATIONS

Model Name:	BB2260
Brand:	Billboard
Connectivity Technology:	Auxiliary, Bluetooth, USB
Bluetooth Version:	4.2
Bluetooth Range:	Up to 32 ft (10 meters)
Speaker Maximum Output Power:	3 Watts
Frequency Response:	20 Hz to 20 kHz
Battery Average Life:	10 Hours
Power Source:	Battery Powered (Built-in rechargeable battery)
Control Method:	Touch
Is Waterproof:	True
Item Weight:	1.55 Pounds
Compatible Devices:	Laptop, MP3 Player, Smartphone, Tablet
UPC:	680988223600

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.

Manufacturer: Billboard