

**PowerA 1512378-01**

# PowerA Enhanced Wireless Controller for Nintendo Switch - Pokémon Sword User Manual

Model: 1512378-01

## PRODUCT OVERVIEW

This manual provides instructions for the PowerA Enhanced Wireless Controller, designed for use with Nintendo Switch and Nintendo Switch Lite consoles. This controller offers wireless freedom via Bluetooth 5.0, motion controls, and mappable Advanced Gaming Buttons, all within an ergonomic design featuring a standard button layout and a unique Pokémon Sword theme.

The controller operates using two AA batteries, providing up to 30 hours of gameplay. It is an officially licensed product by Nintendo and The Pokémon Company International.



Image: Front view of the PowerA Enhanced Wireless Controller featuring a green and blue gradient with Pokémon

## PACKAGE CONTENTS

- PowerA Enhanced Wireless Controller for Nintendo Switch
- Two (2) AA Alkaline Batteries
- User Manual (this document)

## SETUP

### Inserting Batteries

1. Locate the battery compartment on the back of the controller.
2. Remove the battery cover by sliding it downwards.
3. Insert the two (2) included AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery cover by sliding it upwards until it clicks into place.



Image: Rear view of the controller with the battery cover open, showing the two AA batteries installed.

## Pairing with Nintendo Switch

1. Ensure your Nintendo Switch console is powered on and updated to the latest system version.
2. From the HOME Menu, select **Controllers**, then **Change Grip/Order**.
3. On the controller, press and hold the **SYNC Button** for at least three seconds. The Player Indicator LED(s) will begin to flash.
4. Once paired, the Player Indicator LED(s) corresponding to the controller number will remain solid.
5. The controller is now ready for use.

*Note: After initial pairing, the controller will automatically connect to your Nintendo Switch when powered on and within range. Press any button to wake the controller.*

## OPERATING THE CONTROLLER

### Button Layout

The PowerA Enhanced Wireless Controller features a standard button layout for intuitive gameplay.



Image: Diagram illustrating key features of the PowerA Enhanced Wireless Controller, including ergonomic design, battery compartment, and advanced gaming buttons.

- **Left/Right Analog Sticks:** For movement and camera control.
- **D-Pad:** Directional input.
- **A/B/X/Y Buttons:** Action buttons.
- **L/R Buttons:** Shoulder buttons.
- **ZL/ZR Buttons:** Trigger buttons.

- **+- Buttons:** Start/Select functions.
- **HOME Button:** Returns to the Nintendo Switch HOME Menu.
- **CAPTURE Button:** Takes screenshots or video clips.
- **SYNC Button:** Used for pairing.

## Advanced Gaming Buttons (AGB)

The controller includes two mappable Advanced Gaming Buttons on the back for custom control configurations.

1. Press the **Program Button** on the back of the controller. The Program LED will flash.
2. Press the button you wish to map (A/B/X/Y, L/R, ZL/ZR, D-pad, Left/Right Stick Click). The Program LED will flash rapidly.
3. Press one of the **Advanced Gaming Buttons (AGB)** (L or R) to complete the mapping. The Program LED will turn off, indicating successful mapping.

*Note: Mappings remain in memory even after disconnecting. To clear mappings, hold the Program Button for 5 seconds.*

## Motion Controls

This controller supports motion controls for games that utilize this feature on the Nintendo Switch.

## MAINTENANCE

### Cleaning

To clean the controller, use a soft, dry cloth. Do not use harsh chemicals or abrasive materials. Avoid getting moisture into any openings.

### Battery Replacement

When the Low Battery Indicator LED flashes, it is time to replace the AA batteries. Follow the "Inserting Batteries" steps in the Setup section.

*Always dispose of used batteries responsibly according to local regulations.*

## TROUBLESHOOTING

- **Controller not pairing:**
  - Ensure the controller has fresh batteries.
  - Verify the Nintendo Switch is updated to the latest system software.
  - Try re-pairing the controller by holding the SYNC button for 3 seconds while on the "Change Grip/Order" screen.
  - Move closer to the Nintendo Switch console to ensure proper Bluetooth range.

- **Buttons not responding:**

- Check battery level.
- Ensure the controller is properly paired.
- Restart the Nintendo Switch console.

- **Advanced Gaming Buttons not working:**

- Ensure the mapping process was completed correctly (Program LED turns off).
- Try re-mapping the buttons.
- Clear existing mappings by holding the Program Button for 5 seconds, then remap.

## SPECIFICATIONS

Feature	Detail
Model Number	1512378-01
Connectivity	Bluetooth 5.0 Wireless
Power Source	2 x AA Batteries (included)
Battery Life	Up to 30 hours (with new alkaline batteries)
Features	Motion Controls, Mappable Advanced Gaming Buttons
Dimensions	2.6 x 6.3 x 6.4 inches
Weight	10.6 ounces
Compatibility	Nintendo Switch, Nintendo Switch Lite
Manufacturer	POWER A

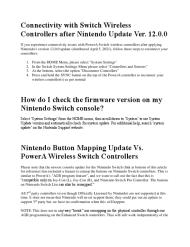
## SUPPORT AND WARRANTY

For additional support, troubleshooting, or warranty information, please visit the official PowerA website or refer to the comprehensive user manual available online.

A digital version of the user manual can be found at: [PowerA Enhanced Wireless Controller User Manual \(PDF\)](#)

This product is officially licensed by Nintendo and The Pokémon Company International.

## Related Documents

	<p><a href="#">PowerA Enhanced Wireless Controller for Nintendo Switch User Manual</a></p> <p>User manual for the PowerA Enhanced Wireless Controller for Nintendo Switch, covering setup, pairing, features like Advanced Gaming Buttons, troubleshooting, and warranty information. Includes compatibility for Nintendo Switch OLED Model and Switch Lite.</p>
	<p><a href="#">PowerA Wireless Controller Connectivity and Button Mapping with Nintendo Switch Update 12.0.0</a></p> <p>Troubleshooting guide for PowerA wireless controllers experiencing connectivity issues after Nintendo Switch update 12.0.0, and information on button mapping compatibility with Nintendo's console remapping feature.</p>
	<p><a href="#">PowerA Switch Wireless Controller User Manual and Setup Guide</a></p> <p>Official user manual for the PowerA Switch Wireless Controller. Learn about setup, pairing, troubleshooting, and features for your Nintendo Switch gaming experience. Includes warranty and safety information.</p>
	<p><a href="#">PowerA Advantage Wired Controller for Nintendo Switch™ 2 User Manual   Setup, Features, Troubleshooting</a></p> <p>Comprehensive user manual for the PowerA Advantage Wired Controller for Nintendo Switch™ 2. Learn about setup, audio controls, programmable buttons, troubleshooting, and specifications.</p>

## Documents - PowerA – 1512378-01



### [pdf] Specifications Declaration of Conformity

Microsoft Word EU Declaration of Conformity Template YW RA Test 3 docx 1512378 01 NSW

EnWireless Controller Pokemon Sword Nintendo Switch Declarations PowerA nsw enwireless controller  
pokemon sword 1625879339 powera globalassets |||

EU Declaration of Conformity We, Bensussen Deutsch Associates LLC, at 15525 Woodinville-Redmond Road NE, Woodinville, WA 98072 USA declare that the Declaration of Conformity is issued under our sole responsibility and belongs to the following product: 1. Model Number: **1512378-01** 2. Name and address...

lang:en score:28 filesize: 611.65 K page\_count: 1 document date: 2021-01-27