

[Manuals.plus](#) /

› [Princess](#) /

› Princess 01.182065.01.001 Four Aerofryer User Manual

Princess 01.182065.01.001

Princess 01.182065.01.001 Four Aerofryer

USER MANUAL

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- Ensure the appliance is placed on a stable, heat-resistant surface.

PRODUCT OVERVIEW

The Princess 01.182065.01.001 Four Aerofryer is a versatile kitchen appliance designed for air frying, roasting, baking, and grilling with minimal oil. It features a spacious interior and intuitive digital controls.



Front view of the Princess Aerofryer, showcasing its sleek design and digital control panel.

Components:

- Main Unit with Digital Control Panel
- Removable Door with Viewing Window
- Cooking Racks (multiple levels)
- Drip Tray
- Rotisserie Fork (if included with model)

- Rotating Mesh Basket (if included with model)

SETUP

Unpacking:

1. Carefully remove the Aerofryer and all accessories from the packaging.
2. Remove any packaging materials, stickers, or labels.
3. Wipe the exterior of the appliance with a damp cloth.
4. Wash all removable parts (cooking racks, drip tray, etc.) in warm, soapy water. Rinse thoroughly and dry completely.

Placement:

- Place the Aerofryer on a stable, level, heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of clear space on all sides and above the appliance for proper ventilation.
- Do not place the appliance near flammable materials or heat sources.

First Use:

1. Plug the power cord into a grounded wall outlet.
2. It is recommended to run the appliance empty for about 10-15 minutes at 180°C (350°F) during the first use to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal.
3. Allow the appliance to cool down completely, then clean the interior with a damp cloth.

OPERATING INSTRUCTIONS

Control Panel Overview:

The digital control panel allows for easy adjustment of temperature, time, and selection of preset cooking functions.



Close-up of the digital control panel with various icons for temperature, time, and cooking presets.

- **Power Button:** Turns the appliance on/off.
- **Temperature Control (+/-):** Adjusts cooking temperature.
- **Time Control (+/-):** Adjusts cooking time.
- **Preset Icons:** Select pre-programmed settings for common foods (e.g., fries, chicken, fish, cake).
- **Light Button:** Turns the interior light on/off.
- **Rotation Button:** Activates/deactivates the rotisserie function (if applicable).

Preheating:

For best results, preheat the Aerofryer before adding food.

1. Press the Power button to turn on the appliance.
2. Set the desired temperature using the temperature controls.
3. Set the time to 3-5 minutes for preheating.
4. The appliance will begin heating. Once the set time elapses, it will beep, indicating preheating is complete.

Cooking with Presets:

1. Place food inside the Aerofryer, ensuring it does not exceed the MAX fill line or block air circulation.
2. Press the Power button.
3. Select the desired preset icon. The appliance will automatically set the recommended temperature and time.
4. Press the Power button again to start cooking.

5. Monitor food through the viewing window. Shake or flip food halfway through cooking if necessary.
6. Once cooking is complete, the appliance will beep. Carefully remove food using heat-resistant tongs.

Manual Cooking:

1. Place food inside the Aerofryer.
2. Press the Power button.
3. Use the temperature controls to set the desired temperature.
4. Use the time controls to set the desired cooking time.
5. Press the Power button again to start cooking.

Using Accessories:

The Aerofryer comes with various accessories to enhance your cooking experience.



Interior view of the Aerofryer showing multiple cooking racks for layered cooking.

- **Cooking Racks:** Insert into the designated slots for multi-level cooking of items like vegetables, chicken pieces, or snacks.
- **Drip Tray:** Always place the drip tray at the bottom of the appliance to catch any oil or food drippings.
- **Rotisserie Fork:** Use for roasting whole chickens or larger cuts of meat. Ensure the food is securely fastened and balanced. Activate the rotation function on the control panel.
- **Rotating Mesh Basket:** Ideal for fries, nuts, or other small items that benefit from continuous tumbling for even cooking.



The Aerofryer in use, demonstrating its capacity to cook multiple types of food simultaneously on different racks.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Aerofryer.

General Cleaning:

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wipe the exterior with a damp cloth. Do not use abrasive cleaners or scouring pads.
3. Clean the interior with a soft, damp cloth and mild detergent. For stubborn stains, a non-abrasive sponge can be used.
4. Ensure the interior is completely dry before storing or using again.

Cleaning Accessories:

- All removable accessories (cooking racks, drip tray, rotisserie fork, mesh basket) are dishwasher safe or can be

washed by hand in warm, soapy water.

- For baked-on food, soak the accessories in warm water with dish soap for 15-20 minutes before cleaning.
- Rinse thoroughly and dry completely before reassembling or storing.

Storage:

- Ensure the appliance is clean and dry before storing.
- Store the Aerofryer in a cool, dry place.
- Do not place heavy objects on top of the appliance during storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction; Appliance damaged.	Check power cord connection; Test outlet with another appliance; Contact customer support.
Food is not cooked evenly.	Too much food in the basket/on racks; Food not shaken/flipped; Incorrect temperature/time.	Cook in smaller batches; Shake/flip food halfway through; Adjust temperature/time settings.
White smoke coming from appliance.	Grease/oil residue from previous use; High fat content food.	Clean the appliance and accessories thoroughly; For high-fat foods, place a small amount of water in the drip tray.
Appliance emits a burning smell.	Food stuck in heating element; Excessive oil/grease buildup.	Unplug and allow to cool. Inspect and clean heating element area; Clean drip tray and interior.
Food is not crispy.	Not enough oil (for certain foods); Overcrowding; Temperature too low.	Lightly coat food with oil; Do not overcrowd; Increase temperature slightly.

SPECIFICATIONS

Feature	Detail
Brand	Princess
Model Number	01.182065.01.001
Colour	Black
Product Dimensions	38 x 35.2 x 36 cm

Feature	Detail
Item Weight	5.6 kg
Capacity	10 litres
Power / Wattage	1500 watts
Voltage	240 Volts
Material	Stainless Steel, Aluminium, Plastic
Auto Shutoff	Yes
Special Features	Temperature Control

WARRANTY AND SUPPORT

This Princess Aerofryer is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or to inquire about replacement parts, please contact Princess customer service. Contact information can typically be found on the official Princess website or on the product packaging.

When contacting support, please have your product model number (01.182065.01.001) and purchase date readily available.