

Ninja CT672A

Ninja Smart Screen Kitchen System (CT672A) Instruction Manual

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- To protect against electrical shock, do not immerse the appliance base, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always operate the appliance on a dry, level surface.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.
- Do not use the appliance for other than intended use.

WHAT'S IN THE BOX

Your Ninja Smart Screen Kitchen System includes the following components:

- 1100-Watt Motor Base with Smart Screen
- 72 oz. (64 oz. max liquid capacity) Total Crushing Pitcher with Lid

- Total Crushing Blade Assembly
- 8-cup Food Processor Bowl with Lid
- Chopping Blade Assembly
- Dough Blade Assembly
- Reversible Slicing/Shredding Disc
- 24 oz. Single-Serve Cup with Spout Lid
- Pro Extractor Blades Assembly
- Instruction Manual
- Recipe Inspiration Guide



Sistema de cocina Foodi

3 en 1 para posibilidades infinitas

Image: Overview of the Ninja Smart Screen Kitchen System components, including the main blender pitcher, food processor, and single-serve cup.

SETUP

1. **Unpack:** Carefully remove all parts from the packaging.
2. **Wash:** Wash all containers, lids, and blade assemblies in warm, soapy water. Rinse thoroughly and air dry. The

containers and lids are also dishwasher safe (top rack only).

3. **Placement:** Place the motor base on a clean, dry, and level surface. Ensure the appliance is unplugged before assembly.
4. **Assembly:**
 - **For Total Crushing Pitcher:** Place the pitcher onto the motor base, aligning the handle slightly to the right of the "NINJA" logo. Rotate the pitcher clockwise until it clicks into place. Insert the Total Crushing Blade Assembly onto the drive gear inside the pitcher. Add ingredients. Secure the lid by aligning the arrow on the lid with the arrow on the pitcher handle, then press down firmly until it clicks.
 - **For Food Processor Bowl:** Place the food processor bowl onto the motor base, aligning the handle slightly to the right of the "NINJA" logo. Rotate the bowl clockwise until it clicks into place. Insert the desired blade assembly (Chopping or Dough) or the Reversible Slicing/Shredding Disc onto the drive gear. Add ingredients. Secure the lid by aligning the arrow on the lid with the arrow on the bowl handle, then press down firmly until it clicks.
 - **For Single-Serve Cup:** Fill the single-serve cup with ingredients. Screw the Pro Extractor Blades Assembly onto the open end of the cup until a tight seal is achieved. Invert the cup and place it onto the motor base, twisting clockwise until it locks into place.
5. **Power:** Plug the power cord into a standard electrical outlet. The Smart Screen will illuminate.

OPERATING THE SMART SCREEN KITCHEN SYSTEM

The Smart Screen automatically detects the attached container and displays relevant programs. Select a program or manual speed based on your desired results.

Smart Programs (Auto-iQ)

These pre-set programs combine unique pulsing, blending, and pausing patterns to deliver consistent results. Simply select the program and let the system do the work.



Pantalla táctil

Elige entre 6 programas Auto-iQ que realizan el trabajo por ti

Image: Close-up of the Ninja Smart Screen control panel, showing various Auto-iQ programs and manual speed options.

- **SMOOTHIE:** Ideal for blending fresh or frozen fruits and liquids into smooth, drinkable creations.
- **ICE CREAM:** Transforms frozen fruit into creamy, scoopable ice cream or sorbet.
- **FROZEN DRINK:** Crushes ice and frozen ingredients for perfect frozen cocktails and mocktails.
- **PUREE:** Creates smooth sauces, soups, and dips from cooked ingredients.
- **CHOP:** Evenly chops ingredients like vegetables, nuts, and herbs in the food processor bowl.

Manual Speeds

- **LOW:** For mixing and stirring ingredients.
- **HIGH:** For continuous blending and processing.
- **PULSE:** For controlled chopping and processing. Press and hold for short bursts.

Using the Total Crushing Pitcher

The Total Crushing Pitcher is designed for powerful blending, crushing ice, and making large batches of smoothies and frozen drinks.

1. Assemble the pitcher and blade assembly onto the motor base as described in the Setup section.
2. Add ingredients, ensuring not to exceed the MAX LIQUID fill line.
3. Secure the lid.
4. Select a Smart Program (e.g., SMOOTHIE, FROZEN DRINK) or use manual speeds (LOW, HIGH, PULSE).
5. When blending is complete, wait for the blades to stop completely before removing the lid and pouring.



Licuadora

La tecnología de Total Crushing™ aplasta hielo, frutas enteras y vegetales en segundos

Image: The Ninja Total Crushing Pitcher in operation, blending ingredients for a beverage.

Using the Food Processor Bowl

The Food Processor Bowl is ideal for chopping, mixing dough, and slicing/shredding ingredients.

1. Assemble the food processor bowl and desired blade/disc onto the motor base as described in the Setup section.
2. Add ingredients. For chopping, add ingredients in small, uniform pieces. For slicing/shredding, use the feed chute with the pusher.
3. Secure the lid.

4. Select the CHOP Smart Program or use the PULSE function for controlled processing. For slicing/shredding, use the HIGH speed.
5. When processing is complete, wait for the blades to stop completely before removing the lid.



Procesador de alimentos

Con cuchillas Total Crushing™, para amasar y para picar.
Incluye un disco reversible para rebanar/triturar.

Image: The Ninja Food Processor Bowl in use, demonstrating its capability to mix dough.

Using the Single-Serve Cup (Extractor)

The Single-Serve Cup with Pro Extractor Blades is perfect for making individual smoothies and nutrient extractions.

1. Fill the single-serve cup with ingredients and attach the Pro Extractor Blades Assembly as described in the Setup section.
2. Invert the cup onto the motor base and twist to lock.
3. Select the SMOOTHIE Smart Program or use manual speeds (HIGH, PULSE).
4. When blending is complete, remove the cup by twisting counter-clockwise and lifting. Replace the blade assembly with the spout lid for on-the-go convenience.



Extractor

Cuchilla Pro Extractor ideal para extraer nutrientes

Image: The Ninja Single-Serve Cup, highlighting its design for nutrient extraction and portability.

CARE AND MAINTENANCE

Cleaning

- **Always unplug the motor base before cleaning.**
- **Motor Base:** Wipe the motor base with a clean, damp cloth. Do not immerse the motor base in water or any other liquid.
- **Containers, Lids, and Blade Assemblies:** All parts are dishwasher safe (top rack only). Alternatively, wash in warm, soapy water using a non-abrasive cleaning brush. Exercise extreme caution when handling blade assemblies as the blades are very sharp.
- **Self-Cleaning (for Pitcher/Bowl):** Fill the container with warm water up to the MAX LIQUID line and add 1-2 drops of dish soap. Secure the lid. Run the SMOOTHIE program or PULSE for 30 seconds. Rinse thoroughly.

Storage

Store the appliance upright with the blade assemblies inside their respective containers and the lids securely fastened. Do not stack items on top of the containers.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Unit is not plugged in, or container/lid is not properly assembled.	Ensure the power cord is securely plugged into the outlet. Check that the container is twisted clockwise until it clicks, and the lid is pressed down until it clicks.
Ingredients are not blending smoothly.	Too many ingredients, not enough liquid, or ingredients are too large.	Reduce the amount of ingredients. Add more liquid. Cut large ingredients into smaller pieces. Use the PULSE function to break down larger chunks.
Motor stops during operation.	Overheating due to heavy load.	Unplug the unit and allow it to cool for at least 15 minutes. Reduce the load or add more liquid before restarting.
Lid is difficult to remove.	Vacuum seal created during blending.	Press the RELEASE button on the lid firmly to break the seal.

SPECIFICATIONS

- **Model Number:** CT672A
- **Brand:** Ninja
- **Color:** Black
- **Power:** 1100 Watts
- **Voltage:** 120 Volts
- **Number of Speeds:** 2 (Low, High) + Pulse and Auto-iQ Programs
- **Capacity (Total Crushing Pitcher):** 72 oz. (64 oz. max liquid)
- **Capacity (Food Processor Bowl):** 8 cups
- **Capacity (Single-Serve Cup):** 24 oz.
- **Material:** Metal, Plastic, Stainless Steel
- **Product Dimensions:** 12"D x 15"W x 12"H
- **Special Feature:** Safety Lock, Touchscreen Control
- **Dishwasher Safe Parts:** Yes (Containers, Lids, Blade Assemblies - top rack)

WARRANTY AND SUPPORT

This Ninja Smart Screen Kitchen System (CT672A) comes with a limited warranty. For specific warranty details, registration, or customer support, please refer to the warranty card included with your product or visit the official Ninja website. Do not attempt to service the appliance yourself if it requires repair; contact customer service for assistance. For further assistance, please visit www.ninjakitchen.com or contact Ninja customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question