

[manuals.plus](#) /› [Braun](#) /› [Braun MGK3245 7-in-1 Beard Trimmer and Grooming Kit User Manual](#)

Braun MGK3245

Braun MGK3245 7-in-1 Beard Trimmer and Grooming Kit User Manual

INTRODUCTION

Master your style with the rechargeable Braun MGK3245, a 7-in-1 beard trimmer designed for men. This versatile grooming kit features lifetime sharp blades and four combs, offering 13 length settings (0.5-21mm) to help you achieve your desired look across your beard, face, and hair.

Key Features:

- **Rechargeable All-in-One Groomer:** Offers unprecedented cutting performance compared to previous generations of Braun beard trimmers.
- **7-in-1 Versatility:** Designed for beard, face, and hair trimming.
- **Gillette Fusion5 ProGlide Razor:** Included for a clean shaving experience.
- **Lifetime Sharp Blades:** Ensures precise and consistent trimming results.
- **13 Length Settings:** Provides ultimate styling precision from 0.5mm to 21mm.
- **NiMH Battery:** Delivers 80 minutes of trimming with an 8-hour charge.
- **German Design and Engineering:** Reflects Braun's commitment to quality.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance to ensure safe operation and prevent injury. When using an electrical appliance, basic precautions should always be followed.

DANGER - To reduce the risk of electric shock:

- Use only in dry conditions.
- Do not submerge in water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place, store, or charge the appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning.

- This appliance is provided with a special cord set with integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it.
- Do not use an extension cord with this appliance.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

- Close supervision is necessary when this appliance is used by, on, or near children or persons with disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if the power supply has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this appliance with a damaged or broken cutter or comb, as serious skin injuries may occur.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls off, then remove plug from outlet.
- When plugging to an electrical outlet outside North America, use a plug adapter to match the outlet's pin configuration.
- Caution: The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.
- Only use the special electric cord set provided with the appliance. If the appliance is marked 491, you can use it with any Braun power supply coded 491-XXXX.

PACKAGE CONTENTS

Your Braun MGK3245 grooming kit includes the following items:



Image: Overview of the Braun MGK3245 7-in-1 Grooming Kit and its included accessories.

- 1 x Beard & Hair Trimmer (main unit)
- 1 x Detail Trimmer head
- 4 x Combs (for various length settings)
- 1 x Gillette Fusion5 ProGlide Razor

- 1 x Smart Plug Charger
- 1 x Cleaning Brush
- User Manual

SETUP

Charging the Device

Before first use, fully charge your trimmer. A full charge takes approximately 8 hours and provides up to 80 minutes of cordless trimming time. The device also features a quick charge function for urgent grooming needs.

- Connect the smart plug charger to the trimmer and then to a power outlet.
- The charging indicator light will illuminate to show the device is charging.
- Once fully charged, disconnect the charger.

Attaching and Detaching Trimmer Heads/Combs

The Braun MGK3245 comes with various interchangeable heads and combs for different grooming tasks. These attachments easily snap on and off the main trimmer unit.



Image: The Braun MGK3245 trimmer showcasing its various interchangeable heads and combs.

- To attach a head: Align the desired trimmer head with the main unit and press firmly until it clicks into place.
- To detach a head: Gently pull the head away from the main unit.
- To attach a comb: Slide the comb onto the trimmer head until it locks.

- To detach a comb: Gently slide the comb off the trimmer head.

OPERATING INSTRUCTIONS

The Braun MGK3245 offers precise and versatile grooming options. Always ensure the device is charged before use.

Beard Trimming

Achieve your desired beard length with the included combs.



Image: A man using the Braun MGK3245 trimmer to precisely shape and trim his beard.

- Select the appropriate comb for your desired beard length (0.5-21mm).
- Attach the comb to the trimmer head.
- Turn on the trimmer and move it against the direction of hair growth.
- Use smooth, even strokes for consistent results.

Hair Clipping

Use the longer combs for hair clipping.



Image: A man utilizing the Braun MGK3245 for hair clipping, demonstrating its use for head hair.

- Attach the desired hair comb (e.g., for 13-21mm lengths).
- Start clipping from the nape of the neck, moving upwards.

- Ensure even pressure and consistent movement for a uniform cut.

Detail Trimming and Edging

For precise lines and sharp edges, use the detail trimmer head.



Image: A close-up view of the Braun MGK3245's sharp precision blades, highlighting their effectiveness for detailed work.

- Replace the main trimmer head with the detail trimmer head.
- Carefully define beard lines, sideburns, and necklines.
- Use gentle pressure for accurate results.

Clean Shaving with Gillette ProGlide

For a smooth, clean shave on areas where you don't want hair, use the included Gillette Fusion5 ProGlide razor.

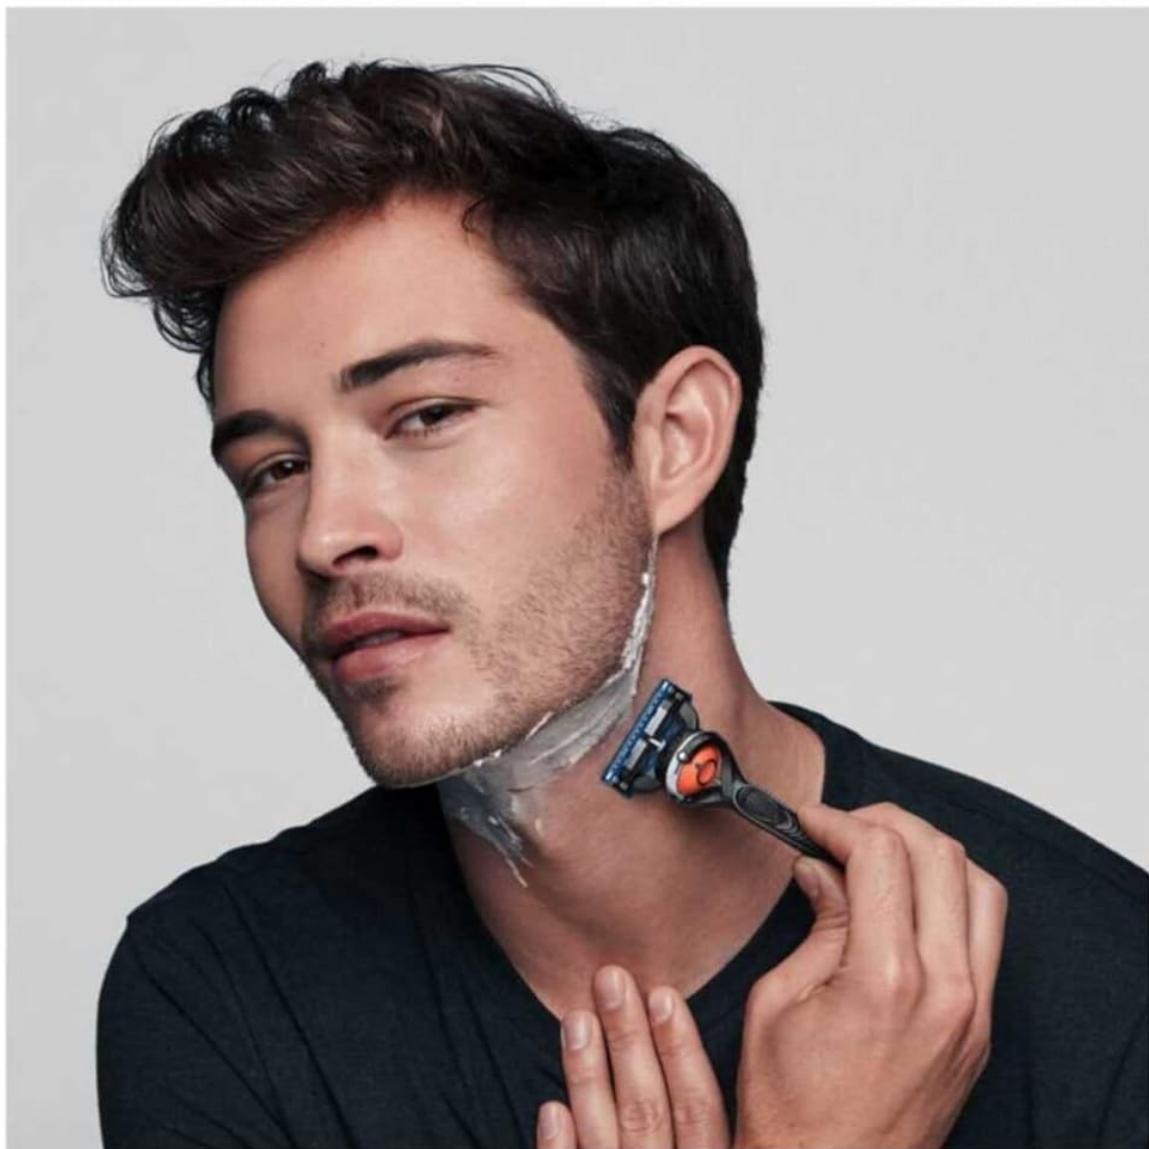


Image: A man using the included Gillette Fusion5 ProGlide razor to achieve a clean, smooth shave on his neck.

- Apply shaving cream or gel to the area to be shaved.
- Use the Gillette ProGlide razor with light strokes for a close and comfortable shave.
- Rinse the razor frequently during shaving.

Official Product Video: Braun All-in-one Trimmer 3 MGK 3245

Video: This official video from Procter & Gamble demonstrates the key features and versatility of the Braun All-in-one Trimmer 3 MGK 3245, including its various attachments and uses for beard, face, and hair grooming.

MAINTENANCE

Cleaning and Care

Regular cleaning ensures optimal performance and hygiene of your trimmer.



85% daha az plastik
önceki ambalajlara kıyasla



Image: The Braun MGK3245 trimmer head being rinsed under running water, demonstrating its fully washable design for easy cleaning.

- The trimmer head and combs are fully washable. After each use, detach the head and rinse it under running water.
- Use the included cleaning brush to remove any trapped hairs from the trimmer head and combs.

- Ensure all parts are dry before reattaching or storing.
- Do not use abrasive cleaning agents or harsh chemicals.

Storage

- Store the trimmer and its accessories in a dry place, away from direct sunlight and extreme temperatures.
- Keep out of reach of children.

TROUBLESHOOTING

If you encounter any issues with your Braun MGK3245, please refer to the following common solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for at least 8 hours.
Trimmer pulls hair or cuts poorly.	Blades are clogged with hair or dull.	Clean the trimmer head and combs thoroughly. Ensure blades are free of debris. If blades are dull, consider replacement if available or contact support.
Charging indicator light does not illuminate.	Charger not properly connected or faulty.	Ensure the charger is securely connected to both the trimmer and the power outlet. Try a different outlet. If the issue persists, the charger may be faulty.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	MGK3245
Power Source	Battery Powered (NiMH)
Battery Life	Up to 80 minutes of trimming
Charging Time	8 hours for full charge
Length Settings	13 (0.5mm - 21mm)
Product Dimensions	5.39 x 2.24 x 9.92 inches
Item Weight	0.75 Pounds
Color	Blue
Manufacturer	Procter & Gamble

WARRANTY AND CUSTOMER SUPPORT

Braun products are manufactured to the highest quality standards. In the unlikely event of a defect, your product is covered by a manufacturer's warranty.

- For specific warranty details, please refer to the warranty card included in your product packaging.
- For customer support, service, or to inquire about replacement parts, please visit the official Braun website or contact their customer service line.
- Keep your purchase receipt as proof of purchase for warranty claims.