

DASH DMAF360GBAQ02

Dash Aircrisp Pro Digital Air Fryer + Oven Cooker

MODEL: DMAF360GBAQ02

Brand: DASH

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Dash Aircrisp Pro Digital Air Fryer. This appliance utilizes AirCrisp technology to circulate hot air, cooking food thoroughly with significantly less added fat compared to traditional frying methods. Please read all instructions carefully before first use and retain this manual for future reference.

2. SAFETY INSTRUCTIONS

- Always place the air fryer on a stable, heat-resistant surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure adequate ventilation around the air fryer during operation. Do not place directly under cabinets.
- The appliance features an auto shut-off function to prevent overcooking.
- Use the cool-touch handle when removing the fry basket.
- Unplug the air fryer when not in use and before cleaning.
- Keep out of reach of children.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

3. PRODUCT OVERVIEW

The Dash Aircrisp Pro Digital Air Fryer is designed for ease of use and efficient cooking. It features a digital display, 8 preset cooking functions, and a non-stick fry basket.



Figure 1: Dash Aircrisp Pro Digital Air Fryer (Aqua, 3qt)

Components:

- Main Unit (Aqua exterior with stainless steel accents)
- Digital Display with Touch Controls
- Temperature Control Dial
- Timer Dial
- Removable Non-Stick Fry Basket (3-quart capacity)
- Cool-Touch Handle



Figure 2: Product Dimensions (12.6"D x 10.4"W x 13"H)

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and any promotional labels or stickers from the air fryer.
2. **Initial Cleaning:** Before first use, wash the removable fry basket and crisper tray with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the appliance with a damp cloth.
3. **Placement:** Place the air fryer on a dry, level, heat-resistant surface, ensuring there is at least 6 inches of clear space around the back and sides for proper ventilation. Do not place it directly under overhead cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Setting Controls

1. **Power On:** Press the power button on the digital display to turn on the air fryer.
2. **Setting Temperature:** Use the temperature control dial to select your desired cooking temperature

(ranging from 70°F to 400°F).

3. **Setting Time:** Use the timer dial to set the cooking duration (up to 30 minutes).
4. **Using Presets:** The digital display offers 8 presets for common foods such as steak, chicken, fresh fries, fish, seafood, frozen fries, pizza, and baked goods. Select the appropriate preset for automatic temperature and time settings.



Figure 3: Digital Display and Presets

5.2 Cooking Process

1. **Prepare Food:** Place your food in the non-stick fry basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the fry basket securely into the air fryer unit.
3. **Start Cooking:** Once temperature and time are set (manually or via preset), the air fryer will begin heating. The AirCrisp technology circulates hot air for efficient cooking.
4. **Mid-Cycle Shaking/Flipping:** For best results, especially with items like fries or nuggets, it is recommended to pull out the basket halfway through the cooking cycle and gently shake or flip the food. The air fryer will pause when the basket is removed and resume when reinserted.
5. **Completion:** The air fryer will automatically shut off and emit an audible signal when the timer reaches zero. Carefully remove the basket using the cool-touch handle.

Your browser does not support the video tag.

Video 1: Dash 3Qt Air Crisp Pro Digital Air Fryer in action, demonstrating basket removal and food preparation.



Figure 4: AirCrisp Technology for even cooking.

6. COOKING GUIDE (PRESETS)

The Dash Aircrisp Pro offers 8 convenient presets for various food types. These are general guidelines and may require adjustment based on food quantity and desired crispness.

Preset	Recommended Temperature	Recommended Time
Steak	400°F	Variable
Chicken	400°F	Variable
Fresh Fries	400°F	Variable
Fish	330°F	Variable
Seafood	370°F	Variable
Frozen Fries	400°F	Variable

Preset	Recommended Temperature	Recommended Time
Pizza	350°F	Variable
Baked Goods	350°F	Variable

Note: Always refer to a recipe guide for precise cooking times and temperatures for specific dishes.

3 QUART FRYING DRAWER

FITS UP TO A 3LB CHICKEN

GREAT RECIPES INCLUDED

Figure 5: The 3-quart frying drawer and included recipe guide.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your air fryer.

- **Before Cleaning:** Always unplug the air fryer and allow it to cool completely before cleaning.
- **Fry Basket:** The non-stick fry basket is easy to clean. It is recommended to hand wash the basket with warm, soapy water. While some parts may be dishwasher safe, hand washing helps preserve the non-stick coating.
- **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.

- **Interior:** Wipe the interior of the appliance with a damp cloth. Ensure no food particles are left behind.

8. TROUBLESHOOTING

If you encounter any issues with your Dash Aircrisp Pro Digital Air Fryer, please refer to the following common troubleshooting tips:

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the timer is set.
- **Food Not Cooking Evenly:** Do not overfill the fry basket. Shake or flip food halfway through the cooking cycle. Ensure the temperature and time settings are appropriate for the food type.
- **White Smoke from Appliance:** This may occur if cooking fatty foods. Ensure the basket and interior are clean from previous cooking residue.
- **Basket Not Sliding In/Out Smoothly:** Ensure the basket is correctly aligned with the tracks. Check for any food debris obstructing the mechanism.






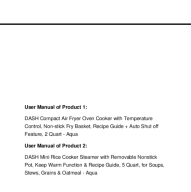
9. SPECIFICATIONS

Feature	Specification
Model Number	DMAF360GBAQ02
Capacity	3 Quarts (2.84 Liters)
Color	Aqua
Wattage	1200 Watts
Voltage	110-120V
Temperature Range	70°F - 400°F
Control Method	Touch / Dial
Special Feature	Programmable, Auto Shut-Off
Material	Plastic, Metal
Product Dimensions	12.6"D x 10.4"W x 13"H
Item Weight	8.8 Pounds
UPC	850008497339

10. WARRANTY AND SUPPORT

Your Dash Aircrisp Pro Digital Air Fryer is backed by a 1-year manufacturer warranty. For customer support, please contact our U.S. based support team. You can also visit the official [DASH Store](#) for more information and products.

Related Documents - DMAF360GBAQ02

 <p>DASH DELUXE AIR FRYER AirCrisp™ Technology 6 Quart Capacity 1700 Watts</p>	<p>Dash Deluxe Air Fryer: User Manual, Features, and Recipes</p> <p>Comprehensive guide for the Dash Deluxe Air Fryer (DFAF455GB), including important safety instructions, parts and features, usage guide, cleaning tips, troubleshooting, and a collection of delicious recipes.</p>
 <p>DASH DIGITAL TASTI-CRISP™ AIR FRYER Instruction Manual / Recipe Guide</p>	<p>Dash Tasti-Crisp™ Digital Air Fryer Instruction Manual and Recipe Guide</p> <p>Comprehensive guide for the Dash Tasti-Crisp™ Digital Air Fryer, including important safety information, parts and features, operating instructions, tips and tricks, temperature charts, cleaning and maintenance, troubleshooting, and a variety of recipes.</p>
 <p>DASH COMPACT AIR FRYER AirCrisp™ Technology 2 Quart Capacity 1700 Watts</p>	<p>Dash Compact Air Fryer DCAF150: User Manual, Recipes & Support</p> <p>Comprehensive guide for the Dash Compact Air Fryer (DCAF150), including important safety instructions, parts identification, usage tips, troubleshooting, a detailed recipe book, and customer support information.</p>
 <p>DASH DIGITAL COMPACT AIR FRYER AirCrisp™ Technology 2 Quart Capacity 1700 Watts</p>	<p>Dash Digital Compact Air Fryer DCAF155 User Manual and Recipe Book</p> <p>Comprehensive user manual for the Dash Digital Compact Air Fryer (DCAF155) featuring AirCrisp™ Technology. Includes detailed safety instructions, operating guide, parts identification, usage tips, cooking charts, cleaning and maintenance, troubleshooting, a collection of recipes, customer support information, and warranty details.</p>
 <p>User Manual of Product 1: DASH Tasti-Crisp™ Digital Air Fryer with AirCrisp Technology. Custom Presets, Temperature Control, and Auto Shut-Off Features: 5.8 Quart - Aqua</p> <p>User Manual of Product 2: DASH Mini Rice Cooker Steamer with Removable Nonstick Pot, Keep Warm Function & Recipe Guide, 5-Quart, for Soups, Steams, Omelets & Grilled - Aqua</p>	<p>DASH Air Fryer & Rice Cooker User Manual and Recipe Guide</p> <p>Comprehensive user manual and recipe guide for the DASH Tasti-Crisp™ Digital Air Fryer (DCAF260) and the DASH Mini Rice Cooker Steamer (DRCM200), featuring setup, operation, maintenance, troubleshooting, and recipes.</p>
 <p>User Manual of Product 1: DASH Compact Air Fryer Oven Cooker with Temperature Controls, Non-stick Fry Basket, Recipe Guide & Auto Shut-Off Features: 2.6 Quart - Aqua</p> <p>User Manual of Product 2: DASH Mini Rice Cooker Steamer with Removable Nonstick Pot, Keep Warm Function & Recipe Guide, 5-Quart, for Soups, Steams, Omelets & Grilled - Aqua</p>	<p>DASH Compact Air Fryer & Mini Rice Cooker User Manuals and Recipe Guides</p> <p>Comprehensive user manuals and recipe guides for DASH Compact Air Fryer (DCAF150) and DASH Mini Rice Cooker (DRCM200), offering cooking instructions, safety information, and culinary inspiration from StoreBound.</p>