



Manuals.plus /

- › SINGING WOOD /
- › SINGING WOOD SBX030C Portable CD Player Boombox Instruction Manual

SINGING WOOD SBX030C

SINGING WOOD SBX030C Portable CD Player Boombox Instruction Manual

Model: SBX030C

INTRODUCTION

Thank you for purchasing the SINGING WOOD SBX030C Portable CD Player Boombox. This device offers versatile audio playback options, including a top-loading CD player, AM/FM stereo radio, and an auxiliary line-in for external devices. Designed for portability, it can be powered by AC or batteries, making it suitable for both indoor and outdoor use. Please read this manual thoroughly before operating the unit to ensure proper use and to maximize your listening experience.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PACKAGE CONTENTS

- SINGING WOOD SBX030C Portable CD Player Boombox
- AC Power Cord
- Instruction Manual

PRODUCT OVERVIEW: CONTROLS AND CONNECTIONS



Figure 1: Front and top view of the SBX030C Boombox with key features labeled, including the handle, CD door, volume control, power button, function button, skip buttons, play/pause, repeat/random/program buttons, AM/FM tuning knob, headphone jack, AUX in jack, LED display, telescopic antenna, and AC socket.

Front Panel Controls:

- **POWER Button:** Turns the unit ON/OFF.
- **FUNC (Function) Button:** Switches between CD, FM, and AM modes.
- **B-SKIP (Backward Skip) Button:** Skips to the previous track on CD or tunes backward on radio.
- **F-SKIP (Forward Skip) Button:** Skips to the next track on CD or tunes forward on radio.
- **PLAY/PAUSE Button:** Starts or pauses CD playback.
- **REP/RAND/PROG (Repeat/Random/Program) Button:** Controls CD playback modes.
- **VOLUME Knob:** Adjusts the audio output level.
- **TUNING Knob:** Adjusts the radio frequency in AM/FM mode.
- **LED Display:** Shows current track number or radio frequency.

Side/Rear Panel Connections:

- **HEADPHONE JACK (3.5mm):** For private listening with headphones.
- **AUX IN JACK (3.5mm):** Connect external audio devices.
- **AC SOCKET:** Connects the AC power cord for mains power.
- **TELESCOPIC ANTENNA:** Extends for improved FM radio reception.
- **FOLDABLE HANDLE:** For easy portability.

Video: An overview of the Singingwood SBX030 Series Boombox/CD Player, demonstrating its features and design. This video is provided by SGM Direct, the seller.

SETUP

Powering the Boombox

The SBX030C offers two power options: AC power for indoor use and battery power for portability.

AC Power:

1. Ensure the unit is turned OFF.
2. Insert the included AC power cord into the AC socket located on the rear of the boombox.
3. Plug the other end of the AC power cord into a standard wall outlet (AC 120V ~ 60Hz).

ENJOY THE MUSIC ANYWHERE AND ANYTIME



Figure 2: The boombox is shown connected to a wall outlet via its AC power cord, illustrating the AC power option.

Battery Power:

1. Ensure the unit is turned OFF and unplugged from AC power.
2. Open the battery compartment cover located on the bottom of the unit.
3. Insert 6 'C' size batteries (not included) into the compartment, ensuring correct polarity (+/-) as indicated.
4. Close the battery compartment cover securely.



Figure 3: The open battery compartment of the boombox, showing slots for C-size batteries. This image is a still from a video review.

OPERATING THE CD PLAYER

The SBX030C features a top-loading CD player compatible with standard audio CDs, CD-R, and CD-RW discs.

1. Press the **POWER** button to turn on the unit.
2. Press the **FUNC** button repeatedly until 'CD' mode is selected on the LED display.
3. Gently open the CD compartment door located on the top of the unit.
4. Place an audio CD onto the center spindle with the label side facing up.
5. Close the CD compartment door firmly. The CD player will begin reading the disc, and the total number of tracks will appear on the LED display.
6. Press the **PLAY/PAUSE** button to start playback. The current track number will be displayed.
7. To pause playback, press the **PLAY/PAUSE** button. Press it again to resume.
8. To skip to the next track, press the **F-SKIP** button. To go back to the beginning of the current track or to the previous track, press the **B-SKIP** button.
9. To stop playback, press the **REP/RAND/PROG** button until playback stops.

10. **Repeat Playback:** During playback, press the **REP/RAND/PROG** button once to repeat the current track (REP 1). Press it again to repeat all tracks on the disc (REP ALL). Press a third time to cancel repeat mode.
11. **Program Playback:** To program a sequence of tracks, stop CD playback. Press the **REP/RAND/PROG** button. The LED display will show 'PROG'. Use the **F-SKIP** or **B-SKIP** buttons to select your desired track, then press **REP/RAND/PROG** again to confirm. Repeat this process for up to 20 tracks. Press **PLAY/PAUSE** to start programmed playback.



Figure 4: A close-up view of the top-loading CD player compartment, showing where a CD is placed.

OPERATING THE AM/FM RADIO

The boombox features an analog AM/FM stereo radio tuner.

1. Press the **POWER** button to turn on the unit.
2. Press the **FUNC** button repeatedly until 'FM' or 'AM' mode is selected on the LED display.
3. Extend the telescopic antenna for optimal FM reception. For AM reception, rotate the unit to find the best signal.
4. Rotate the **TUNING** knob to scan for radio stations.
5. Adjust the **VOLUME** knob to your desired listening level.

USING EXTERNAL AUDIO SOURCES

Auxiliary Line-in (AUX IN)

Connect your smartphone, tablet, MP3 player, or other audio devices to the boombox using a 3.5mm audio cable (not included).

1. Press the **POWER** button to turn on the unit.
2. Press the **FUNC** button repeatedly until 'AUX' mode is selected on the LED display.
3. Connect one end of a 3.5mm audio cable to the AUX IN jack on the front of the boombox.
4. Connect the other end of the audio cable to the headphone jack or line-out port of your external audio device.
5. Start playback on your external device. The audio will be played through the boombox speakers.
6. Adjust the volume using the **VOLUME** knob on the boombox and/or the volume controls on your external device.



Figure 5: A smartphone is shown connected to the boombox's AUX IN port, demonstrating how to play audio from an external device.

Headphone Jack

For private listening, you can connect headphones to the boombox.

1. Connect a pair of headphones (not included) with a 3.5mm plug into the HEADPHONE JACK on the front of the boombox.
2. Once headphones are connected, audio will automatically be routed through the headphones, muting the boombox speakers.
3. Adjust the volume using the **VOLUME** knob on the boombox.

ENJOY THE MUSIC ANYWHERE AND ANYTIME



Figure 6: A person is shown enjoying music with headphones connected to the boombox, highlighting the private listening feature.

MAINTENANCE

Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as these may damage the finish.
- For the CD lens, use a specialized CD lens cleaner.

Battery Care

- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Do not mix old and new batteries, or different types of batteries.

CD Care

- Handle CDs by their edges to avoid fingerprints on the playing surface.
- Keep CDs in their cases when not in use to prevent scratches.

- Clean CDs with a soft, lint-free cloth, wiping from the center outwards.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC cord not properly connected; Batteries depleted or incorrectly inserted.	Check AC cord connection; Replace batteries or ensure correct polarity.
CD not playing	CD inserted incorrectly; Disc is dirty or scratched; CD compartment door not closed; Unit in wrong mode.	Insert CD with label side up; Clean or replace disc; Close CD door firmly; Press FUNC button to select CD mode.
Poor radio reception	Antenna not extended; Weak signal; Unit's position.	Extend telescopic antenna fully; Reposition the unit for better reception; Try tuning slightly.
No sound from Aux-in	Aux cable not connected; Unit in wrong mode; Volume too low on boombox or external device.	Ensure Aux cable is securely connected; Press FUNC button to select AUX mode; Increase volume on both devices.

SPECIFICATIONS

Feature	Detail
Brand	SINGING WOOD
Model	SBX030C
Connectivity Technology	Auxiliary
Color	Black with Blue Rim
Speaker Type	Stereo
Item Dimensions (L x W x H)	11.8 x 9 x 4.8 inches
Power Source	Corded Electric or Battery Powered (6 'C' batteries, not included)
Compatible Devices	Smartphone, Laptop, Tablet, MP3 Players
Surround Sound Channel Configuration	2.0
Supported Standards	CD
Bluetooth Support	No
Supported Audio Format	CD, MP3
Number of Speakers	2
Audio Output Mode	Stereo
Item Weight	3.2 Pounds
Manufacturer	Leaderwave
UPC	856752008364

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official SINGING WOOD website. Keep your purchase receipt as proof of purchase for any warranty claims.