



[Manuals.plus](#) /

> [ALLIMITY](#) /

> ALLIMITY AKB33871420 Remote Control User Manual for LG Plasma LED LCD TVs

ALLIMITY AKB33871420

ALLIMITY AKB33871420 Remote Control User Manual

For LG Plasma, LED, and LCD Televisions

1. INTRODUCTION

This manual provides instructions for the ALLIMITY AKB33871420 replacement remote control. It is designed to function with various LG Plasma, LED, and LCD TV models without requiring programming. Please read this manual carefully to ensure proper use and to maximize the functionality of your remote control.

2. PRODUCT OVERVIEW

The ALLIMITY AKB33871420 is a direct replacement remote control for a wide range of LG television models. It offers all essential functions of the original remote, providing a seamless user experience.



This image displays the ALLIMITY AKB33871420 remote control. It is black with various function buttons, including power, number keys, navigation, volume, channel, and media controls. The model numbers AKB72914202 and AKB33871420 are visible at the bottom.

Compatible Models

This remote control is compatible with a broad range of LG Plasma, LED, and LCD TV models, including but not limited to: 19LH2000-ZA, 19LS4D-ZB, 42PG100R, 42PG100R-ZA, 50PG100R, 50PG100R-ZA, LGM1962D-WC.AEU, M1962D, M197WDL, M197WDP, M197WDP-PC, M2062D, M2262D, M2262DL, M2262DP-C, M2262DP-ZL, M227WD, M227WDP-PC, M227WDP-PZ, M2362D, M2362D-PC, M2362DP-CLBEUDLUP, M237WDP-PC, M237WD-PZ, M2762DL, M2794DP, and LG 55NANO90UPA.

3. SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open.
3. Insert two AAA batteries (not included), ensuring correct polarity (+ and -).
4. Close the battery cover securely.

The remote is ready for use immediately after battery installation; no programming is required.

4. OPERATING INSTRUCTIONS

Button Functions

Button	Function
POWER	Turns the TV on or off.
ENERGY	Adjusts the TV's energy saving mode.
AV MODE	Selects the AV mode.
INPUT	Changes the input source (e.g., HDMI, AV).
TV/RAD	Switches between TV and Radio modes.
SAVING	Activates energy saving features.
0-9	Selects channels directly.
LIST	Displays the channel list.
Q.VIEW	Returns to the previously viewed channel.
MARK/FAV	Marks content or accesses favorite channels.
+/- (Volume)	Adjusts the volume level.
P ^/v (Channel)	Changes the channel up or down.
RATIO	Adjusts the screen aspect ratio.
MUTE	Mutes or unmutes the sound.
MENU	Opens the main menu.
GUIDE	Displays the electronic program guide.
Q.MENU	Opens the quick menu.
Navigation Arrows	Navigates through menus and options (Up, Down, Left, Right).
OK	Confirms selections.
BACK	Returns to the previous screen or menu.
INFO	Displays information about the current program.
EXIT	Exits the current menu or function.
TEXT	Activates Teletext.
T.OPT	Teletext options.
SUBTITLE	Toggles subtitles on/off.

Button	Function
Media Controls	Play, Pause, Stop, Rewind, Fast Forward.
AD	Audio Description.
MARK	Marks content.
SIMPLINK	Controls connected LG devices (HDMI-CEC).

5. MAINTENANCE

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.

Storage

Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if the remote will not be used for an extended period to prevent battery leakage.

6. TROUBLESHOOTING

Remote Not Responding

- Check battery polarity. Ensure batteries are inserted correctly according to the + and - markings.
- Replace old batteries with new ones. Weak batteries are a common cause of remote control issues.
- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Point the remote directly at the TV's infrared receiver.

Limited Range

- Ensure batteries are fresh. Low battery power can reduce the remote's effective range.
- Reduce the distance between the remote and the TV.
- Remove any objects that might be blocking the infrared signal path.

7. SPECIFICATIONS

- **Model:** AKB33871420
- **Brand:** ALLIMITY
- **Connectivity Technology:** Infrared
- **Maximum Range:** 10 Meters
- **Number of Buttons:** 10 (*Note: This specification may refer to primary function groups. The remote features a comprehensive set of controls as depicted in the product image.*)
- **Controller Type:** Push Button Control
- **Special Feature:** No programming required
- **Dimensions:** 4 x 0.9 x 19 cm
- **Weight:** 90 g

8. WARRANTY AND SUPPORT

This product comes with a 90-day warranty. For support or warranty claims, please contact the seller directly. No programming is required for this remote control; simply insert batteries for immediate use.