

Britax E1C269H

Britax Skyline 2-Stage Belt-Positioning Booster Car Seat Instruction Manual

Model: E1C269H

1. PRODUCT OVERVIEW

The Britax Skyline 2-Stage Belt-Positioning Booster Seat is designed to provide safety and comfort for your growing child. This versatile booster easily transitions from a high-back booster to a backless booster, accommodating children as they grow. It features a sleek design, allowing for a comfortable fit in most vehicles, even when installing three across.

Key features include color-coded belt guides for proper seat belt positioning, a protective seat shell, and a foam-lined headrest for impact energy absorption. The 10-position quick-adjust headrest ensures a secure fit as your child grows. For convenience, the car seat cover is easy to remove for cleaning, and it includes two dishwasher-safe cup holders.



Figure 1.1: Britax Skyline 2-Stage Belt-Positioning Booster Car Seat (Dusk)

2. SAFETY GUIDELINES

Always prioritize your child's safety by adhering to the following guidelines:

- Ensure the child meets the minimum weight and height requirements: 40 to 120 lbs and up to 63 inches in height.
- Always use the vehicle's lap and shoulder belt system with this booster seat.
- Properly route the vehicle's seat belt through the color-coded belt guides.
- The shoulder belt must lie flat across the child's shoulder and chest, not on the neck or face.
- The lap belt must lie low across the child's hips, touching the thighs, not on the abdomen.
- Never use the booster seat if any part is damaged or missing.
- Do not use the booster seat with a vehicle's lap-only belt.
- Refer to your vehicle's owner's manual for specific car seat installation instructions and seating positions.



SAFE RIDE FOR YOUR GROWING CHILD

Figure 2.1: Ensuring a safe ride for your growing child.

3. PRODUCT COMPONENTS

The Britax Skyline booster seat consists of the following main components:

- **Protective Seat Shell:** The main structure of the booster seat.
- **Foam-Lined Headrest:** Adjustable headrest for head and neck protection.
- **Side Cushions:** Provide additional side impact protection.
- **Color-Coded Seatbelt Guides:** Red guides to ensure correct routing of the vehicle's seat belt.
- **Removable Cup Holders:** Two integrated cup holders for drinks and snacks.
- **Premium Quick-Push Lower Connectors:** For securing the booster to the vehicle's lower anchors (LATCH system).
- **Plush Foam Padding and Built-In Arm Rests:** For enhanced child comfort.



Figure 3.1: Key components and features of the booster seat.

4. SETUP AND INSTALLATION

The Britax Skyline booster seat can be used in two modes: Highback and Backless.

4.1 Highback Booster Mode Installation

1. Place the booster seat firmly on the vehicle's seat.
2. Attach the premium quick-push lower connectors to the vehicle's lower anchors (LATCH system) if available. This secures the booster when unoccupied.
3. Ensure the booster seat is stable and does not move excessively.
4. Seat your child in the booster seat.
5. Route the vehicle's lap belt through the red lap belt guides on the booster seat, ensuring it lies low across the child's hips and touches the thighs.
6. Route the vehicle's shoulder belt through the red shoulder belt guide near the child's shoulder, ensuring it lies flat across the shoulder and chest.
7. Buckle the vehicle's seat belt and pull to remove any slack.

SAFE CONNECTIONS

Premium Lower Anchor Connectors Secure Car Seat in the Vehicle



Figure 4.1: Lower anchor connectors for secure installation.

4.2 Backless Booster Mode Conversion and Installation

To convert to backless mode, detach the backrest from the booster base. Refer to the product's physical manual for specific release mechanisms, typically involving latches or buttons at the base of the backrest.

1. Once converted, place the backless booster firmly on the vehicle's seat.
2. Attach the premium quick-push lower connectors to the vehicle's lower anchors (LATCH system) if available.
3. Seat your child in the backless booster.
4. Route the vehicle's lap belt through the red lap belt guides on the booster base, ensuring it lies low across the child's hips and touches the thighs.
5. The vehicle's shoulder belt should be positioned across the child's shoulder and chest. If the shoulder belt does not fit properly, use the included shoulder belt positioning clip (if applicable) to adjust its height.
6. Buckle the vehicle's seat belt and pull to remove any slack.

SAFETY FIT FOR A BIG KID

Easily Transitions From
a High Back to a
Backless Booster



Figure 4.2: The booster seat transitions from highback to backless mode.

5. OPERATION AND ADJUSTMENTS

5.1 Headrest Adjustment

The 10-position quick-adjust headrest allows you to easily customize the fit for your growing child. To adjust, locate the adjustment lever or button on the back or top of the headrest. Squeeze or press the lever/button and slide the headrest up or down to the desired height. Ensure the headrest is locked into position before each use.

10-POSITION QUICK-ADJUST HEADREST


Creates a Comfortable, Secure Fit
as Your Child Grows



Figure 5.1: The 10-position headrest adjusts to fit your child as they grow.

5.2 Proper Belt Positioning

Correct belt positioning is crucial for safety. The color-coded belt guides are designed to simplify this process. Always ensure the lap belt is low on the child's hips, touching the thighs, and the shoulder belt is centered on the child's shoulder and chest, not touching the neck or face. Teach your child how to properly buckle themselves in using these guides as they grow.

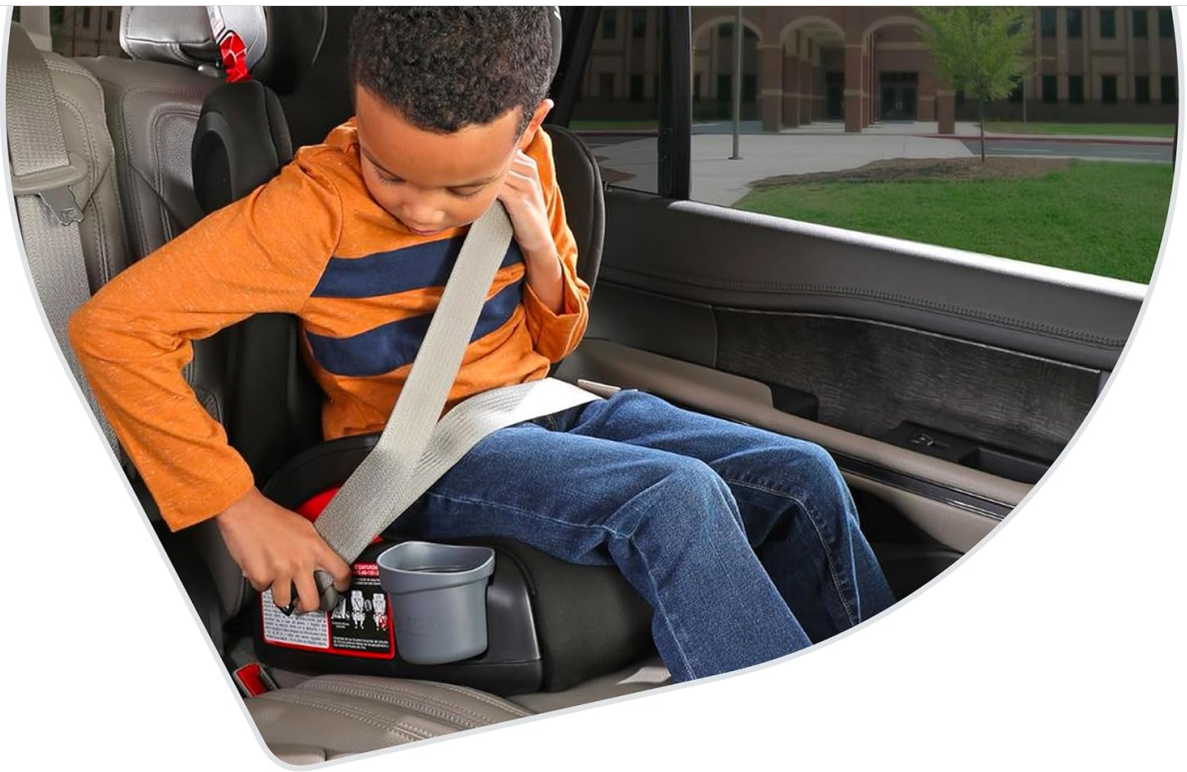

COLOR-CODED VEHICLE BELT GUIDES

Made Simple So Big Kids Can Learn
How to Buckle Themselves in Safely

Figure 5.2: Color-coded vehicle belt guides make proper buckling simple.

6. CARE AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your Britax Skyline booster seat and ensure continued safety.

- **Fabric Cover:** The car seat cover is removable for easy cleaning. It is safe to machine wash and dry. Refer to the care label on the fabric for specific washing instructions.
- **Cup Holders:** The two integrated cup holders are dishwasher-safe for convenient cleaning.
- **Shell and Components:** Wipe down the plastic and metal components with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the booster seat in a cool, dry place away from direct sunlight.

SAFE TO MACHINE WASH & DRY

Naturally Flame-Retardant Fabrics



Figure 6.1: Fabric is safe to machine wash and dry for easy cleanup.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your booster seat.

Issue	Possible Cause / Solution
Booster seat feels loose in the vehicle.	Ensure lower anchor connectors are properly attached and tightened. If not using LATCH, ensure the vehicle's seat belt is tightly buckled around the booster when unoccupied.
Shoulder belt does not fit correctly.	Adjust the headrest height to position the shoulder belt guide correctly. The belt should lie flat across the child's shoulder and chest.
Lap belt is too high on the child's abdomen.	Ensure the lap belt is routed through the red lap belt guides and is low across the child's hips, touching the thighs.
Difficulty converting to backless mode.	Ensure all release mechanisms (buttons/levers) are fully engaged. Refer to the detailed instructions in the physical manual.

8. TECHNICAL SPECIFICATIONS

Specification	Value
Model Number	E1C269H
Product Dimensions (L x W x H)	16 x 19.5 x 27.5 inches
Item Weight	11 pounds
Minimum Weight Recommendation	40 Pounds
Maximum Weight Recommendation	120 Pounds
Maximum Height Recommendation	63 Inches
Material Type	Foam and Fabric (Polyester)
Orientation	Forward Facing
Headrest Positions	10-position quick-adjust
Cup Holders	2, removable, dishwasher-safe


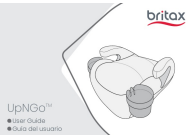 
9. WARRANTY AND SUPPORT


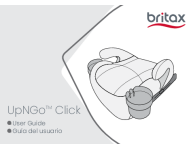 


For detailed warranty information, product registration, and customer support, please visit the official Britax website or contact their customer service department. Keeping your proof of purchase is recommended for any warranty claims.

Please note that no official product videos from the seller were available for inclusion in this manual. For visual guides, refer to the Britax official website or authorized channels.

© 2025 Britax. All rights reserved. This manual is for informational purposes only.

Related Documents - E1C269H

	<p>Britax SKYLINE Booster Seat User Guide</p> <p>Comprehensive user guide for the Britax SKYLINE booster seat, covering features, safety information, installation, and maintenance. Learn how to properly install and use the SKYLINE booster seat for optimal child safety.</p>
	<p>Britax UpNGo™ Booster Seat User Guide - Safety & Installation</p> <p>Comprehensive user guide for the Britax UpNGo™ booster seat, covering safety information, child fit, installation, and care. Ensure optimal child safety for every journey.</p>

	<p>Britax Grow With You ClickTight User Guide</p> <p>This user guide provides essential information for the Britax Grow With You™ ClickTight car seat, detailing installation, safety features, child fit requirements, and maintenance to ensure optimal child safety during travel.</p>
	<p>Britax UpNGO™ Click User Guide: Safety and Installation</p> <p>Official user guide for the Britax UpNGO™ Click child booster seat, covering features, safety, installation, and maintenance. Learn how to properly secure your child.</p>
	<p>Britax HIGHPOINT™ User Guide</p> <p>Comprehensive user guide for the Britax HIGHPOINT™ child booster seat, covering features, safety information, installation, usage, vehicle compatibility, care, and warranty. Includes instructions for both with and without backrest configurations.</p>
	<p>Britax Grow With You ClickTight Harness-2-Booster Car Seat User Guide</p> <p>Comprehensive user guide for the Britax Grow With You ClickTight and ClickTight Plus car seats, covering features, safety information, installation, child fit requirements, maintenance, and warranty.</p>