

[Manuals.plus](#) /

› [Zizo](#) /

› ZIZO Thunder T12 Wireless Bluetooth TWS Speaker User Manual

Zizo SPK-TDT12-BLK

ZIZO Thunder T12 Wireless Bluetooth TWS Speaker User Manual

Model: SPK-TDT12-BLK

1. INTRODUCTION

Thank you for purchasing the ZIZO Thunder T12 Wireless Bluetooth TWS Speaker. This speaker is designed to deliver powerful, high-definition audio with the convenience of wireless connectivity. Featuring True Wireless Stereo (TWS) functionality, IPX5 water resistance, FM radio, USB playback, and AUX-in capabilities, the Thunder T12 is built for versatile use in various environments. Please read this manual carefully before operating the device to ensure proper use and to maximize its lifespan.



Image: Front view of the ZIZO Thunder T12 Wireless Bluetooth TWS Speaker, showcasing its rugged black design and speaker grille.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the speaker to extreme temperatures (hot or cold), direct sunlight, or excessive humidity.
- While the speaker is IPX5 water resistant, it is not designed for submersion. Do not immerse the speaker in water.
- Keep the speaker away from strong magnetic fields.
- Do not attempt to disassemble, repair, or modify the speaker yourself. This will void the warranty and may cause damage or injury.
- Use only the specified charging cable and power adapter.
- Keep out of reach of children.
- Dispose of the product and its battery responsibly according to local regulations.

3. PACKAGE CONTENTS

Please check the package contents upon opening. If any items are missing or damaged, contact your retailer.

- ZIZO Thunder T12 Wireless Bluetooth TWS Speaker
- USB Charging Cable
- AUX Cable
- User Manual (this document)



Image: The ZIZO Thunder T12 speaker shown within its retail packaging, indicating typical package contents.

4. PRODUCT OVERVIEW

Familiarize yourself with the speaker's buttons and ports.

4.1 Controls and Ports

Button/Port	Function
Power Button	Press and hold to Power ON/OFF. Short press to switch modes (Bluetooth/FM/AUX/USB).
Play/Pause Button	Play/Pause music. Answer/End calls. Press and hold for TWS pairing.
Volume Down / Previous Track	Short press for previous track. Press and hold to decrease volume.
Volume Up / Next Track	Short press for next track. Press and hold to increase volume.
USB Port	For USB flash drive playback.
AUX-in Port	For wired audio connection.
Charging Port (Micro USB)	Connect the USB charging cable to charge the speaker.
LED Indicator	Indicates power, charging status, and Bluetooth pairing status.

5. SETUP

5.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status (e.g., red while charging, off when fully charged).



LONG LASTING BATTERY



Image: The ZIZO Thunder T12 speaker, highlighting its long-lasting battery capability, indicating the importance of charging.

5.2 Powering On/Off

- **To Power ON:** Press and hold the Power Button for approximately 3 seconds until you hear an audible prompt and the LED indicator lights up.
- **To Power OFF:** Press and hold the Power Button for approximately 3 seconds until you hear an audible prompt and the LED indicator turns off.

5.3 Bluetooth Pairing (Single Speaker)

1. Ensure the speaker is powered on and in Bluetooth mode. The LED indicator will flash rapidly, indicating it's ready for pairing.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for "ZIZO Thunder T12" in the list of available devices.
4. Select "ZIZO Thunder T12" to connect. Once paired, you will hear a confirmation sound, and the LED indicator will glow solid blue.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.



BLUETOOTH® WIRELESS TECHNOLOGY



Image: The ZIZO Thunder T12 speaker positioned next to a smartphone, symbolizing its Bluetooth wireless technology capabilities.

5.4 True Wireless Stereo (TWS) Pairing (Two Speakers)

TWS allows you to connect two ZIZO Thunder T12 speakers for a stereo sound experience.

1. Ensure both ZIZO Thunder T12 speakers are powered on and not connected to any Bluetooth device.
2. On one of the speakers (this will be the primary speaker), press and hold the **Play/Pause Button** for approximately 3-5 seconds until you hear a pairing tone. The speakers will automatically search for each other.
3. Once successfully paired, you will hear a confirmation sound, and the LED indicator on the primary speaker will flash slowly, while the secondary speaker's LED will glow solid blue.
4. Now, connect your Bluetooth device to the primary speaker as described in section 5.3.
5. To disconnect TWS, press and hold the **Play/Pause Button** on either speaker again.



TRUE WIRELESS STEREO



Image: Two ZIZO Thunder T12 speakers displayed together, illustrating their True Wireless Stereo (TWS) capability for enhanced sound.

5.5 AUX-in Connection

Use the AUX-in port to connect devices without Bluetooth capability.

1. Connect one end of the provided 3.5mm AUX cable to the speaker's AUX-in port.
2. Connect the other end to the headphone jack or audio output of your device.
3. The speaker will automatically switch to AUX mode, or you may need to short press the Power Button to cycle modes until "AUX Mode" is announced.

5.6 USB Playback

The speaker supports audio playback from a USB flash drive.

1. Insert a USB flash drive containing MP3 or WAV audio files into the USB port.
2. The speaker will automatically switch to USB mode and begin playing music, or you may need to short press the Power Button to cycle modes until "USB Mode" is announced.

5.7 FM Radio Operation

The speaker has a built-in FM radio function.

1. Short press the Power Button to switch to FM Radio mode.
2. Press the **Play/Pause Button** to automatically scan and save available FM stations. The speaker will then start playing the first saved station.

3. Use the **Previous Track** and **Next Track** buttons to navigate between saved stations.
4. For better FM reception, ensure the speaker is in an open area.

6. OPERATING THE SPEAKER

6.1 Music Playback Controls

- **Play/Pause:** Short press the Play/Pause Button.
- **Volume Up:** Press and hold the Volume Up / Next Track button.
- **Volume Down:** Press and hold the Volume Down / Previous Track button.
- **Next Track:** Short press the Volume Up / Next Track button.
- **Previous Track:** Short press the Volume Down / Previous Track button.

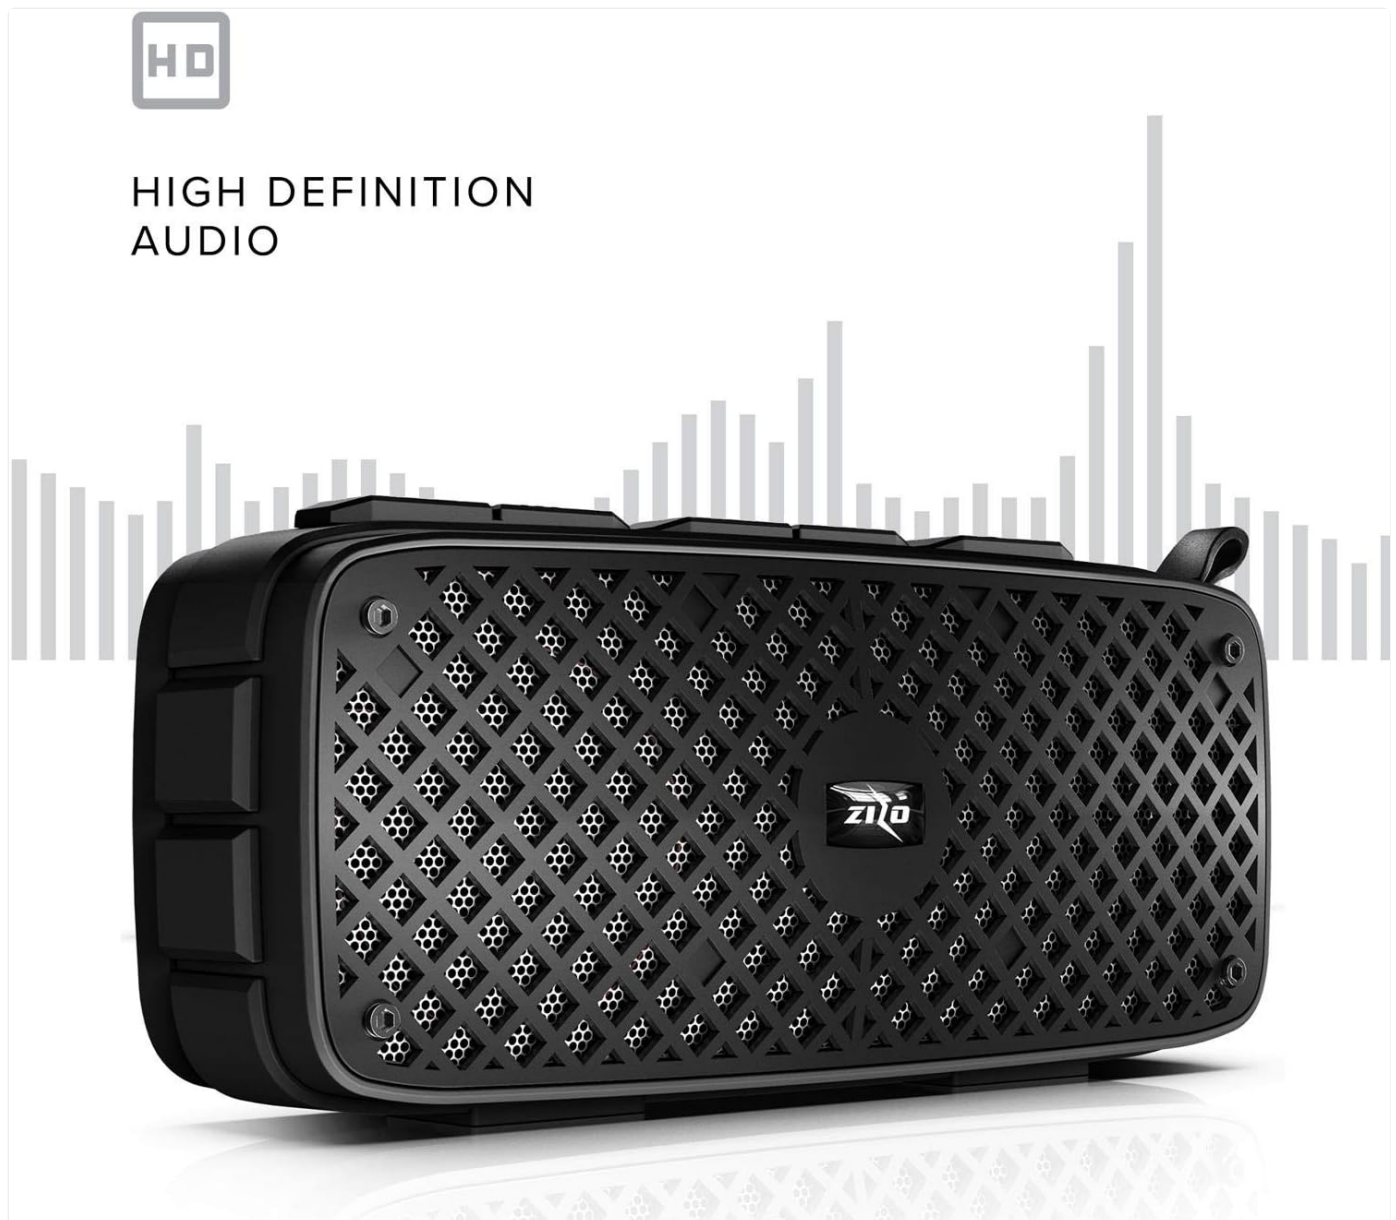


Image: The ZIZO Thunder T12 speaker with graphic sound waves, representing its high-definition audio output.

6.2 Call Management

When connected via Bluetooth, the speaker can be used for hands-free calls.

- **Answer Call:** Short press the Play/Pause Button.
- **End Call:** Short press the Play/Pause Button during a call.

- **Reject Call:** Press and hold the Play/Pause Button for 2 seconds during an incoming call.
- **Redial Last Number:** Double-press the Play/Pause Button.

6.3 Mode Switching

Short press the Power Button to cycle through available modes: Bluetooth, FM Radio, AUX-in, USB Playback.

7. MAINTENANCE

7.1 Cleaning

Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface.

7.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to charge the battery at least once every three months to maintain battery health.



IPX5 WATER
RESISTANT

Image: The ZIZO Thunder T12 speaker with water splashing around it, demonstrating its IPX5 water-resistant rating.



SHOCK ABSORBING MATERIALS



Image: The ZIZO Thunder T12 speaker with debris scattering, illustrating its construction with shock-absorbing materials for durability.

8. TROUBLESHOOTING

If you encounter issues with your ZIZO Thunder T12 speaker, refer to the following common problems and solutions:

Problem	Possible Solution
Speaker does not power on.	◦ Ensure the battery is charged. Connect the speaker to a power source and try again. ◦ Press and hold the Power Button for 3-5 seconds.

Problem	Possible Solution
No sound from the speaker.	◦ Increase the volume on both the speaker and your connected device. ◦ Ensure the speaker is in the correct mode (Bluetooth, AUX, USB, FM). ◦ If using Bluetooth, ensure the speaker is properly paired and connected. ◦ If using AUX, ensure the cable is fully inserted and not damaged.
Bluetooth pairing fails.	◦ Ensure the speaker is in Bluetooth pairing mode (LED flashing). ◦ Make sure the speaker is within 10 meters (33 feet) of your device. ◦ Turn off Bluetooth on other nearby devices that might be interfering. ◦ Forget "ZIZO Thunder T12" from your device's Bluetooth list and try pairing again. ◦ Restart both the speaker and your Bluetooth device.
Poor FM radio reception.	◦ Move the speaker to an open area, away from obstacles or electronic interference. ◦ Perform an auto-scan again to find stronger signals.
TWS pairing fails.	◦ Ensure both speakers are powered on and not connected to any other Bluetooth device. ◦ Place the speakers close to each other during TWS pairing. ◦ Try repeating the TWS pairing steps (Section 5.4).

9. SPECIFICATIONS

Feature	Detail
Model Name	Thunder T12
Item Model Number	SPK-TDT12-BLK
Brand	Zizo
Connectivity Technology	Wired, Wireless (Bluetooth)
Audio Output Mode	Stereo
Mounting Type	Tabletop
Material	Plastic
Speaker Type	Outdoor
Special Features	Wireless, Waterproof (IPX5), True Wireless Stereo (TWS), FM Radio, USB Playback, AUX-in
Recommended Uses	For Smartphones or Tablets
Compatible Devices	Television, Personal Computer, Tablet, Smartphone
Product Dimensions	5.31 x 18.54 x 7.8 cm
Item Weight	703 g

10. WARRANTY AND SUPPORT

10.1 Limited Warranty

ZIZO products are manufactured to the highest quality standards. This product is covered by a limited warranty against defects in materials and workmanship from the date of original purchase. The warranty period and terms may vary by region and retailer. Please retain your proof of purchase for warranty claims. This warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

10.2 Customer Support

For technical assistance, warranty inquiries, or general support, please visit the official ZIZO website or contact their customer service department. Refer to the product packaging or ZIZO's official website for the most up-to-date contact information.
Website: www.zizowireless.com (Example link, verify actual ZIZO support page)

© 2024 ZIZO. All rights reserved. ZIZO and Thunder T12 are trademarks of ZIZO.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question