

Ufesa AE4622

Ufesa AE4622 Cordless Stick Vacuum Cleaner User Manual

Model: AE4622

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is intended for household use only. Do not use it for commercial or industrial purposes.
- Do not use the vacuum cleaner to pick up water, liquids, or wet materials.
- Keep the appliance away from heat sources, direct sunlight, and sharp objects.
- Ensure the voltage indicated on the charger matches your local mains voltage before connecting.
- Only use the original charger and battery pack supplied with the appliance.
- Do not operate the vacuum cleaner if the power cord or plug is damaged.
- Do not allow children to play with the appliance. Close supervision is necessary when used near children.
- Always switch off the appliance and disconnect the charger before cleaning or performing maintenance.
- Do not block the air inlets or outlets during operation.
- Dispose of batteries responsibly according to local regulations. Do not incinerate batteries.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Ufesa AE4622 cordless stick vacuum cleaner.



Figure 2.1: Fully assembled Ufesa AE4622 Cordless Stick Vacuum Cleaner. This image shows the main unit, extension tube, and floor brush attached, ready for use.

Main Components:

1. **Main Unit:** Contains the motor, dust container, and battery.
2. **Handle:** Ergonomically designed with multiple positions for comfortable grip.
3. **Dust Container:** 0.6L capacity for collecting dust and debris.
4. **HEPA Filter:** Located inside the dust container for efficient air filtration.
5. **Extension Tube:** Connects the main unit to the floor brush or accessories.
6. **Turbo Brush Floor Head:** Equipped with a rotating brush for effective cleaning on various surfaces.
7. **Crevice Tool:** For cleaning narrow gaps and corners.
8. **Multi-purpose Brush:** For upholstery, curtains, and other delicate surfaces.
9. **Charger:** For recharging the vacuum's lithium battery.



Figure 2.2: The triple-position handle of the Ufesa AE4622, illustrating its adjustable angles for enhanced user comfort and versatility during cleaning tasks.



Figure 2.3: Close-up view of the turbo brush roller from the Ufesa AE4622, highlighting its bristles designed for efficient dirt and debris collection.

3. SETUP

3.1 Unpacking

Carefully remove all components from the packaging. Check for any damage during transit. Keep the packaging materials for future storage or transport if needed.

3.2 Assembly

1. **Attach the Extension Tube:** Insert the extension tube into the main unit until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the turbo brush floor head to the other end of the extension tube, ensuring it locks firmly.
3. **Attach Accessories (Optional):** For handheld use, remove the extension tube and attach the crevice tool or multi-purpose brush directly to the main unit.

3.3 Charging the Battery

Before first use, fully charge the vacuum cleaner for approximately 5 hours.

1. Ensure the vacuum cleaner is switched off.
2. Connect the charger to the charging port on the main unit.
3. Plug the charger into a suitable wall outlet.
4. The LED indicator on the main unit will show the charging status. It will typically illuminate during charging and turn off or change color when fully charged.
5. Once fully charged, disconnect the charger from the wall outlet and the vacuum cleaner.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Press the power button located on the handle to turn the vacuum cleaner on. Press it again to turn it off.

4.2 Using the Triple-Position Handle

The handle can be adjusted to three different positions for optimal comfort and reach. Press the handle release button and adjust the handle to your desired angle. Release the button to lock it in place.

4.3 Using Accessories

- **Turbo Brush Floor Head:** Ideal for cleaning hard floors and carpets. The rotating brush helps to dislodge embedded dirt and pet hair.
- **Crevice Tool:** Use this attachment for cleaning tight spaces, corners, and along edges.
- **Multi-purpose Brush:** Suitable for delicate surfaces such as upholstery, curtains, and car interiors.

To change accessories, ensure the vacuum is off. Detach the current accessory by pressing its release button and then attach the desired accessory until it clicks.

4.4 LED Lighting System

The integrated LED lights on the floor head illuminate the cleaning path, making it easier to spot dust and debris in dimly lit areas.

4.5 Emptying the Dust Container

Empty the dust container regularly to maintain optimal suction power. Do not let the dust level exceed the 'MAX' line.

1. Ensure the vacuum cleaner is switched off.
2. Press the dust container release button to detach it from the main unit.
3. Hold the dust container over a waste bin.
4. Open the bottom flap of the dust container to release the collected dirt.
5. Close the flap and reattach the dust container to the main unit until it clicks securely.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

5.1 Cleaning the Dust Container

After emptying, the dust container can be wiped clean with a damp cloth. Ensure it is completely dry before reassembling.

5.2 Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly, ideally after every few uses, or when you notice a decrease in suction power.

1. Remove the dust container as described in Section 4.5.
2. Carefully remove the HEPA filter from the dust container.
3. Tap the filter gently over a waste bin to remove loose dust.
4. If heavily soiled, rinse the filter under cold running water. Do not use detergents.
5. Allow the filter to air dry completely for at least 24 hours before reinserting it. Do not use a hairdryer or other heating devices.
6. Reinsert the dry filter into the dust container and reattach the container to the main unit.

5.3 Cleaning the Turbo Brush Roller

Hair and fibers can get tangled around the turbo brush roller, affecting its performance. Clean it periodically.

1. Ensure the vacuum cleaner is switched off and disconnected from the charger.
2. Detach the floor head from the extension tube.
3. Locate the release mechanism for the brush roller (usually a latch or screw on the side of the floor head).
4. Remove the brush roller.
5. Use scissors or a brush to remove any tangled hair or debris from the roller.
6. Reinsert the brush roller and secure it in place.

5.4 Battery Care

- Avoid fully discharging the battery frequently to prolong its lifespan.
- Store the vacuum cleaner in a cool, dry place when not in use.
- If storing for an extended period, charge the battery to about 50% and recharge every 3-6 months.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is discharged.	Charge the battery for 5 hours.
Vacuum does not turn on.	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Low suction power.	Dust container is full.	Empty the dust container.
Low suction power.	HEPA filter is clogged.	Clean or replace the HEPA filter.
Low suction power.	Nozzle or extension tube is blocked.	Check and clear any blockages.
Turbo brush not rotating.	Brush roller is tangled with hair/debris.	Clean the brush roller as described in Section 5.3.
Turbo brush not rotating.	Floor head is not properly attached.	Ensure the floor head is securely attached to the extension tube.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

- **Model:** AE4622
- **Brand:** Ufesa
- **Battery Type:** 22.2V Lithium
- **Autonomy:** Up to 35 minutes
- **Charging Time:** Approximately 5 hours
- **Dust Container Capacity:** 0.6 Liters
- **Filter Type:** HEPA
- **Special Features:** Cyclonic System, LED Lighting, Triple-Position Handle, Turbo Brush
- **Dimensions (L x W x H):** 69 x 28.5 x 19 cm (approximate, assembled)
- **Weight:** 8 Kilograms (approximate)
- **Included Components:** Multi-purpose brush, Crevice tool

8. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase or the retailer's website for specific terms and conditions regarding warranty coverage and duration.

For technical assistance, spare parts, or any questions not covered in this manual, please contact Ufesa customer support or your authorized dealer. Keep your proof of purchase for warranty claims.

For more information, you may visit the official Ufesa website: www.ufesa.es

