

Ufesa SV1200

Ufesa SV1200 Automatic Ironing and Drying Mannequin User Manual

1. INTRODUCTION

Thank you for choosing the Ufesa SV1200 Automatic Ironing and Drying Mannequin. This innovative appliance is designed to simplify your garment care routine by providing a 2-in-1 function for drying and ironing. It effectively eliminates wrinkles, deodorizes, and neutralizes odors, saving you time and energy. This manual provides essential information for the safe and efficient use of your new appliance.





Image 1.1: The Ufesa SV1200 Automatic Ironing and Drying Mannequin in use, smoothing a shirt in a home environment.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and pets.
- Unplug the appliance from the power outlet when not in use, before cleaning, or before performing any maintenance.
- Use the appliance on a stable, flat, and heat-resistant surface.
- Do not operate the appliance with a damaged cord or plug, or if the appliance malfunctions or has

been damaged in any manner.

- Do not block the air vents during operation. Ensure adequate ventilation around the unit.
- Avoid touching hot surfaces. Use handles or knobs.
- This appliance is for household use only. Do not use outdoors.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon unpacking:

- Ufesa SV1200 Main Unit
- Inflatable Mannequin Body
- Adjustable Pole with Hanger
- Weight Clamps (2 units)
- User Manual (this document)

4. PARTS DIAGRAM

Familiarize yourself with the components of your Ufesa SV1200.



Image 4.1: The Ufesa SV1200 Mannequin showing the main unit, inflatable body, and adjustable pole.

ready2go!



Image 4.2: Detail of the control knob, indicating timer settings and power switch.

1. Main Unit (Base)
2. Adjustable Pole
3. Inflatable Mannequin Body
4. Timer/Power Control Knob
5. Power Cord (not shown)
6. Weight Clamps (not shown)

5. SETUP AND ASSEMBLY

Follow these steps to assemble your Ufesa SV1200:

1. Place the main unit on a stable, flat surface.
2. Insert the adjustable pole into the designated slot on the main unit. Ensure it is securely seated.
3. Attach the inflatable mannequin body to the top of the adjustable pole. The mannequin body should fit snugly over the air outlet.
4. Ensure the mannequin body's zipper is closed to maintain inflation.



Image 5.1: Illustration of the assembly process, connecting the adjustable pole to the main unit.

6. OPERATING INSTRUCTIONS

6.1. Garment Preparation

1. For best results, use garments that are damp, such as those just removed from a washing machine (after spinning).
2. Carefully place the garment (e.g., shirt, blouse) onto the inflatable mannequin body.
3. Adjust the mannequin's zipper closure to ensure a snug fit for your garment. The mannequin accommodates sizes from S to XXL.
4. Attach the provided weight clamps to the bottom hem of the garment. This helps to stretch the fabric and minimize wrinkles during the drying and ironing process.



Image 6.1: A shirt correctly placed on the mannequin, ready for operation.

6.2. Operation

1. Plug the power cord into a suitable electrical outlet.
2. Turn the control knob to select the desired operating time. Options typically range from 30 minutes up to 180 minutes (3 hours). The appliance will begin to inflate the mannequin and generate warm air.
3. The warm air circulates through the garment, drying it and smoothing out wrinkles. This process also helps to deodorize and neutralize odors.



Image 6.2: Diagram illustrating the warm air circulation path within the garment for effective drying and wrinkle removal.

6.3. Completion

1. Once the selected time has elapsed, the appliance will automatically shut off.
2. Carefully remove the garment from the mannequin. It should be dry and significantly smoother.
3. Unplug the appliance from the power outlet.

7. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your Ufesa SV1200.

- Always unplug the appliance before cleaning.
- Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- The inflatable mannequin body can be wiped clean with a damp cloth if necessary. Ensure it is completely dry before storage.
- Store the appliance in a cool, dry place when not in use.
- Do not wrap the power cord tightly around the appliance; store it loosely to prevent damage.

8. TROUBLESHOOTING

If you encounter any issues with your Ufesa SV1200, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; control knob not set.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Turn the control knob to a time setting (not OFF).
Garment is not drying or ironing effectively.	Garment too dry initially; mannequin not properly inflated; incorrect timer setting; garment not fitted snugly.	Ensure garment is damp before placing it on the mannequin. Check that the mannequin zipper is closed. Select a longer drying time. Adjust the garment and zipper for a tighter fit.
Excessive noise during operation.	Normal operation sound; obstruction in air vents.	A certain level of fan noise is normal. Check for any obstructions around the air intake or outlet.
Odors are not completely removed.	Garment heavily soiled; insufficient operating time.	Ensure garments are clean before using the mannequin. Increase the operating time to allow for more thorough deodorizing.

9. TECHNICAL SPECIFICATIONS

- **Model:** SV1200
- **Power:** 1200 W
- **Voltage:** 230 V
- **Timer:** Up to 3 hours (180 minutes)
- **Dimensions (assembled):** Approximately 40.5 x 23 x 31 cm (Height x Width x Depth)
- **Weight:** Approximately 3.95 kg
- **Material:** Plastic, Aluminum
- **Supported Garment Sizes:** S, M, L, XL, XXL



Image 9.1: Dimensional overview of the Ufesa SV1200 Automatic Ironing and Drying Mannequin.

10. WARRANTY AND SUPPORT

Your Ufesa SV1200 Automatic Ironing and Drying Mannequin is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, service, or inquiries regarding your product, please contact your retailer or the Ufesa customer service department. Contact information can typically be found on the Ufesa official website or on your purchase documentation.

 <p>ufesa AE Inspire U3 / AE Inspire Z3 Aspirador escoba</p> <p>AE Inspire U3 / AE Inspire Z3 Aspirador escoba</p> <p>• manual de instrucciones • manual de instrucciones • manual de instrucciones • modo de aspiración • manual de instrucciones</p>	<p>Manual de Instrucciones Ufesa AE Inspire U3 / AE Inspire Z3 Aspirador Escoba Guía completa de instrucciones para el aspirador escoba Ufesa AE Inspire U3 y AE Inspire Z3. Cubre descripción, seguridad, montaje, uso, mantenimiento, solución de problemas y eliminación.</p>
 <p>ufesa deshumidificador DH5020</p> <p>• manual de instrucciones • manual de instrucciones • manual de instrucciones • modo de aspiración • Pausar/Reanudar la operación • Modo de uso</p>	<p>Manual de Instrucciones Ufesa DH5020 Deshumidificador Guía completa de usuario para el deshumidificador Ufesa DH5020, incluyendo instrucciones de seguridad, instalación, operación y mantenimiento.</p>
 <p>ufesa AF Jacana Freidora de Aire</p> <p>• manual de instrucciones • manual de instrucciones • manual de instrucciones • modo de aspiración • manual de instrucciones</p>	<p>Ufesa AF Jacana Freidora de Aire: Manual de Instrucciones y Uso Guía completa para la Freidora de Aire Ufesa AF Jacana. Aprenda a usarla de forma segura, descubra sus funciones, consejos de cocina y solución de problemas para preparar comidas saludables.</p>
 <p>ufesa CE Treviso Cafetera espresso</p> <p>• manual de instrucciones • manual de instrucciones • instrucción manual • manual de instrucciones • manual de instrucciones • Pausar/Reanudar la operación • Modo de uso</p>	<p>Manual de Instrucciones Cafetera Espresso Ufesa CE Treviso Guía completa de instrucciones para la cafetera espresso Ufesa CE Treviso. Aprenda a usar, limpiar y mantener su máquina para preparar café perfecto en casa.</p>
 <p>ufesa AR NEXUS TRIM</p> <p>• manual de instrucciones • manual de instrucciones • modo de aspiración • manual de instrucciones • manual de instrucciones • Pausar/Reanudar la operación • Modo de uso</p>	<p>Manual de Usuario Ufesa AR Nexus Trim: Afeitadora Rotativa Instrucciones completas y guías de seguridad para la afeitadora rotativa Ufesa AR Nexus Trim, cubriendo uso, carga, mantenimiento y solución de problemas.</p>
 <p>ufesa Totalchef RK7 robot de cocina</p> <p>• manual de instrucciones • manual de instrucciones • instrucción manual • modo de aspiración • manual de instrucciones • Pausar/Reanudar la operación • Modo de uso</p>	<p>Ufesa Totalchef RK7 Robot de Cocina: Manual de Instrucciones Manual de instrucciones detallado para el robot de cocina Ufesa Totalchef RK7. Aprenda a usar todas sus funciones, accesorios y programas automáticos para una cocina versátil y eficiente.</p>