

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Monzana](#) /

› [Monzana Baseline 3pcs Hard Shell Luggage Set User Manual](#)

Monzana 102383

Monzana Baseline 3pcs Hard Shell Luggage Set

USER MANUAL

Introduction

Welcome to your new Monzana Baseline 3pcs Hard Shell Luggage Set. This set is engineered for durability and ease of travel, featuring robust ABS construction, smooth-rolling spinner wheels, and integrated combination locks. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your luggage, ensuring a seamless travel experience.

Product Features

- Durable ABS Hard Shell:** Provides excellent protection against impacts and scratches, keeping your belongings safe.
- 360° Spinner Wheels:** Equipped with four multi-directional spinner wheels for effortless mobility and smooth gliding in any direction.
- Integrated Combination Lock:** Secure your belongings with a built-in, easy-to-set combination lock.
- Telescopic Handle:** An adjustable, sturdy aluminum telescopic handle offers comfortable maneuvering at multiple heights.
- Spacious Interior:** Fully lined interior with cross-straps and a zippered divider for organized and secure packing.
- Lightweight Design:** Engineered to be light yet exceptionally sturdy, minimizing weight while maximizing capacity.



The Monzana Baseline 3-piece luggage set, showcasing the small, medium, and large suitcases with their telescopic handles extended.



Detail view highlighting the robust and functional aspects: the adjustable telescopic handle, smooth 360° spinner wheels, and comfortable gel-padded side handle.



The 360° "Easy Roll" spinner wheel system ensures quiet and effortless movement across different terrains.

Setup

Setting the Combination Lock

Your luggage comes with an integrated combination lock, typically preset to 0-0-0. Follow these steps to set your personal combination:

1. Locate the lock on the side of your suitcase. The default combination is usually 0-0-0.
2. With the lock set to 0-0-0, push the reset button (a small, recessed button, often requiring a pen tip) or slide the release lever to the open position and hold it.
3. While holding the reset button/lever, dial your desired 3-digit combination. Choose a memorable number.
4. Release the reset button/lever. Your new combination is now set.
5. Test your new combination by scrambling the numbers and then dialing your set combination to open the lock.

Important: Do not forget your combination. There is no master key or override function to reset the lock if the combination is lost.



The integrated combination lock for securing your belongings.

Operating Your Luggage

Extending and Retracting the Telescopic Handle

The telescopic handle can be adjusted to multiple heights for comfortable pulling or pushing.

- To extend: Press the button located on the top of the handle and pull the handle upwards until it locks into your desired position.
- To retract: Press the button again and push the handle downwards until it fully retracts into the suitcase body.



Illustrates the extension and retraction of the telescopic handle for ergonomic use.

Using the Spinner Wheels

The 360° spinner wheels allow for smooth movement in any direction, reducing strain on your arm and shoulder.

- For upright pushing: Keep the suitcase upright and push it alongside you. The wheels will swivel to follow your direction.
- For tilting and pulling: Tilt the suitcase onto two wheels and pull it behind you, especially useful on uneven surfaces or when navigating curbs.

Packing Your Luggage

The interior features a zippered divider and elastic cross-straps to keep your belongings organized and secure during transit.

- Utilize the zippered compartment for smaller items or to separate different types of clothing.
- Use the elastic cross-straps to compress and secure your packed items, preventing them from shifting.

GERÄUMIGER INNENRAUM



The spacious interior with zippered divider and elastic cross-straps for efficient packing.

Maintenance

Cleaning the Exterior

- Wipe the hard shell exterior with a soft, damp cloth and mild soap if necessary.
- Avoid abrasive cleaners or solvents, as they can damage the finish.
- Dry thoroughly with a clean cloth.

Cleaning the Interior

- Vacuum the interior lining to remove dust and debris.
- For spills, spot clean with a damp cloth and a small amount of mild detergent. Allow to air dry completely before closing.

Wheel and Handle Care

- Periodically check wheels for debris (hair, string) and remove them to ensure smooth rolling.
- Ensure the telescopic handle extends and retracts smoothly. If it becomes stiff, a small amount of silicone spray can be applied to the shafts (avoiding the button mechanism).

Troubleshooting

Problem	Possible Cause	Solution
Combination lock won't open.	Incorrect combination entered.	Ensure you are using the correct 3-digit combination. Double-check each digit carefully.
Telescopic handle is stuck or difficult to extend/retract.	Debris in the mechanism; bent shaft; button not fully pressed.	Ensure the button is fully depressed. Check for visible obstructions and remove them. If bent, avoid forcing it to prevent further damage.

Problem	Possible Cause	Solution
Wheels are not rolling smoothly.	Debris (hair, lint) caught in the wheel mechanism; damaged wheel.	Turn the suitcase over and carefully remove any debris from around the wheels. If a wheel is damaged, contact customer support.
Zipper is stuck or difficult to move.	Fabric caught in zipper; zipper teeth misaligned.	Gently pull any caught fabric away from the zipper. Apply a small amount of zipper lubricant (e.g., wax or silicone spray) to the teeth.

Specifications

Feature	Detail
Product Dimensions (Large)	13.98 x 8.46 x 27.56 inches (35.5 x 21.5 x 70 cm)
Capacity (Large)	89 Liters
Capacity (Medium)	59 Liters
Capacity (Small/Carry-on)	34 Liters
Material	ABS Hard Shell
Wheels	4 x 360° Spinner Wheels
Lock Type	Integrated Combination Lock
Model Number	102383
ASIN	B07XTKJ88J



Vol: 34 Ltr.

Vol: 59 Ltr.

Vol: 89 Ltr.

Detailed dimensions and capacities for the M (34L), L (59L), and XL (89L) suitcases.

© 2024 Monzana. All rights reserved.