

[Manuals.plus](#) /

› [LELO](#) /

› [LELO SONA 2 Sonic Waves Clitoral Vibrator Instruction Manual](#)

LELO SONA 2

LELO SONA 2 Sonic Waves Clitoral Vibrator Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and effective use of your LELO SONA 2 Sonic Waves Clitoral Vibrator. Please read these instructions carefully before first use and retain for future reference.

PRODUCT OVERVIEW

The LELO SONA 2 is a sonic clitoral vibrator designed for external stimulation. It features SenSonic Technology, delivering gentle sonic waves without direct contact. The device is made from body-safe silicone and is fully waterproof.

SONA™ 2

sonic clitoral massager



MANUAL

how to use guide



MOISTURIZER SACHET

water-based lubricant
5 ml / 0.17 fl. oz.



CHARGING CORD

USB cable



SATIN POUCH

for storage



WARRANTY CARD

verifies product authenticity

Image: Contents of the LELO SONA 2 package. This includes the SONA 2 device, a user manual, a moisturizer sachet, a USB charging cable, a warranty card, and a satin pouch for storage.



Image: Diagram illustrating the key features of the LELO SONA 2. These include sonic wave stimulation, a large surface area for enhanced pleasure, a wider range of vibration patterns, and a waterproof design.

SETUP

Initial Charging

Before first use, fully charge your LELO SONA 2. Connect the included USB charging cable to the device and a USB power source. Charge for a maximum of 2 hours, or until the LED lights emit a steady glow, indicating a full charge.

Unlocking the Device

To unlock the device, press and hold the '+' and '-' buttons simultaneously for 3 seconds until the light turns on.

OPERATING INSTRUCTIONS

Preparation for Use

Apply a liberal amount of water-based lubricant to your body and the LELO SONA 2 before and during use for the smoothest experience.

Power On/Off and Intensity Control

- **To Turn On:** Press the '+' button. The LED lights will blink to indicate the battery level.
- **To Increase Intensity:** Press the '+' button again.
- **To Decrease Intensity:** Press the '-' button.
- **To Turn Off:** Press and hold the '()' button.

Changing Vibration Patterns

The LELO SONA 2 features 12 different pleasure settings. Press the '()' button to switch between these vibration patterns.

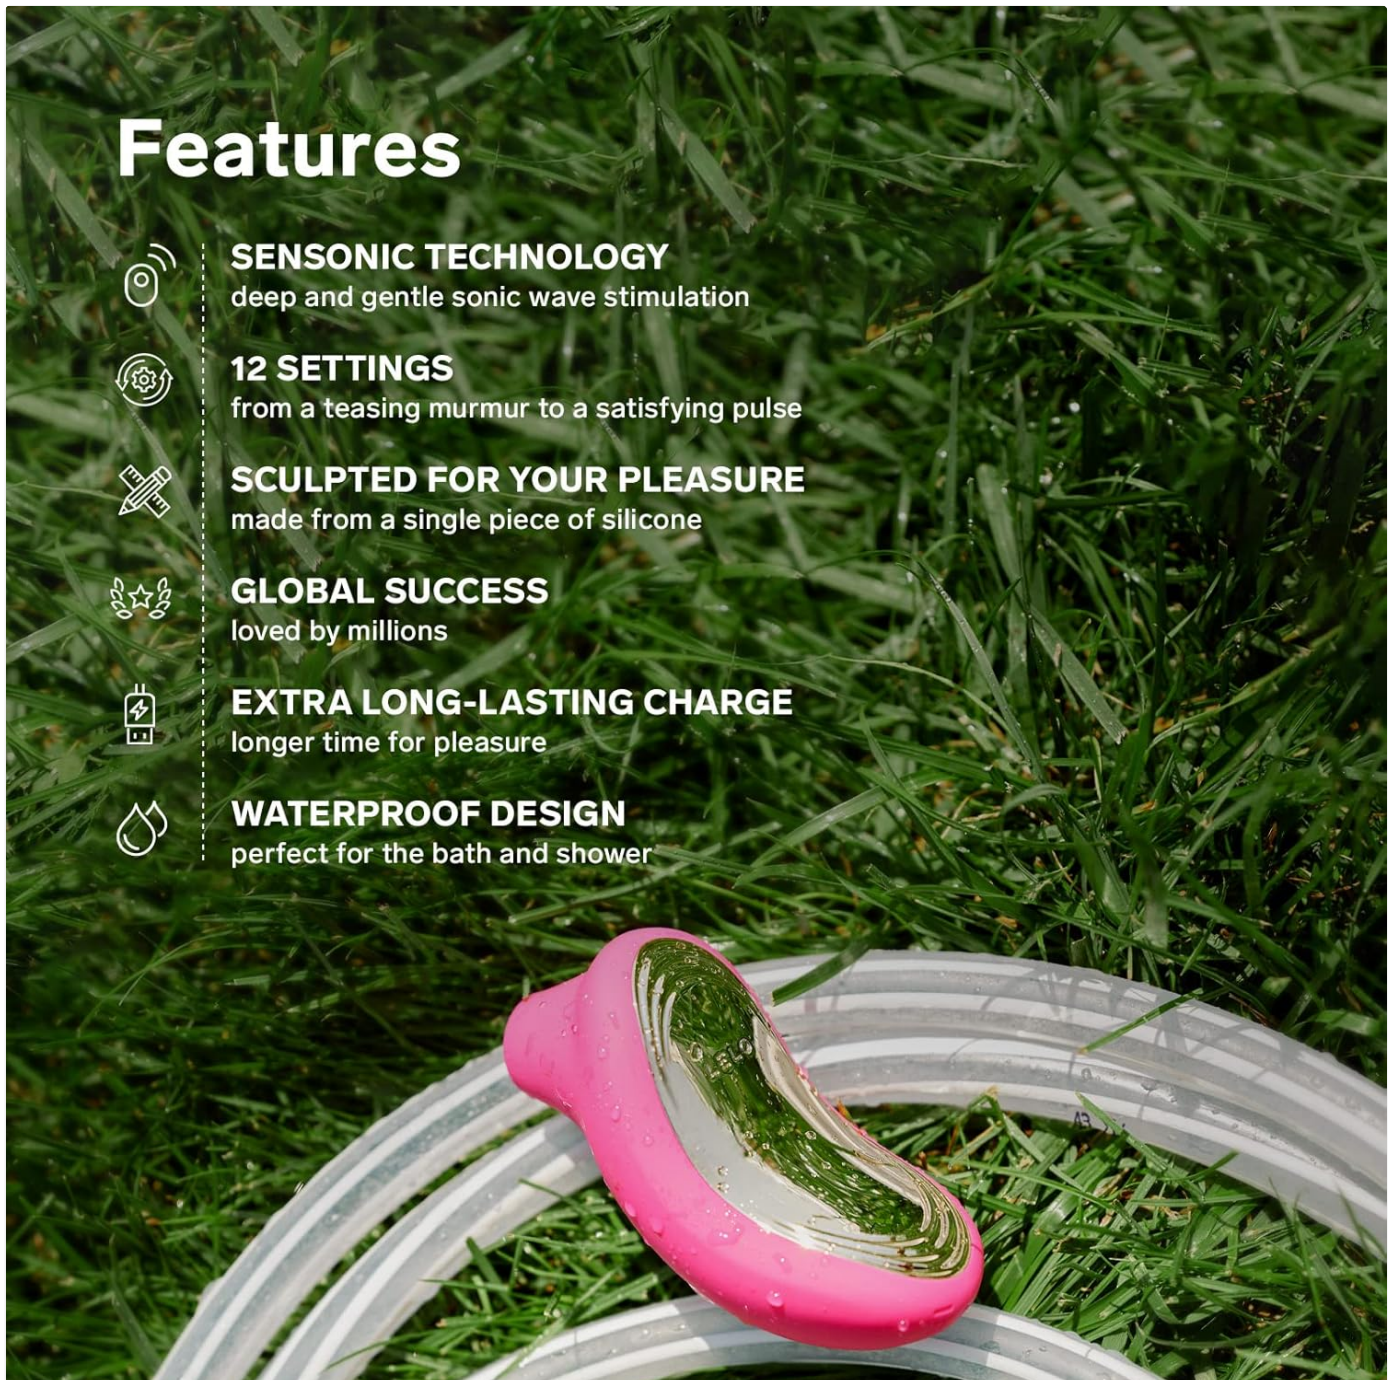


Image: A hand holding the LELO SONA 2, illustrating the button layout and basic operational steps for turning on, changing modes, and adjusting intensity.

MAINTENANCE

Cleaning

The LELO SONA 2 is fully waterproof, allowing for easy cleaning. After each use, hand wash the device with warm water and a mild soap or a specialized toy cleaner. Rinse thoroughly and allow to air dry.



Image: The LELO SONA 2 being rinsed under running water, highlighting its waterproof design for easy cleaning.

Storage

Store your LELO SONA 2 in a clean, dry place, away from direct sunlight and extreme temperatures. The included satin pouch can be used for discreet storage.

TROUBLESHOOTING

If you experience any issues with your LELO SONA 2, please consider the following:

- **Device Not Turning On:** Ensure the device is fully charged. Refer to the 'Initial Charging' section.
- **Inconsistent Operation:** Confirm the device is unlocked by pressing and holding '+' and '-' simultaneously for 3 seconds.
- **Reduced Performance:** A low battery can affect performance. Recharge the device.

For further assistance, please contact LELO customer support.

SPECIFICATIONS

Brand	LELO
Model Name	SONA 2
Item Model Number	7802
Material	Silicone, ABS Plastic
Color	Cerise
Product Dimensions	9.9 x 8.7 x 5.6 cm; 127.01 g
Water Resistance Level	Waterproof
Battery Type	1 A battery (included), USB Rechargeable
Number of Settings	12
Included Components	SONA 2, USB Charging Cable, Satin Pouch, Moisturizer Sachet, Warranty Card, User Manual



How to use

BEFORE FIRST USE

charge your device for 2 hours

TO TURN IT ON

press the + button

THE LED LIGHTS WILL BLINK

to indicate the battery level

TO SWITCH BETWEEN 12 MODES

press the () button

TO DECREASE OR INCREASE THE INTENSITY

use the + and the - buttons

TO TURN IT OFF

press and hold the () button

Image: A summary of LELO SONA 2 features, including SenSonic Technology, 12 settings, sculpted design, extra long-lasting charge, and waterproof design, with the device resting on grass.

WARRANTY

Your LELO SONA 2 includes a warranty card that verifies product authenticity. Please refer to the warranty card included in your package for detailed information regarding warranty coverage and terms. Keep your proof of purchase for any warranty claims.

SUPPORT

For product support, technical assistance, or any inquiries, please contact LELO customer service. You can find contact information on the LELO official website or through the details provided in your product packaging.

Manufacturer: LELO

Place of Business: SAN JOSE, CA, 95138 US

