

## Grundig VCH 9930

# Grundig VCH 9930 2-in-1 Cordless Vacuum Cleaner Instruction Manual

Model: VCH 9930

## 1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Grundig VCH 9930 2-in-1 Cordless Vacuum Cleaner. Please read this manual thoroughly before first use and keep it for future reference.

### Important Safety Instructions:

- Ensure the appliance is fully charged before initial use.
- Do not use the vacuum cleaner to pick up water or wet substances.
- Do not vacuum hot ashes, burning cigarettes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only original Grundig accessories and spare parts.
- This appliance is for household use only.

## 2. PRODUCT OVERVIEW

The Grundig VCH 9930 is a versatile 2-in-1 cordless vacuum cleaner designed for flexible cleaning. It functions as a powerful stick vacuum for floors and easily converts into a handheld unit for smaller tasks and hard-to-reach areas. It features cyclonic technology and a HEPA filter for efficient dust collection.

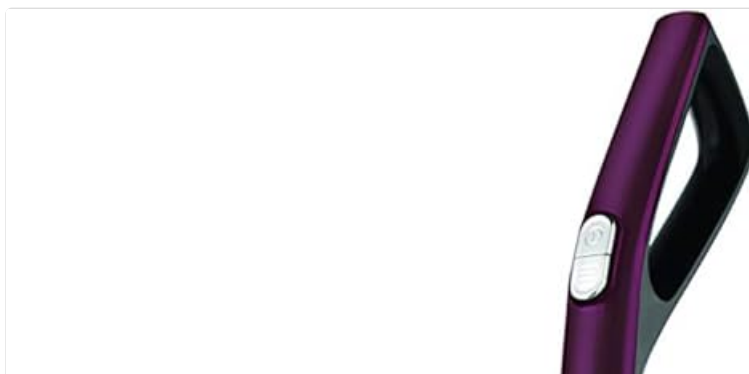




Figure 2.1: The Grundig VCH 9930 2-in-1 Cordless Vacuum Cleaner in its full stick configuration. This image displays the

main body, handle, dustbin, and floor nozzle.





Figure 2.2: The Grundig VCH 9930 demonstrating its 2-in-1 functionality, with the handheld vacuum unit detached from the main stick body. This highlights the versatility for different cleaning needs.

### 3. SETUP AND INITIAL CHARGING

#### 3.1 Assembly

1. Carefully unpack all components from the packaging.
2. Attach the main body of the vacuum cleaner to the floor nozzle by aligning the connectors and pushing until it clicks into place.
3. Insert the handle into the top of the main body, ensuring a secure fit.
4. Ensure the handheld unit is correctly seated within the main body if not already assembled.





Figure 3.1: The Grundig VCH 9930 in a folded position, illustrating its compact storage capability. This also shows the main components assembled.

### **3.2 Initial Charging**

Before first use, fully charge the vacuum cleaner's battery. The charging time for a full charge is approximately 4-6 hours. The battery indicator lights will show the charging status.

- Connect the charging adapter to the charging port on the vacuum cleaner.
- Plug the adapter into a suitable power outlet.
- The indicator lights will illuminate during charging and typically turn off or change color when fully charged.

## **4. OPERATING INSTRUCTIONS**

### **4.1 Power On/Off and Speed Settings**

Press the power button located on the handle to turn the vacuum cleaner on. Press it again to turn it off. The VCH 9930 offers two speed settings for varying cleaning needs. Press the speed selection button to switch between standard and high power modes.

### **4.2 Using as a Stick Vacuum**

For floor cleaning, ensure the handheld unit is securely docked in the main body. The motorized brush roll in the floor nozzle is effective on various hard ground surfaces. The integrated LED lights on the nozzle illuminate the cleaning path, making dust and debris more visible.



Figure 4.1: Close-up view of the Grundig VCH 9930's floor nozzle, highlighting the integrated LED lights. These lights improve visibility of dust and debris on the floor during operation.

### 4.3 Using as a Handheld Vacuum

To use the handheld unit, press the release button to detach it from the main stick body. This allows for easy cleaning of furniture, car interiors, stairs, and other elevated or confined spaces. The included crevice tool can be attached to the handheld unit for precise cleaning.



Figure 4.2: The Grundig VCH 9930 handheld unit being used to clean a surface. This demonstrates its portability and ease of use for targeted cleaning tasks.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

## 5.1 Emptying the Dustbin

1. Ensure the vacuum cleaner is turned off.
2. Locate the dustbin release button on the handheld unit.
3. Press the button to detach the dustbin.
4. Empty the contents into a waste bin.
5. Reattach the dustbin securely.

## 5.2 Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly to maintain suction power. It is recommended to clean the filter after every 3-5 uses, or more frequently depending on usage.

1. Remove the dustbin as described above.
2. Carefully remove the HEPA filter from the dustbin.
3. Tap the filter gently over a waste bin to remove loose dust.
4. If heavily soiled, rinse the filter under cold running water. Do not use detergents.
5. Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use the vacuum cleaner with a wet filter.

## 5.3 Cleaning the Brush Roll

Hair and debris can become entangled in the brush roll, reducing its effectiveness. Periodically inspect and clean the brush roll.

1. Turn off the vacuum cleaner and disconnect it from the charger.
2. Locate the brush roll access cover on the bottom of the floor nozzle.
3. Open the cover and remove the brush roll.
4. Use scissors or a brush to remove any tangled hair or debris.
5. Reinsert the brush roll and close the access cover securely.

## 6. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is discharged.	Charge the battery fully.
Reduced suction power.	Dustbin is full. Filter is clogged. Nozzle or hose is blocked.	Empty the dustbin. Clean or replace the HEPA filter. Check and clear any blockages.
Brush roll not spinning.	Hair or debris tangled in brush roll. Obstruction in nozzle.	Clean the brush roll. Remove any obstructions from the nozzle.
Short operating time.	Battery not fully charged. Battery life reduced.	Ensure battery is fully charged. If battery life is significantly reduced, consider battery replacement.

## 7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Grundig
Model Number	VCH 9930
Voltage	14.4 Volts
Power	3600 kWh
Number of Speeds	2
Noise Level	44 Decibels
Runtime	45 minutes
Filter Type	Cartridge (HEPA)
Cleaning Type	Dry
Technology	Cyclonic
Weight	1 Kilogram
Dimensions (L x W x H)	40 x 69 x 14 cm
Included Components	Crevice tool

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

The Grundig VCH 9930 comes with a 2-year availability for spare parts. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects under normal household use.

### 8.2 Customer Support

For further assistance, technical support, or to inquire about spare parts, please contact Grundig customer service. Refer to the official Grundig website or your purchase documentation for contact details specific to your region.