

## Ovitar TX2

# Ovitar Replacement Remote Control User Manual

For Android TV Box Models: TX2, TX3, TX3 Mini, TX3 Pro, TX3 Max, TX5 Pro, TX6, TX6 S, TX92, TX9 Pro

## INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Ovitar Replacement Remote Control. This remote is specifically designed for use with various Android TV Box models, ensuring seamless control over your entertainment system. Please read this manual thoroughly to ensure proper usage and to maximize the lifespan of your remote control.

## PRODUCT OVERVIEW

---

The Ovitar Replacement Remote Control is an original-style remote designed to function with specific Android TV Box models. It offers a straightforward interface for navigating your TV box's features.



**Image:** Front view of the Ovitar Replacement Remote Control, showing all buttons clearly arranged.

**Compatibility:** This remote control is compatible with the following Android TV Box models:

- TX2
- TX3, TX3 Mini, TX3 Pro, TX3 Max
- TX5 Pro
- TX6, TX6 S
- TX92, TX9 Pro

**Important:** This remote control is not compatible with other Android TV Box models or devices not listed above, including Firestick devices.

## Please Note:

This remote control just work for Android TV Box below, it can NOT work for other product:

TX2;  
TX3, TX3 Mini,  
TX3 Pro, TX3 Max  
TX5 Pro;  
TX6, TX6 S;  
TX92, TX9 pro



**Image:** The Ovitar remote control displayed with several compatible Android TV Box models, illustrating its intended use.

## SETUP

### Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

No programming is required for this remote control; it is ready for use once batteries are installed.



**Image:** Rear view of the Ovitar remote control, showing the open battery compartment ready for battery insertion.

## OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control and their functions:

Button Icon	Function	Description
(Red Circle)	<b>Power</b>	Turns the Android TV Box on or off.
(Crossed Speaker)	<b>Mute</b>	Mutes or unmutes the audio output.
▲ ▼ ◀ ▶ (Arrows)	<b>Navigation</b>	Used to move the cursor or selection Up, Down, Left, or Right.
<b>OK</b>	<b>Confirm / Select</b>	Confirms a selection or opens an item.

Button Icon	Function	Description
⏠ (House)	<b>Home</b>	Returns to the main home screen of the Android TV Box.
☰ (Three Lines)	<b>Menu</b>	Opens context-sensitive menus or options.
↶ (U-turn Arrow)	<b>Back / Return</b>	Goes back to the previous screen or menu.
(Speaker with +)	<b>Volume Up</b>	Increases the audio volume.
(Speaker with -)	<b>Volume Down</b>	Decreases the audio volume.
(Mouse Icon)	<b>Mouse Mode</b>	Activates or deactivates the on-screen mouse cursor for navigation.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Do not expose the remote control to extreme temperatures, direct sunlight, moisture, or impact.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not responding.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote is not responding.	Obstruction between remote and TV box.	Ensure a clear line of sight between the remote's IR emitter and the TV box's IR receiver.
Remote is not responding.	Remote is incompatible with the TV box.	Verify your TV box model is listed in the "Product Overview" section. This remote is not universal.
Buttons are sluggish or require multiple presses.	Low battery power.	Replace batteries.

## SPECIFICATIONS

**Brand:** Ovitar

**Model Number:** TX2 (Compatible with various TX series Android TV Boxes)

**Product Dimensions:** 6.14 x 1.73 x 0.78 inches

**Item Weight:** 1.76 ounces

**Color:** Black

**Power Source:** 2 x AAA Batteries (not included)

**Special Feature:** Ergonomic design

**Compatible Devices:** Android TV Box (Specific models listed in Product Overview)

## **WARRANTY AND SUPPORT**

---

This Ovitar remote control undergoes 100% testing before shipping to ensure functionality. While specific warranty details are not provided in this manual, please refer to your purchase documentation or contact your retailer for information regarding return policies or support for manufacturing defects.

For further assistance, please consult the support resources provided by your Android TV Box manufacturer or the retailer from whom you purchased this remote control.