

Tronsmart Element Beam (235780)

Tronsmart T8 Element Beam Bluetooth Speaker User Manual

Model: Element Beam (235780)

1. INTRODUCTION

Thank you for choosing the Tronsmart T8 Element Beam Bluetooth Speaker. This manual provides detailed instructions for the proper use, setup, and maintenance of your speaker. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

2. PACKAGE CONTENTS

- 1 x Tronsmart T8 Element Beam Bluetooth Speaker
- 1 x USB Charging Cable
- 1 x 3.5mm Audio Cable
- 1 x User Manual (this document)
- 1 x Warranty Card



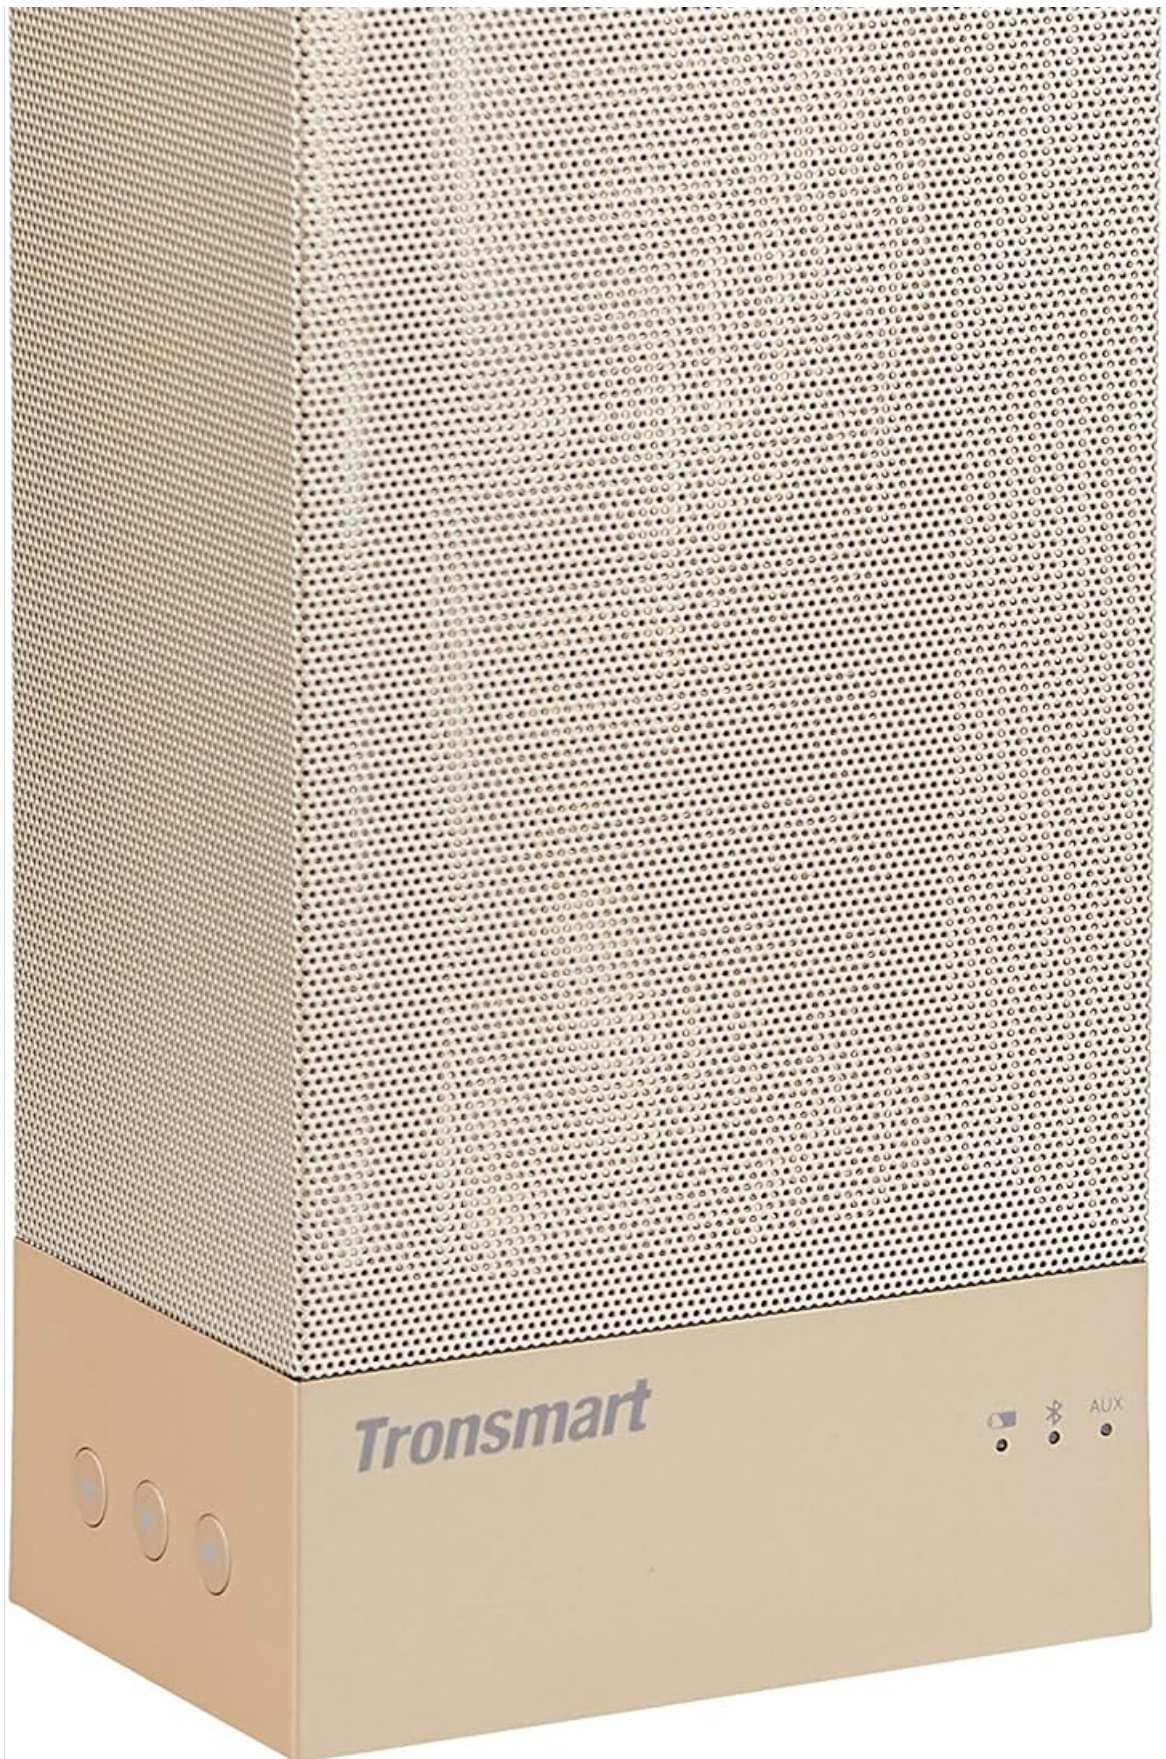 


Figure 1: The Tronsmart T8 Element Beam Bluetooth Speaker, showcasing its golden color and mesh exterior.

3. PRODUCT FEATURES

- Premium Bluetooth speaker with integrated mood lights.
- Crafted with a solid aluminium mesh exterior for durability and aesthetic appeal.
- Extended playtime of up to 18 hours with mood lights activated.

- Delivers deep sound with superior bass for an immersive audio experience.
- Bluetooth 4.1 for easy pairing and stable wireless connection.

4. SETUP

4.1 Charging the Speaker

1. Connect the small end of the USB charging cable to the DC 5V port on the speaker.
2. Connect the large end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light will change or turn off.
4. A full charge typically takes approximately 3-4 hours.

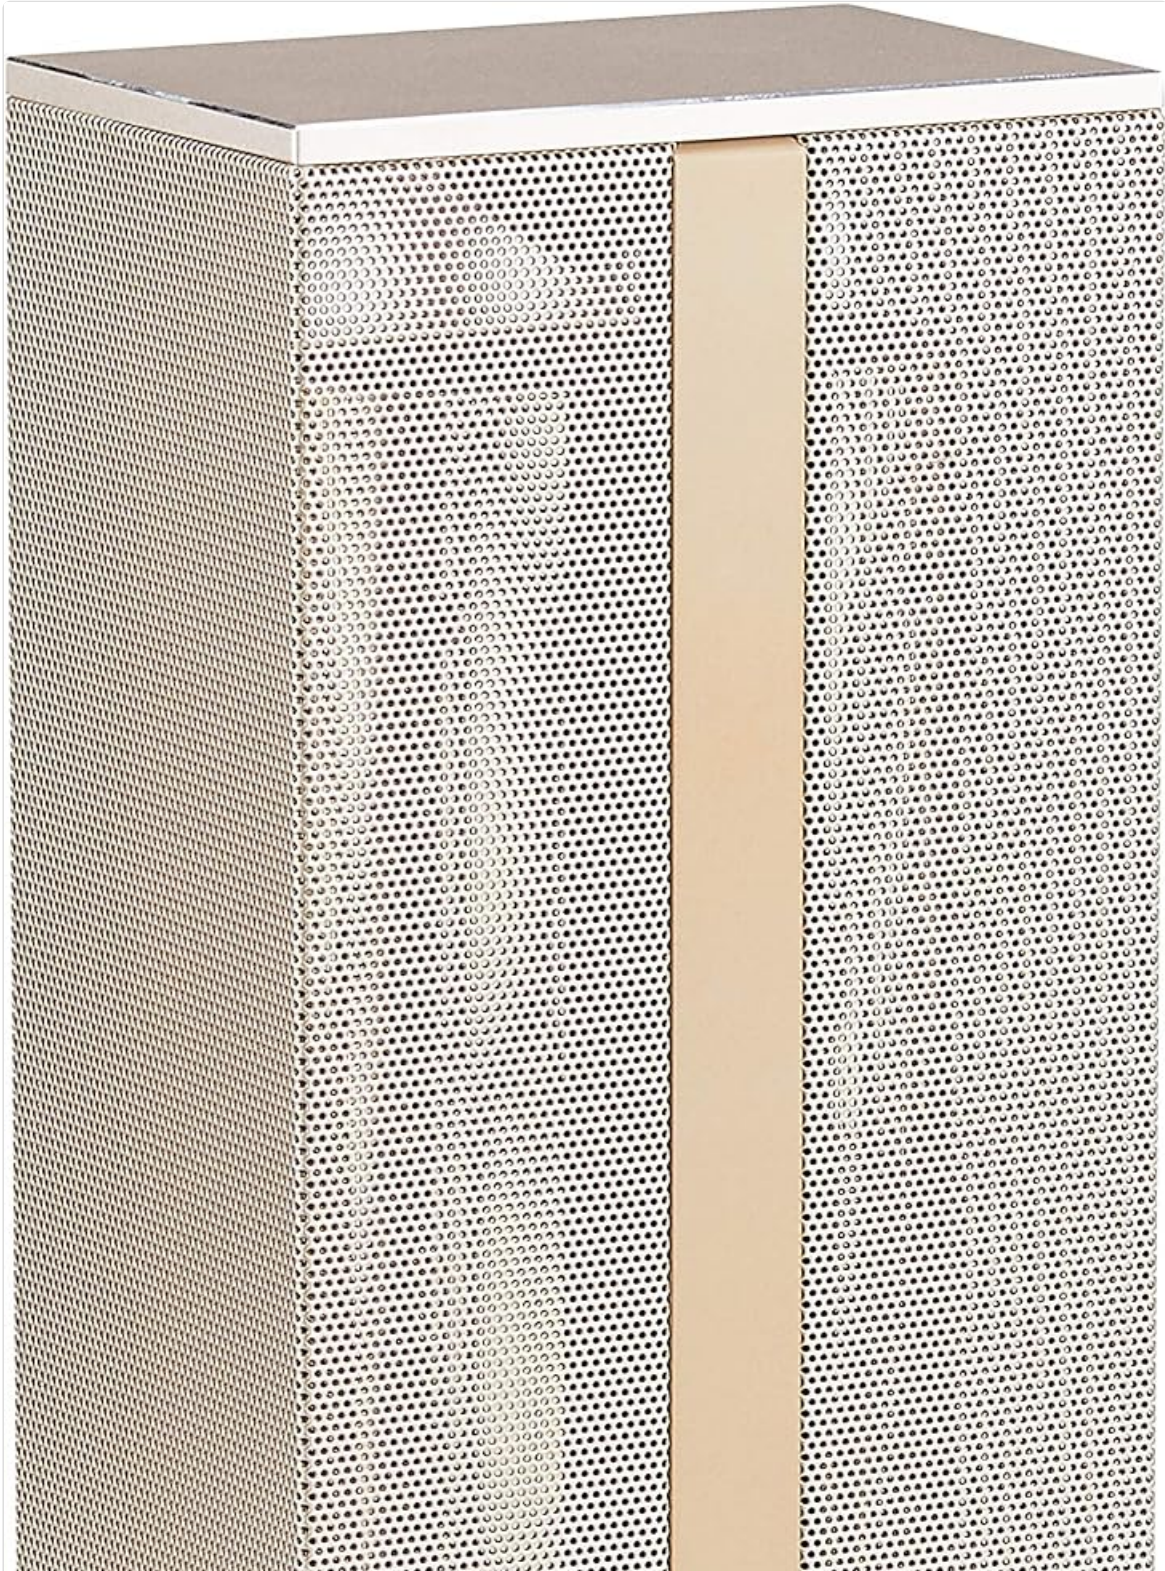 




Figure 2: Rear view of the speaker, highlighting the DC 5V charging port and AUX input.

4.2 Bluetooth Pairing

1. Ensure the speaker is fully charged.
2. Press and hold the Power button () for 2 seconds to turn on the speaker. The Bluetooth indicator light will flash rapidly, indicating it's in pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for new devices.
4. Select "Tronsmart Element Beam" from the list of available devices.
5. Once paired, the Bluetooth indicator light will stop flashing and remain solid. You will hear an audible confirmation.
6. If pairing fails, turn off the speaker and your device's Bluetooth, then repeat the steps.

4.3 AUX Mode

To use the speaker with a non-Bluetooth device, connect one end of the 3.5mm audio cable to the AUX port on the speaker and the other end to your device's audio output. The speaker will automatically switch to AUX mode.

5. OPERATING INSTRUCTIONS

5.1 Button Functions



Figure 3: Close-up of the speaker's control panel, showing the light mode, volume up, and volume down buttons.

Button/Port	Function
Power Button ()	Press and hold for 2 seconds to Power ON/OFF. Short press to Play/Pause music.
Call Button (☎)	Short press to Answer/End a call. Press and hold to Reject a call. Double press to Redial last number.
Light Mode Button ()	Short press to cycle through different LED light modes. Press and hold to turn lights ON/OFF.
Volume Up (+)	Short press to increase volume. Press and hold for next track.

Button/Port	Function
Volume Down (-)	Short press to decrease volume. Press and hold for previous track.
AUX Port	Connect external audio devices via 3.5mm audio cable.
DC 5V Port	Charging input for the speaker.

5.2 LED Light Modes

The Tronsmart T8 Element Beam features multiple LED light modes. Press the Light Mode button () to cycle through available patterns and colors. Press and hold the button to turn the lights off or on.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the speaker before first use and recharge it at least once every three months if not used regularly. Avoid fully discharging the battery frequently.
- **Water Resistance:** This speaker is not waterproof. Avoid exposing it to water, rain, or excessive moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device Bluetooth off; too far apart.	Ensure speaker is in pairing mode (flashing blue light). Turn device Bluetooth off/on. Move speaker closer to device (within 10 meters).
No sound from speaker.	Volume too low; incorrect input mode; device not playing.	Increase speaker and device volume. Check if speaker is in Bluetooth or AUX mode correctly. Ensure audio is playing on your device.
Sound distortion.	Volume too high; low battery; interference.	Reduce volume. Charge the speaker. Move away from other electronic devices.

8. SPECIFICATIONS

Feature	Detail
Model Name	Element Beam
Model Number	235780
Connectivity Technology	Bluetooth 4.1, USB, 3.5mm AUX

Feature	Detail
Battery Life	Up to 18 Hours (with mood lights)
Power Source	Battery Powered (Lithium Ion)
Output Wattage	7.5 Watts (Nominal), 5 Watts (Maximum)
Material	Aluminium
Color	Golden
Product Dimensions	9.98 x 6.48 x 23.09 cm
Item Weight	1.08 kg
Compatible Devices	Laptop, Tablet, Smartphone

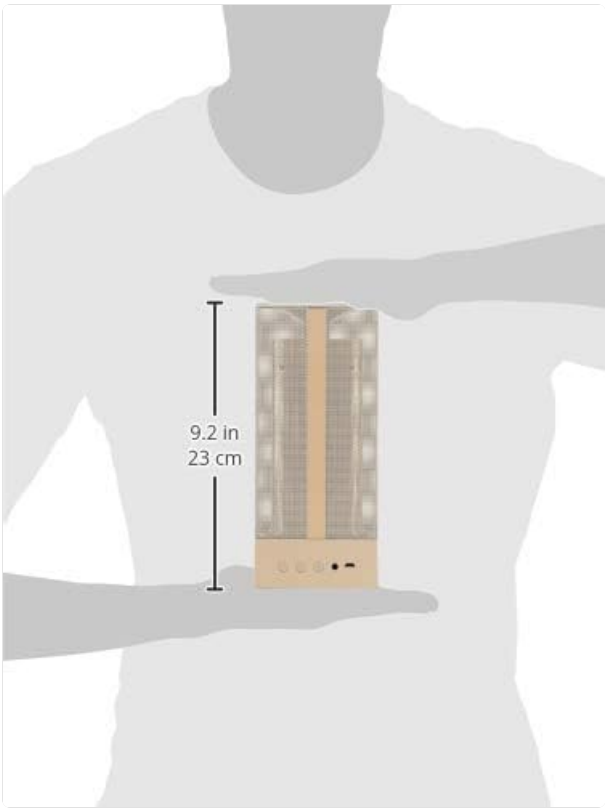 


Figure 4: The speaker's approximate dimensions shown in relation to a person's hands, indicating a height of 9.2 inches (23 cm).

9. WARRANTY AND SUPPORT

Your Tronsmart T8 Element Beam Bluetooth Speaker comes with a warranty. Please refer to the included Warranty Card for specific terms and conditions, including warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact Tronsmart customer service through their official website or the contact information provided on your Warranty Card.

Website: www.tronsmart.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question