

Costzon FWAM-02410

Costzon 37 Keys Electronic Keyboard Piano for Kids Instruction Manual

Model: FWAM-02410 | Brand: Costzon

1. INTRODUCTION

Thank you for choosing the Costzon 37 Keys Electronic Keyboard Piano for Kids. This portable musical keyboard is designed to introduce children aged 36 months to 12 years to the joy of music. It features a variety of tones, rhythms, percussion instruments, and recording capabilities to foster creativity and musical development. This manual provides essential information for safe and optimal use of your new electronic keyboard.

2. SAFETY INFORMATION

- This product is suitable for children aged 36 months to 12 years. Adult supervision is recommended during play.
- Use only the specified power source (3 AA batteries or USB charging cable). Do not mix old and new batteries, or different types of batteries.
- Ensure all connections, especially the microphone and USB cable, are securely plugged in to prevent damage or malfunction.
- Keep the keyboard away from water, moisture, and extreme temperatures to avoid electrical hazards and damage.
- Do not attempt to disassemble or modify the product. Refer all servicing to qualified personnel.
- This product has passed safety tests including ASTM, EN71, EN62115, HR4040, and 10P, ensuring it is made from high-quality, environmentally friendly ABS material.

3. PACKAGE CONTENTS

Please check the box to ensure all items are present:

- Costzon 37 Keys Electronic Keyboard Piano
- Detachable Microphone
- USB Charging Cable
- Music Stand
- Instruction Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your electronic keyboard.



Figure 1: Overall view of the Costzon 37 Keys Electronic Keyboard Piano, including the main unit, detachable microphone, and music stand.



8 Instrument Sounds



4 Percussion Instruments



8 Music Rhythms



Adjustable Speed & Volume



Record & Playback



Flash Light



Microphone



Headphone Connection

Figure 2: Close-up of the control panel, highlighting buttons for 8 instrument sounds, 4 percussion instruments, 8 music rhythms, adjustable speed & volume, record & playback, flash light, microphone, and headphone connection.

Multiple Power Supply Modes



USB Charging Cable



Power Bank



3 AA Batteries
(Not Included)

Figure 3: Illustration of the keyboard's external interfaces, including ports for microphone, power adapter, MP3 player, headphones, and USB charging.

5. SETUP

5.1 Power Supply

- **Battery Installation:** Locate the battery compartment on the underside of the keyboard. Open it using a screwdriver. Insert 3 AA batteries (not included), ensuring correct polarity (+/-). Close the compartment securely.
- **USB Power:** Alternatively, connect the provided USB charging cable to the keyboard's USB port and to a compatible USB power source (e.g., power bank, USB wall adapter, computer USB port).

5.2 Attaching the Music Stand

The music stand can be easily attached to the designated slots on the top of the keyboard. This provides a convenient place to hold music sheets or a small tablet.

5.3 Connecting the Microphone

Plug the detachable microphone into the microphone jack located on the side of the keyboard. The microphone stand is adjustable for optimal positioning.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the 'Power' button located on the control panel to turn the keyboard ON or OFF.

6.2 Playing the Keyboard

Press the white and black keys to play musical notes. The keyboard features 37 keys, providing a good range for beginners.

6.3 Changing Tones (8 Options)

Use the 'Tone' selection buttons to switch between 8 different instrument sounds (e.g., piano, organ, guitar, violin, flute, xylophone, trumpet, music box).

6.4 Using Rhythms (8 Options)

Select from 8 different rhythm modes to add background beats to your music. Use the 'Tempo' buttons to adjust the speed of the rhythm.

6.5 Percussion Instruments (4 Options)

Engage the 4 dedicated percussion instrument buttons to add drum sounds and other percussive effects to your compositions.

6.6 Recording and Playback

- **Record:** Press the 'Record' button to begin recording your performance. Play your desired notes and rhythms.
- **Stop:** Press the 'Stop' button to end the recording.
- **Play:** Press the 'Play' button to listen to your recorded melody.

6.7 Volume and Tempo Control

- **Volume:** Use the 'Volume Up' and 'Volume Down' buttons to adjust the overall sound level.
- **Tempo:** Use the 'Tempo Up' and 'Tempo Down' buttons to increase or decrease the speed of the selected rhythm.

6.8 Microphone Function

Once connected, the microphone allows children to sing along while playing the keyboard, enhancing their performance experience.

6.9 External Connections

The keyboard includes ports for MP3 input (to play external music), headphones (for private practice), and USB charging.

Product Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of the Costzon 37 Keys Electronic Keyboard Piano, showcasing its features and playability.

7. MAINTENANCE

- **Cleaning:** Wipe the keyboard with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the keyboard will not be used for an extended period to prevent leakage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from keyboard.	Low battery, power off, volume too low.	Check batteries/USB connection, turn on power, increase volume.
Microphone not working.	Microphone not connected properly, volume too low.	Ensure microphone is fully plugged in, increase volume.
Keyboard powers off unexpectedly.	Low battery.	Replace batteries or connect via USB power.

9. SPECIFICATIONS

- **Model Number:** FWAM-02410
- **Brand:** Costzon
- **Keys:** 37
- **Dimensions:** 18.5 x 8 x 1.5 inches
- **Item Weight:** 1.5 pounds
- **Recommended Age:** 36 months - 12 years
- **Power Source:** 3 AA batteries (not included) or USB charging
- **Material:** ABS Plastic
- **Features:** 8 Tones, 4 Percussion Instruments, 8 Rhythm Modes, Recording & Playback, Microphone, Music Stand, Rhythm Light, MP3/Headphone/USB Ports.

10. WARRANTY AND SUPPORT

Costzon products come with a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact Costzon customer support directly. If you encounter any issues not covered in this manual or require further assistance, please visit the official Costzon website or contact their customer service team.

Thank you for choosing Costzon!