



**Manuals.plus /**

› **Westpoint /**

› Westpoint WMW-61013ER Front Load Washing Machine User Manual

## **Westpoint WMW-61013ER**

# **Westpoint WMW-61013ER Front Load Washing Machine User Manual**

Model: WMW-61013ER

## **INTRODUCTION**

---

This manual provides essential information for the safe and efficient operation of your Westpoint WMW-61013ER Front Load Washing Machine. Please read it thoroughly before installation, operation, or maintenance.

The Westpoint WMW-61013ER is a 6Kg capacity front load washing machine designed for household use. It features an electronic panel with a knob dial and soft touch buttons, offering 8 washing programs, water and energy-saving functions, and an A+ energy label.

## **PRODUCT OVERVIEW**

---



**Figure 1:** Front view of the Westpoint WMW-61013ER Front Load Washing Machine. The image shows the white appliance with a central circular door for loading clothes. Above the door, from left to right, are the detergent dispenser drawer, the program selection knob, and the control panel with various buttons and indicators. The model number "WMW61013ER" is visible on the top right.

## Control Panel Features



**Figure 2:** Close-up of the control panel of the Westpoint WMW-61013ER. The panel includes a rotary knob for program selection (Cotton, Synthetic, Wool, Underwear), indicators for Quick, Cotton Intensive, Spin, Drum Clean, and settings for spin speed (1000, 700, 500, No Spin) and temperature (90, 60, 40, Cold). Below these are soft-touch buttons for Speed, Temp, Start/Pause, and Power.

The control panel is designed for ease of use, featuring a central program selection knob and intuitive soft-touch buttons

for various functions.

- **Program Knob:** Selects washing cycles such as Cotton, Synthetic, Wool, and Underwear.
- **Spin Speed Buttons:** Adjusts spin speed (1000, 700, 500 RPM) or selects 'No Spin'.
- **Temperature Buttons:** Sets wash water temperature (90°C, 60°C, 40°C) or 'Cold'.
- **Start/Pause Button:** Initiates or temporarily stops a washing cycle.
- **Power Button:** Turns the appliance on or off.

## SETUP AND INSTALLATION

---

### Unpacking

Carefully remove all packaging materials. Ensure no components are left inside the drum. Retain packaging for future transport if needed.

### Location

Place the washing machine on a firm, level surface. Avoid direct sunlight or extreme temperatures. Ensure adequate ventilation around the appliance.

### Leveling

Adjust the adjustable feet at the bottom of the machine to ensure it is perfectly level. Use a spirit level to verify. Proper leveling reduces vibration and noise during operation.

### Water Connection

Connect the inlet hose to a cold water tap with a 3/4-inch thread. Ensure connections are tight to prevent leaks. Position the drain hose into a standpipe or sink, ensuring it is securely fixed and not kinked.

### Electrical Connection

Connect the power cord to a grounded electrical outlet. Ensure the voltage and frequency match the specifications listed on the appliance's rating label. Do not use extension cords or adapters.

## OPERATING INSTRUCTIONS

---

### Before Each Wash

1. Sort laundry by fabric type, color, and degree of soiling.
2. Check pockets for foreign objects (coins, keys, etc.).
3. Close zippers and fasten hooks to prevent damage.
4. Load laundry into the drum, ensuring not to overload. Leave enough space for clothes to tumble freely.
5. Add appropriate detergent and fabric softener to the dispenser drawer.

### Starting a Wash Cycle

1. Press the **Power** button to turn on the machine.
2. Turn the program knob to select the desired washing program (e.g., Cotton, Synthetic).
3. Adjust spin speed and temperature using the respective buttons, if desired.

4. Press the **Start/Pause** button to begin the cycle.

## Washing Programs

Program	Description	Typical Use
<b>Cotton</b>	For durable cotton items.	Towels, bed linen, shirts.
<b>Synthetic</b>	For synthetic or mixed fabrics.	Blouses, shirts, mixed garments.
<b>Wool</b>	Gentle wash for woolens.	Wool sweaters, delicate knitwear.
<b>Underwear</b>	Specific program for delicate undergarments.	Lingerie, delicate briefs.
<b>Quick</b>	Short cycle for lightly soiled items.	Lightly soiled clothes, quick refresh.
<b>Cotton Intensive</b>	More vigorous wash for heavily soiled cotton.	Heavily soiled cottons, work clothes.
<b>Spin</b>	Drains water and spins clothes.	Removes excess water from hand-washed items.
<b>Drum Clean</b>	Self-cleaning cycle for the drum.	Regular maintenance to prevent odors.

## MAINTENANCE AND CARE

---

### Cleaning the Detergent Dispenser

Regularly pull out and clean the detergent dispenser drawer to remove detergent residue and mold buildup. Rinse with warm water and dry thoroughly before reinserting.

### Cleaning the Drum

Use the 'Drum Clean' program periodically (e.g., once a month) to clean the inside of the drum and prevent odors. Do not add laundry during this cycle.

### Cleaning the Filter

Locate the drain pump filter, usually at the bottom front of the machine. Place a shallow container underneath to catch water. Unscrew the filter cover and carefully remove any lint, coins, or debris. Clean the filter under running water and reinsert securely.

### Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

### Winterization (if applicable)

If the machine is to be stored in an area subject to freezing temperatures, drain all water from the hoses and pump to prevent damage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Machine does not start	No power supply; Door not closed properly; Start/Pause button not pressed.	Check power cord and outlet; Ensure door is latched; Press Start/Pause.
Water not filling	Water tap closed; Inlet hose kinked; Water pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Machine not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and clear drain hose; Clean drain pump filter.
Excessive vibration/noise	Machine not level; Transit bolts not removed; Overloaded drum.	Adjust leveling feet; Remove transit bolts (if applicable); Reduce load size.
Detergent residue in dispenser	Insufficient water pressure; Dispenser clogged.	Check water pressure; Clean dispenser drawer.

If the problem persists after attempting these solutions, please contact Westpoint customer support.

## SPECIFICATIONS

Feature	Detail
Brand Name	Westpoint
Model Info	WMW-61013ER
Product Dimensions	47 x 59.5 x 85 cm
Item Weight	61 Kilograms
Capacity	6 Kilograms
Installation Type	Freestanding
Color	White
Control Console	Touch
Access Location	Front Load
Material Type	Metal
Energy Efficiency	A+
Number of Programs	8

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Westpoint website. Keep your proof of purchase for warranty claims.

**Westpoint Customer Service:** For technical assistance or service requests, please contact your local Westpoint service center. Contact details can often be found on the manufacturer's website or in the included documentation.

**Online Resources:** You may find additional support and FAQs on the Westpoint Brand Store on Amazon.ae.

