

[Manuals.plus](#) /

> [Kinderplay](#) /

> Kinderplay Doll Stroller Instruction Manual - 3-in-1 Pram with Adjustable Handle, Model KP0200S

Kinderplay KP0200S

Kinderplay Doll Stroller Instruction Manual

Model: KP0200S

1. INTRODUCTION

Thank you for choosing the Kinderplay Doll Stroller, Model KP0200S. This manual provides essential information for the safe assembly, operation, and maintenance of your doll stroller. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INFORMATION

- This product is a toy and is intended for dolls only. It is not suitable for transporting real infants or pets.
- Adult supervision is recommended during assembly and play.
- Keep all packaging materials away from children to prevent choking hazards.
- Regularly check all parts for wear and tear. Discontinue use if any part is damaged.

3. PACKAGE CONTENTS

Ensure all components are present before beginning assembly:

- Doll Stroller Frame
- Pram/Gondola Fabric Unit
- Wheels (4 units)
- Adjustable Handlebar
- Doll Bag
- Instruction Manual

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Kinderplay Doll Stroller:

1. **Unfold the Frame:** Carefully unfold the metal frame until it locks into place. Ensure all locking mechanisms are secure.
2. **Attach the Wheels:** Insert each of the four wheels into their designated slots on the frame until they click securely.
3. **Install the Fabric Unit:** Place the pram/gondola fabric unit onto the frame, securing it with the clips or fasteners provided. Ensure it is firmly attached.
4. **Adjust the Handle:** The handle is adjustable. Press the buttons on either side of the handle and adjust it to the desired height. Release the buttons to lock it in place.
5. **Attach the Doll Bag:** The included doll bag can be hung on the handle for convenience.



Figure 1: Fully assembled Kinderplay Doll Stroller, Model KP0200S.



Figure 2: The doll stroller demonstrating its 3-in-1 functionality as a pram, pushchair, and carrycot.



Mango ajustable

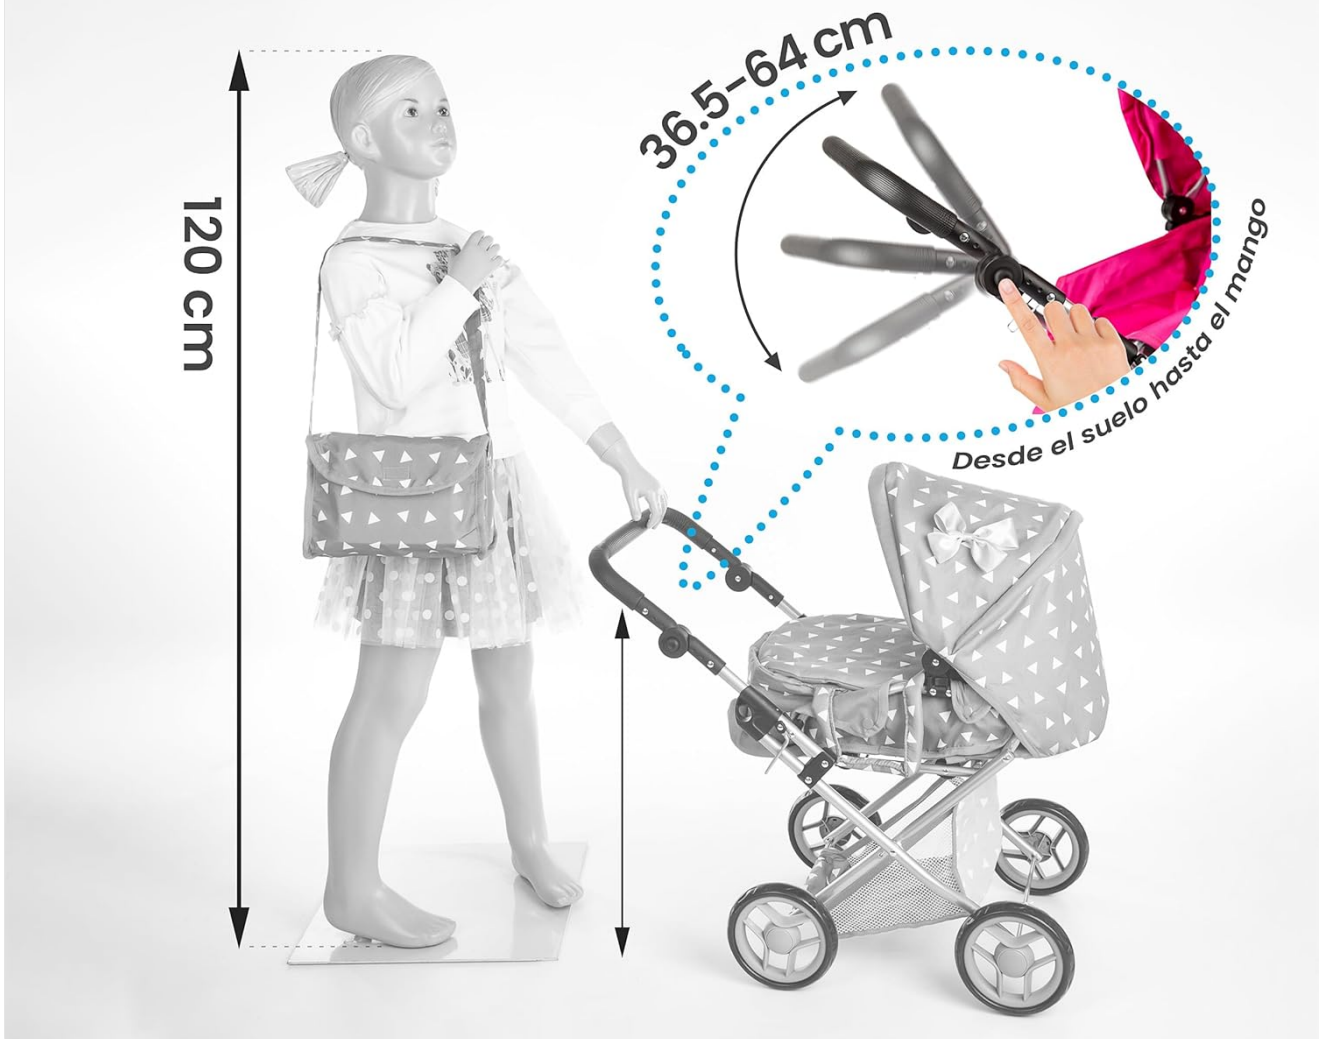


Figure 3: Close-up of the adjustable handle, showing the height range from 36.5 cm to 64 cm.

Assembly Video

Your browser does not support the video tag.

Video 1: Detailed assembly and feature demonstration for Kinderplay Doll Stroller KP0262 (similar model, assembly steps apply).

5. OPERATING INSTRUCTIONS

The Kinderplay Doll Stroller offers versatile play options:

- **3-in-1 Functionality:** Easily convert the stroller between a pram (gondola), a pushchair, and a separate carrycot for your doll.
- **Adjustable Handle:** Customize the handle height to suit the child's comfort and growth.
- **Doll Placement:** Place dolls up to 40 cm in length securely within the pram. The stroller includes safety belts to keep the doll in place.
- **Smooth Movement:** The foam wheels are designed for quiet operation and will not scratch floors, making it suitable for both indoor and outdoor play.

Compatible con muñecas de 40 cm

Cinturones de seguridad para mantener la muñeca asegurada



Figure 4: Demonstrates doll compatibility and the use of safety belts to secure the doll.



Ruedas de espuma silenciosas

RUEDAS SILENCIOSAS DE EVA



Figure 5: The foam wheels ensure quiet and smooth movement, protecting indoor surfaces.

6. MAINTENANCE

To ensure the longevity of your Kinderplay Doll Stroller:

- **Cleaning:** All fabric elements of the stroller are removable and machine washable at 30°C. Detach the fabric from the frame using the snaps or fasteners.
- **Frame Care:** Wipe the metal frame with a damp cloth and mild soap if necessary. Dry thoroughly.
- **Storage:** When not in use, store the stroller in a clean, dry place away from direct sunlight to prevent fading and material degradation.



Fácil de limpiar y mantener



Figure 6: Illustration of the easy-to-clean design with removable fabric components.

7. TROUBLESHOOTING

If you encounter any issues with your doll stroller, please refer to the following common solutions:

- **Stroller does not fold/unfold smoothly:** Check for any obstructions in the folding mechanism. Ensure all parts are aligned correctly.
- **Wheels are loose:** Verify that the wheels are securely clicked into their slots. Re-insert if necessary.
- **Fabric is loose:** Ensure all snaps and fasteners holding the fabric unit to the frame are properly secured.

8. SPECIFICATIONS

Feature	Specification
Model Number	KP0200S

Feature	Specification
Brand	Kinderplay
Material	Alloy Steel (frame), Aluminum, Rubber, Foam (materials)
Product Dimensions	70 x 35 x 66 cm
Product Weight	2.56 kg
Adjustable Handle Height	32 cm to 63 cm
Recommended Age	0 - 6 years (manufacturer recommended)
Doll Compatibility	Up to 40 cm
Wheel Type	Foam Rubber

9. WARRANTY AND SUPPORT

Kinderplay products are manufactured to high-quality standards. For any warranty claims or technical support, please contact your retailer or visit the official Kinderplay website. Please retain your proof of purchase for warranty purposes.

For additional information or assistance, please visit the [Kinderplay Store on Amazon](#).