Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Sharp /
- > Sharp PS-919 Portable Speaker System 2.1 Black 130 W User Manual

Sharp PS-919(BK)

Sharp PS-919 Portable Speaker System User Manual

Model: PS-919(BK) | Brand: Sharp

Introduction

The Sharp PS-919 is a powerful 2.1 channel portable speaker system designed to deliver an immersive audio experience with its two full-range speakers, two tweeters, and a subwoofer. Featuring Bluetooth connectivity for wireless streaming, USB ports for music playback and charging, and vibrant disco lights, this speaker is perfect for any party or outdoor gathering. Its built-in rechargeable battery offers up to 14 hours of playback, and its IPX5 certification ensures durability against splashes. With True Wireless Stereo (TWS) functionality, you can pair two PS-919 speakers for an even wider soundstage.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures, humidity, or direct sunlight.
- Keep away from water and liquids, despite IPX5 rating, avoid submersion.
- Do not attempt to disassemble or modify the speaker. Refer all servicing to qualified personnel.
- Use only the specified power adapter for charging.
- Ensure proper ventilation around the speaker during operation.
- · Keep out of reach of children.

PACKAGE CONTENTS

Please check that all items are present in the package:

- Sharp PS-919 Portable Speaker System
- Power Adapter
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Sharp PS-919 speaker.



Front View: Shows the main speaker grille with integrated disco lights, the Sharp logo, and the top control panel featuring power, source, playback, volume, and light mode buttons.



Angled View: Provides a perspective of the top control panel and the integrated red handle for portability, highlighting the compact design.



Side View: Illustrates the speaker's profile and the illuminated side panels, which contribute to the disco light effects.



Rear View: Displays the connectivity ports, including the micro USB port for charging/power and the 3.5mm AUX input.

Control Panel (Top)

- Power Button: Turns the speaker on or off.
- Source Button: Switches between input modes (Bluetooth, USB, AUX).
- Play/Pause Button: Controls media playback.
- Volume Up/Down Buttons: Adjusts the audio volume.
- Previous/Next Track Buttons: Skips between tracks.
- 3D Bass Button: Enhances bass output.
- Light Mode Button: Cycles through different disco light effects.

Rear Ports

- Micro USB Port (5V): For charging the internal battery or powering the unit.
- DC 20V Input: Main power input.
- AUX Input (3.5mm): For connecting external audio devices via a 3.5mm audio cable.

1. Charging the Speaker

Before first use, fully charge the speaker.

- 1. Connect the provided power adapter to the DC 20V input port on the rear of the speaker.
- 2. Plug the power adapter into a wall outlet.
- 3. The charging indicator light (if available) will show the charging status. A full charge takes approximately 5 hours and provides up to 14 hours of playback.

2. Powering On/Off

• Press and hold the Power Button on the top panel to turn the speaker on or off.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

Connect your smartphone, tablet, or other Bluetooth-enabled device to the PS-919.

- 1. Turn on the PS-919 speaker. It will automatically enter Bluetooth pairing mode (indicated by a flashing Bluetooth indicator).
- 2. On your device, enable Bluetooth and search for available devices.
- 3. Select "SHARP PS-919" from the list.
- 4. Once paired, the speaker will emit a confirmation sound, and the Bluetooth indicator will stop flashing.

2. USB Playback

Play MP3 files directly from a USB flash drive.

- 1. Insert a USB flash drive containing MP3 files into one of the USB ports on the speaker.
- 2. Press the Source Button repeatedly until "USB" mode is selected.
- Playback will begin automatically. Use the playback controls (Play/Pause, Previous/Next Track) on the speaker to manage your music.

3. AUX Input

Connect external audio devices using a 3.5mm audio cable.

- 1. Connect one end of a 3.5mm audio cable (not included) to the AUX input port on the rear of the speaker.
- 2. Connect the other end to the headphone jack or audio output of your external device.
- 3. Press the Source Button repeatedly until "AUX" mode is selected.
- 4. Control playback and volume from your external device.

4. True Wireless Stereo (TWS) Pairing

Pair two Sharp PS-919 speakers for a true stereo sound experience.

- 1. Ensure both PS-919 speakers are powered on and not connected to any Bluetooth device.
- 2. On one speaker (this will be the primary speaker), press and hold the **TWS button** (if available, or a combination of buttons as per specific model instructions, typically the Play/Pause button or a dedicated TWS button).
- 3. The primary speaker will search for the secondary speaker. Once connected, both speakers will emit a confirmation sound.
- 4. Now, connect your Bluetooth device to the primary speaker as described in the "Bluetooth Pairing" section. Audio will play through both speakers in stereo.

5. Disco Lights

Enhance your listening experience with dynamic light effects.

- Press the Light Mode Button on the top panel to cycle through different light patterns and effects.
- Press the button again to change the effect or turn the lights off.

MAINTENANCE

- Cleaning: Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- Storage: When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight.
- Battery Care: To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.
- Water Resistance: The speaker is IPX5 certified, meaning it is protected against low-pressure water jets from any direction.

 Do not immerse the speaker in water. Ensure all port covers are securely closed before exposure to water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker using the provided power adapter.
No sound from speaker.	Volume is too low or muted. Incorrect source selected.	Increase volume on speaker and connected device. Press Source button to select correct input.
Cannot pair via Bluetooth.	Speaker not in pairing mode. Device too far. Interference.	Ensure speaker is in pairing mode. Move device closer. Turn off other Bluetooth devices.
TWS pairing fails.	Speakers not in TWS pairing mode.	Ensure both speakers are disconnected from other devices and follow TWS pairing instructions carefully.

SPECIFICATIONS

Model Number	PS-919(BK)
Output Power	130 Watts
Sound Channel Configuration	2.1 Channel (2 full-range, 2 tweeters, 1 subwoofer)
Connectivity	Bluetooth, USB, 3.5mm AUX
Battery Life	Up to 14 hours
Charging Time	Approx. 5 hours
Dimensions (L x W x H)	22 x 22 x 23 cm
Weight	2.7 Kilograms
Water Resistance	IPX5 Certified
Special Features	Portable, Disco Lights, True Wireless Stereo (TWS)

WARRANTY AND SUPPORT

Sharp products are manufactured to the highest quality standards. For warranty information and technical support, please refer to the warranty card included with your product or visit the official Sharp website for your region. Keep your purchase receipt as proof of purchase.

© 2024 Sharp Corporation. All rights reserved.

Related Documents - PS-919(BK)

SHARP



Sharp PS-919 Software Upgrade Manual

This manual provides instructions for upgrading the software on the Sharp PS-919 2.1 Party Speaker System.

SHARP



SHARP PS-919 Party Speaker System User Manual

Comprehensive user manual for the SHARP PS-919 Party Speaker System, covering setup, operation, safety instructions, technical specifications, and troubleshooting. Features Bluetooth, TWS connectivity, USB playback, and AUX input.

SHARP



SHARP PS-919 Software Upgrade Manual

Guide to upgrading the software for the SHARP PS-919 2.1 Party Speaker System. Learn how to check your device version, prepare a USB drive, and perform the firmware update for improved sound.

SHARP



Sharp PS-919 Party Speaker System User Manual

Comprehensive user manual for the Sharp PS-919 Party Speaker System, covering safety instructions, setup, operation, Bluetooth connectivity, TWS mode, and technical specifications. Learn how to connect, charge, and use the speaker's features.

SHARP



Sharp PS-929 Party Speaker System User Manual

Comprehensive user manual for the Sharp PS-929 Party Speaker System, covering setup, operation, safety instructions, and technical specifications.

SHARP



Sharp XParty PS-931 / PS-932 xParty Sing Party Speaker User Manual

User manual for the Sharp XParty Sing Party Speaker models PS-931 and PS-932. This guide provides detailed instructions on operation, safety precautions, controls, connectivity options including Bluetooth and USB, and maintenance for the party speaker.