

[Manuals.plus](#) /

› [LELO](#) /

› LELO SORAYA 2 Rabbit Vibrator Instruction Manual

LELO 7826

LELO SORAYA 2 Instruction Manual

Model: SORAYA 2 (Aqua)

1. PRODUCT OVERVIEW

The LELO SORAYA 2 is an advanced rabbit vibrator designed for dual G-spot and clitoral stimulation. Crafted with body-safe silicone and featuring a luxurious design, it offers a versatile and powerful experience with multiple vibration settings.



Image: The LELO SORAYA 2 device in Aqua, alongside its elegant packaging, highlighting its Swedish signature design.

Key Features:

- **G-Spot & Clitoral Stimulation:** Features a thicker internal tip (36 mm / 1.4 in diameter, 110 mm / 4.3 in insertable length) and a fully flexible external tip for comprehensive pleasure.
- **12 Vibration Levels:** Offers a wide range of patterns and intensities for personalized experiences.

- **Near Silent Operation:** Engineered for discretion, allowing focus on pleasure without distracting noise.
- **Signature Swedish Design:** Made from smooth, flexible, body-safe silicone for a realistic feel and enhanced durability.
- **Waterproof & USB Rechargeable:** IPX7 certified for full waterproof capability, safe for use in bath or shower, and easy USB charging.



Image: A detailed diagram of the Lelo Soraya 2, pointing out its extended tip for G-spot stimulation, the ergonomic external stimulator for clitoral pleasure, and the wider range of sonic intensities.

2. PACKAGE CONTENTS

SORAYA™ 2

g-spot and clitoral vibrator



WARRANTY CARD

verifies product authenticity

MANUAL

how to use guide



MOISTURIZER SACHET

water-based lubricant

5 ml / 0.17 fl. oz.



CHARGING CORD

USB cable



SATIN POUCH

for storage

Image: An unboxed view of the LELO SORAYA 2, showing all included items: the vibrator, user manual, personal moisturizer sachet, USB charging cable, satin storage pouch, and warranty card.

- LELO SORAYA 2 Rabbit Vibrator
- USB Charging Cable
- Satin Storage Pouch
- User Manual
- Personal Moisturizer Sachet (5 ml / 0.17 fl. oz.)
- Warranty Registration Card

3. SETUP

Initial Charging:

Before the first use, fully charge your SORAYA 2 for 2 hours. Connect the USB charging cable to the charging port located at the base of the device and plug the other end into a USB power source.

The LED lights on the device will blink to indicate charging. Once fully charged, the lights will remain solid.

4. OPERATING INSTRUCTIONS



Image: A visual guide demonstrating the simple controls for the LELO SORAYA 2, including power, pattern selection, and intensity adjustment.

1. **Unlock Device:** Press and hold the **+** and **-** buttons simultaneously for 3 seconds until the light turns on.
2. **Turn On:** Press the **+** button to turn on the device. The LED lights will blink to indicate the battery level.
3. **Increase Vibration Strength:** Press the **+** button again to increase the vibration strength.
4. **Switch Vibration Patterns:** Press the **()** button to cycle through the 12 available vibration patterns.
5. **Reduce Vibration Strength:** Press the **-** button to decrease the vibration strength.
6. **Turn Off:** Press and hold the **()** button to turn off the device.

Official Product Video:

Your browser does not support the video tag.

Video: An official highlight video from LELO showcasing the SORAYA 2's features and design. This video provides a brief visual overview of the product in action.

5. MAINTENANCE

Cleaning:

The LELO SORAYA 2 is IPX7 certified, making it completely waterproof and safe for cleaning under running water or for use in the bath or shower. Always clean the device thoroughly before and after each use.

- Wash the device with warm water and a toy cleaner or mild soap.
- Rinse thoroughly to remove all soap residue.
- Pat dry with a lint-free cloth or towel.
- Avoid using cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.

Storage:

Store your LELO SORAYA 2 in its provided satin pouch in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid storing it with other toys made of different materials to prevent material degradation.

6. TROUBLESHOOTING

If you experience any issues with your LELO SORAYA 2, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or locked.	Ensure the device is fully charged (2 hours). Unlock by pressing and holding + and - buttons simultaneously for 3 seconds.
Vibrations are weak or inconsistent.	Low battery or incorrect setting.	Recharge the device. Cycle through vibration patterns using the () button and adjust intensity with + and - buttons.
Device not charging.	Cable not properly connected or faulty charger.	Ensure the charging cable is securely connected to both the device and the power source. Try a different USB port or charger.

If the issue persists, please contact LELO customer support for further assistance.

7. SPECIFICATIONS

Attribute	Detail
Model Name	SORAYA 2
Item Model Number	7826
Brand	LELO
Color	Aqua

Attribute	Detail
Material	Silicone (body-safe) / ABS Plastic
Product Dimensions	8.66 x 2.99 x 1.77 inches
Weight	6.4 ounces
Battery	1 Lithium Polymer battery (included)
Water Resistance	IPX7 Certified (fully waterproof)
Vibration Settings	12 patterns
Country of Origin	China

8. WARRANTY & SUPPORT

LELO products are manufactured with the highest quality standards. The LELO SORAYA 2 comes with a **1-year warranty** and a **10-year quality guarantee**, ensuring long-term satisfaction and peace of mind.

For detailed warranty information, product registration, or customer support, please visit the official LELO website or contact their customer service directly.

You can also visit the official LELO store on Amazon for more information and support:[LELO Official Store](#)

© 2025 LELO. All rights reserved.

This manual is for informational purposes only. LELO reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person of such revisions or changes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question