

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bontempi](#) /

› [Bontempi TwinStage Mic-Dual Stage Microphone with MP3 Connection User Manual](#)

Bontempi 40 1410

Bontempi TwinStage Mic-Dual Stage Microphone with MP3 Connection User Manual

Model: 40 1410

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Bontempi TwinStage Mic-Dual Stage Microphone. Please read this manual thoroughly before operation and retain it for future reference.

SAFETY INFORMATION

Warning: Not suitable for children under 3 years due to small parts.

- Always supervise children during use.
- Do not expose the device to water or excessive moisture.
- Use only the recommended battery type and ensure correct polarity.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the device will not be used for an extended period.

PACKAGE CONTENTS

- TwinStage Mic - Dual Stage Microphone with MP3 Connection (Blue)
- Adjustable Stand components



Image: The Bontempi TwinStage Mic product shown alongside its retail packaging, illustrating the complete product and its box.

SETUP INSTRUCTIONS

1. Assembling the Stand

1. Carefully unpack all components from the box.
2. Attach the base (tripod) to the bottom pole section. Ensure it clicks securely into place.
3. Connect the upper pole section (with integrated lights) to the lower pole section.
4. Mount the microphone unit (with control panel) onto the top of the assembled pole.
5. Insert the two microphones into their designated holders on the main unit.

2. Battery Installation

- Locate the battery compartment, typically on the underside of the main unit or base.
- Open the compartment cover using a screwdriver if necessary.
- Insert the required number of batteries (e.g., AA or AAA, refer to packaging for specifics) ensuring correct polarity (+/-).
- Close the battery compartment cover securely.

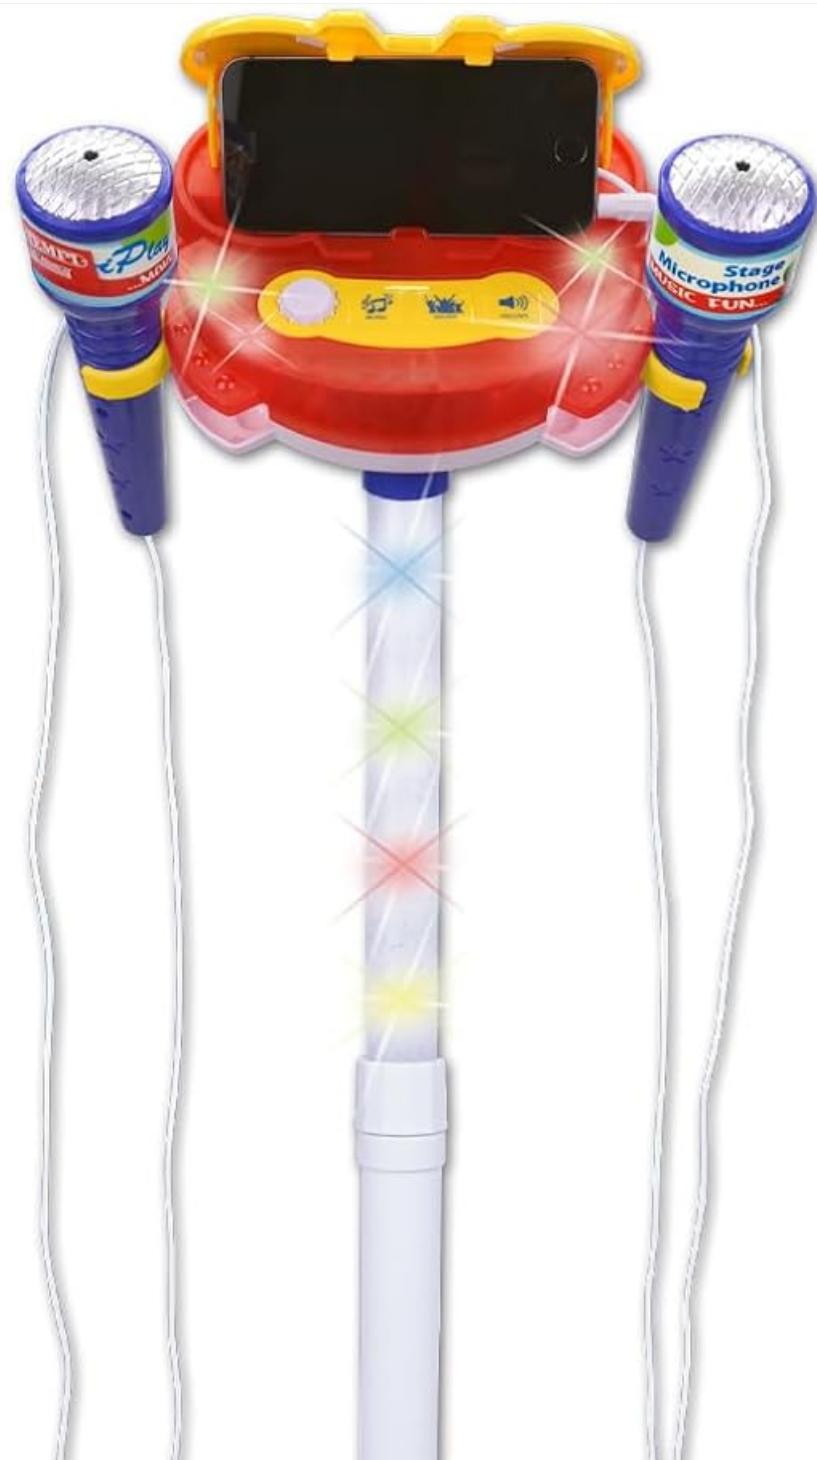




Image: The fully assembled Bontempi TwinStage Mic, featuring two microphones, a central control panel, and an adjustable stand with integrated lights.

OPERATING INSTRUCTIONS

1. Power On/Off

Locate the power button on the main unit. Press it once to turn the device on. Press it again to turn it off.

2. Using the Microphones

- The TwinStage Mic includes two dynamic microphones for duet performances.
- Speak or sing directly into the microphone head for optimal sound pickup.
- Ensure the microphone cables are securely plugged into the main unit.

3. MP3 Connection (Auxiliary Input)

To sing along to your favorite music, connect an external audio device (e.g., smartphone, MP3 player, tablet) to the main unit using a 3.5 mm auxiliary cable. The auxiliary input port is typically located on the control panel.

4. Controls and Features



Image: A detailed view of the main control panel on the Bontempi TwinStage Mic, showing buttons for music, sound effects, and volume control.

- **Volume Control:** Adjust the master volume using the designated knob or buttons.
- **Music Button:** Activates pre-recorded demo songs or background music.
- **Sound Button:** Triggers various sound effects (e.g., drum rhythms, applause).
- **Light Effects:** The stand features integrated lights that illuminate during operation, enhancing the performance experience.

MAINTENANCE

- **Cleaning:** Wipe the surface of the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the microphone stand in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the product is not used for extended periods to prevent leakage.

TROUBLESHOOTING

- **No Sound from Microphones:**
 - Ensure microphones are securely plugged in.
 - Check battery levels and replace if necessary.
 - Verify volume is turned up.
- **Stand Lights Not Working:**

- Check battery levels and replace if necessary.
- Ensure all stand sections are properly connected.

- **MP3 Connection Not Working:**

- Ensure the auxiliary cable is fully inserted into both the microphone unit and the external device.
- Check the volume on the external device.
- Test with a different auxiliary cable or external device.

- **Intermittent Sound:**

- Check all cable connections for looseness.
- Replace batteries.

SPECIFICATIONS

Model Number	40 1410
Brand	Bontempi
Item Weight	0.5 Kilograms (1.1 pounds)
Dimensions (L x W x H)	14.17 x 14.17 x 35.04 inches (360 x 360 x 890 mm)
Power Source	Battery Powered
Material	Plastic
Microphone Form Factor	Handheld
Connectivity Technology	Auxiliary (3.5 mm jack plug)
Recommended Use	Karaoke

WARRANTY AND SUPPORT

For information regarding warranty, returns, or technical support, please refer to the product packaging or contact Bontempi customer service directly. Contact details are typically available on the manufacturer's official website or included documentation.

© 2025 Bontempi. All rights reserved.

Related Documents - 40 1410

	<u>Bontempi 42 5030 Karaoke Sound Box with 2 Microphones - User Manual</u> <p>Comprehensive user manual for the Bontempi 42 5030 Karaoke Sound Box. Learn how to set up, operate, and troubleshoot your karaoke system, including features like voice recording, voice changer, and external audio input.</p>
	<u>Bontempi 48 5010 Wireless Microphone Speaker User Manual</u> <p>Comprehensive user manual for the Bontempi 48 5010 Wireless Microphone Speaker, detailing technical specifications, setup, operation, and troubleshooting in multiple languages.</p>

