



Manuals.plus /

- › Fisca /
- › Fisca RC Robotic Stunt Dog Instruction Manual

Fisca 2741ec2c-5126-43e7-89bd-97f6cdcea9eb

Fisca RC Robotic Stunt Dog Instruction Manual

Model: 2741ec2c-5126-43e7-89bd-97f6cdcea9eb

1. INTRODUCTION

Thank you for choosing the Fisca RC Robotic Stunt Dog. This intelligent robotic dog is designed to provide interactive fun with various functions including voice control, remote control actions, programming, dancing, and touch interaction. Please read this manual carefully to ensure proper setup and operation.



Figure 1: Fisca RC Robotic Stunt Dog.



Figure 2: Key features of the robotic dog including singing, programming, stunts, and speech control.

2. SETUP

2.1 Battery Installation

1. **Robotic Dog:** The robotic dog uses a 3.7V rechargeable Lithium Ion battery (included). Locate the battery compartment on the underside of the dog. Use a screwdriver to open the compartment, insert the battery, and close the compartment securely.
2. **Remote Controller:** The remote controller requires 2 x 1.5V AAA batteries (not included). Open the battery compartment on the back of the remote, insert the batteries with correct polarity, and close the compartment.

Important: Please charge the robotic dog's battery before first use. The battery may be low due to long shipping times. Always ensure adult supervision during battery installation and charging.

2.2 Power On/Off and Pairing

- To power on the robotic dog, locate the power switch on its body and slide it to the 'ON' position.
- To power on the remote controller, press the power button.
- The dog and remote should automatically pair. If not, ensure both are powered on and try again.



Figure 3: The robotic dog and its remote control.

3. OPERATING INSTRUCTIONS

The Fisca RC Robotic Stunt Dog offers multiple ways to interact and control its actions.

3.1 Remote Control Functions

The remote controller allows you to command the dog to perform various stunts and movements. Ensure the controller is facing the dog for optimal response.

- **Movement:** Use the directional buttons to move the dog forward, backward, left, and right.
- **Stunts:** Buttons are available for specific stunts such as Handstand, Push-ups, Sit Down, Crouch Down, and other actions.
- **Singing & Dancing:** Press the dedicated buttons to make the dog sing and dance to pre-programmed music.
- **Volume Control:** Adjust the volume using the volume buttons on the remote.

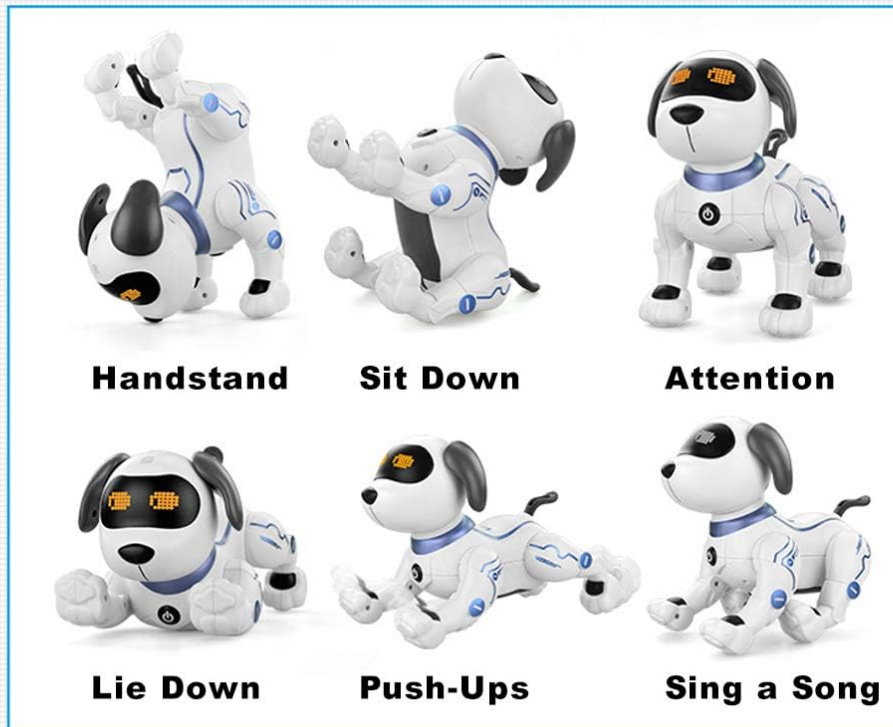


Figure 4: The robotic dog performing various stunts.

3.2 Voice Control

The robotic dog responds to 7 voice commands. Speak clearly and directly to the dog for best results.

- Commands include: Go forward, Demo, Handstand, Push-ups, Sit down, Crouch Down, Wrath.

3.3 Programming Function

You can program a sequence of actions for the dog to perform. Refer to the remote controller for the programming button and follow the instructions to record and play back custom action sequences.

3.4 Touch Interaction

Touch the chin of the robotic dog, and it will respond with cute movements and sounds, providing interactive play.

Your browser does not support the video tag.

Video 1: Official demonstration of the Fisca RC Robotic Stunt Dog's various functions and interactions.

4. MAINTENANCE

4.1 Cleaning

- Wipe the robotic dog with a soft, dry cloth.
- Do not use harsh chemicals or abrasive cleaners.
- Avoid exposing the toy to water or excessive moisture.

4.2 Battery Care

- Always remove batteries from the remote controller when not in use for extended periods.
- Recharge the robotic dog's battery as needed.
- Do not overcharge the battery.

5. TROUBLESHOOTING

- **Dog not responding:**
 - Ensure both the dog and remote controller are powered on.
 - Check if batteries are correctly installed and charged.
 - Make sure the remote controller is pointed towards the dog.
- **Voice commands not working:**
 - Speak clearly and loudly.
 - Ensure there is no excessive background noise.
 - Verify the dog is in voice command mode (if applicable).
- **Dog falls over frequently:**
 - Ensure the dog is on a flat, stable surface.
 - Avoid operating on uneven terrain or thick carpets.
- **Loud sounds/music:**
 - Use the volume control buttons on the remote to adjust the sound level.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	8.6 x 5.7 x 8.48 inches
Item Weight	1 pound
Model Number	2741ec2c-5126-43e7-89bd-97f6cdcea9eb
Manufacturer Recommended Age	6 - 10 years
Dog Battery	1 Lithium Ion battery (included)
Controller Batteries	2 x AAA batteries (not included)
Manufacturer	Fisca



Figure 5: Product dimensions of the robotic dog.

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Fisca customer service directly. Keep your purchase receipt as proof of purchase.