

[Manuals.plus](#) /

› [GE PROFILE](#) /

› GE Profile PDT715SBNTS 24" Dishwasher with 16 Place Settings in Black Stainless Steel User Manual

## GE PROFILE PDT715SBNTS

# GE Profile PDT715SBNTS Dishwasher User Manual

Model: PDT715SBNTS | Brand: GE PROFILE

## INTRODUCTION

---

This manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your GE Profile PDT715SBNTS 24-inch Dishwasher. Please read this manual thoroughly before using your appliance to ensure safe and efficient operation. Keep this manual for future reference.



Figure 1: Front view of the GE Profile PDT715SBNTS dishwasher. This model features a sleek black stainless steel finish with a hidden control panel, designed to integrate seamlessly into modern kitchen aesthetics.

## SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before using the dishwasher.
- Use the dishwasher only for its intended function.
- Do not touch the heating element during or immediately after use.
- Do not allow children to play in or on the dishwasher.
- Use only detergents or rinse agents recommended for use in a dishwasher.
- Do not operate the dishwasher unless all enclosure panels are properly in place.
- Disconnect the appliance from the power supply before cleaning or performing any maintenance.

## SETUP AND INSTALLATION

---

Proper installation is crucial for the optimal performance and longevity of your dishwasher. It is highly recommended that installation be performed by a qualified installer.

### Pre-Installation Checklist:

- Ensure the installation area meets the required dimensions: 24 inches (D) x 23.75 inches (W) x 34 inches (H).
- Verify that a 120 Volts electrical supply is available.
- Confirm water supply and drain connections are accessible.
- Unpack the dishwasher carefully, inspecting for any shipping damage.



Figure 2: The GE Profile PDT715SBNTS dishwasher seamlessly integrated into a kitchen cabinet setup. This image demonstrates the appliance's compact design and how its black stainless steel finish complements various kitchen decors.

### Connecting Utilities:

Connect the water inlet hose to a hot water supply line. Ensure all connections are secure and leak-free. Connect the drain hose to the sink drain or a dedicated air gap. Finally, connect the dishwasher to a grounded 120V electrical outlet.

## OPERATING INSTRUCTIONS

---

Your GE Profile PDT715SBNTS dishwasher is designed for efficient and thorough cleaning with advanced features.

### Loading the Dishwasher:

This dishwasher accommodates up to 16 place settings. Utilize the flexible racking system, including the third rack for flatware and small items, and adjustable upper and lower racks for various dish sizes. Ensure dishes do not block spray arms.



Figure 3: Interior view of the dishwasher demonstrating a typical loading configuration. Note the spacious racks, including the third rack at the top, designed to maximize capacity for 16 place settings.

## Control Panel Overview:

The dishwasher features intuitive push-button controls located on the top edge of the door. These controls allow you to select cycles, options, and start the wash.



Figure 4: Detailed view of the hidden control panel. Buttons include cycle selection (AutoSense, Heavy, Normal, Light, 1 Hour Wash), Delay Hours, Bottle Jets, Steam, Wash Zones, Wash Temp, Dry Boost, and Start/Cancel.

## Wash Cycles and Options:

Select from 11 option cycles to suit your cleaning needs. Key features include:

- **Dry Boost with Fan Assist:** Enhances drying performance, especially for plastics.
- **Deep Clean Silverware Jets:** Targeted jets ensure sparkling clean silverware.
- **Bottle Jets:** Dedicated jets for cleaning tall items like bottles and vases.
- **Third Rack:** Provides extra space for flatware, lids, and small items.
- **Piranha Hard Food Disposer:** Grinds food particles to prevent clogs.
- **Energy Star Certified:** Ensures energy-efficient operation.
- **Sound Reduction System:** Operates quietly for a peaceful kitchen environment.



Figure 5: Illustration of the Deep Clean Silverware Jets. These powerful jets are strategically positioned to provide a thorough wash for silverware, ensuring all food debris is removed.

## MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your dishwasher.

### Cleaning the Interior:

- Periodically clean the interior with a dishwasher cleaner or a mixture of vinegar and baking soda.
- Inspect and clean the filter assembly regularly to remove food particles. Refer to your specific model's instructions for filter removal.

### Cleaning the Exterior:

- For the black stainless steel finish, use a soft, damp cloth and a mild soap. Avoid abrasive cleaners or scouring pads.
- Wipe dry with a clean, soft cloth to prevent water spots.

Winterizing (If Applicable):

If the dishwasher is left in an unheated place during winter, drain all water from the appliance to prevent damage from freezing. Consult a qualified technician for proper winterization procedures.

TROUBLESHOOTING

Before calling for service, review the following common issues and their solutions.

| Problem                   | Possible Cause                                                            | Solution                                                                                                            |
|---------------------------|---------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Dishwasher does not start | Door not latched, power supply issue, cycle not selected.                 | Ensure door is fully closed and latched. Check power cord and circuit breaker. Select a wash cycle and press Start. |
| Dishes not clean          | Improper loading, clogged spray arms, insufficient detergent, hard water. | Load dishes correctly, clear spray arm holes, use recommended detergent, consider a water softener or rinse aid.    |
| Dishwasher not draining   | Clogged drain hose, air gap issue, food disposer blockage.                | Check drain hose for kinks or blockages. Clean air gap if installed. Ensure food disposer is clear.                 |
| Excessive noise           | Items hitting spray arm, foreign object in pump, motor issue.             | Rearrange dishes. Inspect for foreign objects. If noise persists, contact service.                                  |

SPECIFICATIONS

Detailed technical specifications for the GE Profile PDT715SBNTS Dishwasher.

**Brand:** GE PROFILE

**Model:** PDT715SBNTS

**Product Dimensions (D x W x H):** 24" x 23.75" x 34"

**Capacity:** 16 Place Settings

**Color:** Black Stainless

**Material:** Stainless Steel, Nylon

**Controls Type:** Push Button

**Voltage:** 120 Volts

**Option Cycles:** 11

**Special Feature:** Sound Reduction System, Dry Boost with Fan Assist, Deep Clean Silverware Jets, Bottle Jets, Third Rack, Piranha Hard Food Disposer

**Energy Efficiency:** Energy Star Certified

**UPC:** 084691843801

WARRANTY INFORMATION

GE Profile appliances typically come with a limited manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. Retain your proof of purchase for warranty

claims.

## CUSTOMER SUPPORT

For technical assistance, service scheduling, or parts inquiries, please contact GE Profile customer support. Visit the official GE Appliances website or refer to your warranty documentation for the most current contact information.

**Online Resources:** [www.geappliances.com](http://www.geappliances.com)

© 2023 GE Appliances. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question