

[manuals.plus](#) /› [Braun](#) /› [Braun Beard Trimmer 3 BT3221 Instruction Manual](#)**Braun BT3221**

Braun Beard Trimmer 3 Instruction Manual

MODEL: BT3221**Brand: Braun**

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Basic precautions should always be followed when using an electrical appliance.

DANGER: To reduce the risk of electric shock:

- Use only in dry condition.
- Do not submerge in water.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place, store or charge the appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning.
- This appliance is provided with a special cord set with integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it.
- Do not use an extension cord with this appliance.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

- Close supervision is necessary when this appliance is used by, on, or near children or persons with disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if the power supply has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces.

- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this appliance with a damaged or broken cutter or comb, as serious skin injuries may occur.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls off, then remove plug from outlet.
- When plugging to an electrical outlet outside North America, use a plug adapter to match the outlet's pin configuration.
- The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100 °C (212 °F) or incinerate.
- Only use the special cord set provided with the appliance.

2. PRODUCT OVERVIEW

The Braun Beard Trimmer 3 BT3221 is designed for effortless beard trimming and hair clipping. It features lifetime sharp blades and a precision dial with 20 length settings for ultimate control over your style.

Key Features:

- **Sharper, Faster, More Efficient:** Wider cutting area to capture and cut more hair in every stroke.
- **100% Precision and Control:** Precision comb with 20 length settings in 0.5 mm increments (0.5 to 10 mm).
- **Lifetime Sharp Blades:** Ensures easy, even, and consistent trimming.
- **Advanced German Engineering:** Equipped with a powerful 50-minute runtime NiHM battery.

What's in the Box:

- 1 x Braun Beard Trimmer & Hair Clipper (BT3221)
- 1 x Precision Beard Comb
- 1 x Cleaning Brush
- 1 x Smart Plug Charger
- 1 x User Manual

BRAUN

Beard Trimmer 3


**Effortless
trim.**

100%
control for
any beard.



20 length settings

Precision wheel

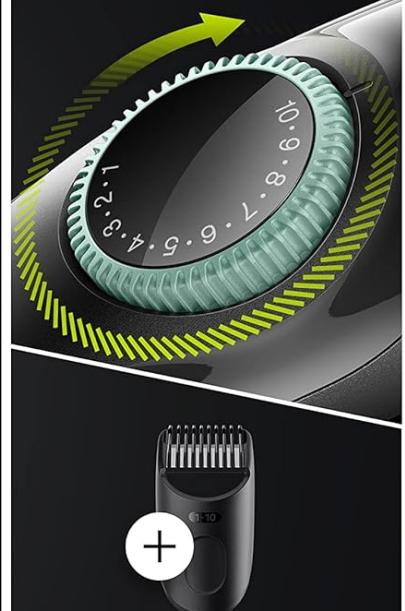

Wider cutting area
+ advanced combs



Image: The Braun Beard Trimmer 3 BT3221, showcasing its precision dial with 20 length settings and wider cutting area.



*vs. previous
Braun trimmers

**Sharper.
Faster.
More
efficient.***



Image: The Braun Beard Trimmer 3 BT3221 highlighting its sharper, faster, and more efficient performance compared to previous models.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your trimmer. Connect the smart plug charger to the trimmer and then to an electrical outlet. The NiHM battery provides approximately 50 minutes of cordless runtime after a full charge. Note: The trimmer is not designed to operate while charging.

3.2 Attaching/Detaching Combs

To attach a comb, align the comb with the trimmer head and push it on until it clicks into place. To detach, gently pull the comb away from the trimmer head.

Video: A demonstration of the Braun Beard Trimmer, including unboxing and initial setup steps.

4. OPERATING INSTRUCTIONS

4.1 Adjusting Length Settings

The precision dial allows you to select from 20 length settings in 0.5 mm increments, ranging from 0.5 mm to 10 mm. Simply rotate the dial to your desired length. The comb attachment will adjust accordingly.



Image: Close-up of the Braun Beard Trimmer 3 BT3221's precision dial, illustrating the 20 length settings.

4.2 Trimming Your Beard

For an even trim, ensure the comb attachment is securely in place and the desired length is selected. Move the trimmer against the direction of hair growth. For precise lines and edges, remove the comb attachment and use the bare blades.

Video: A user demonstrating various trimming techniques with the Braun Beard Trimmer, including adjusting length and shaping the beard.

Video: A user highlighting the ease of use and adjustable features of the Braun Beard Trimmer for different beard styles.



Image: A man demonstrating the use of the Braun Beard Trimmer 3 BT3221 for both general beard trimming with the comb and precise edging without it.

5. MAINTENANCE

5.1 Cleaning the Trimmer

To ensure optimal performance and hygiene, clean your trimmer regularly. Disconnect the appliance from the power outlet before cleaning. The trimmer head and comb attachment are fully washable under running water. Use the provided cleaning brush to remove any trapped hairs from the blades and comb.

Lifetime sharp metal blades



Image: A close-up view of the Braun Beard Trimmer 3 BT3221's lifetime sharp metal blades, emphasizing durability and performance.

6. TROUBLESHOOTING

6.1 Trimmer Not Working While Plugged In

The Braun Beard Trimmer 3 BT3221 is designed for cordless operation and does not function while connected to the charger. Ensure the trimmer is fully charged before use. If the battery is low, allow it to charge for the recommended time.

6.2 Short Battery Life

The trimmer is equipped with a NiHM battery. Over time, rechargeable batteries may experience reduced capacity. Ensure the trimmer is charged for the full recommended duration. If battery performance significantly degrades, consider contacting customer support for assistance.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	5.39 x 2.24 x 9.92 inches
Item Model Number	BT3221
Batteries	1 Lithium Ion battery required (included)
UPC	069055888896
Manufacturer	Procter & Gamble
Recommended Uses	Beard
Color	Black
Item Weight	7.36 ounces
Power Source	Battery Powered

8. WARRANTY AND SUPPORT

The Braun Beard Trimmer 3 BT3221 typically comes with a 2-year warranty. For warranty claims, technical support, or further assistance, please refer to the contact information provided in the original packaging or visit the official Braun website.

© 2026 Braun. All rights reserved.