

## Mesko MS7719

# Mesko MS7719 Portable Electric Fan Heater User Manual

Model: MS7719

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **DO NOT COVER:** Never cover the heater. Covering the heater can lead to overheating and fire. The appliance has a warning label indicating this.
- Ensure the voltage indicated on the rating label corresponds to the mains voltage in your home.
- This appliance is intended for household use only. Do not use it for commercial or industrial purposes.
- Do not use the heater in bathrooms, near water, or in damp environments.
- Always place the heater on a stable, flat, and heat-resistant surface.
- Keep the heater at a safe distance from flammable materials such as furniture, curtains, and paper.
- Do not insert any objects into the heater's openings.
- Unplug the heater from the power outlet when not in use or before cleaning.
- Do not operate the heater with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This appliance is equipped with an overheat protection system. If the heater overheats, it will automatically shut off. Unplug the heater, allow it to cool down, and then check for any obstructions before restarting.
- Supervise children and pets when the heater is in operation.

## 2. PRODUCT OVERVIEW

---

The Mesko MS7719 is a portable electric fan heater designed to provide quick heating or cooling for various indoor spaces. It features two power settings for heating, a cold air function, and a thermostat for temperature control. Its compact size and lightweight design make it easy to move and position where

needed.



Figure 1: Front view of the Mesko MS7719 Portable Electric Fan Heater, showing the fan grille, control knobs, and indicator light.



Figure 2: Close-up of the control panel, highlighting the thermostat knob (left) and mode selector knob (right).

### 3. SETUP

---

1. **Unpacking:** Carefully remove the heater from its packaging. Retain the packaging for storage or disposal according to local regulations.
2. **Placement:** Place the heater on a firm, level, and stable surface. Ensure there is at least 1 meter (3 feet) of clear space around the heater from walls, furniture, and other objects to allow for proper airflow and prevent fire hazards.
3. **Power Connection:** Ensure the heater is switched off (mode selector knob set to 'O' or 'OFF'). Plug the power cord into a suitable electrical outlet (220-240V, 50Hz).

### 4. OPERATING INSTRUCTIONS

---

The Mesko MS7719 heater features two control knobs on its front panel:

- **Left Knob:** Thermostat control.
- **Right Knob:** Mode selector (Power/Airflow).

#### 4.1. Mode Selection

Turn the right knob (mode selector) to choose the desired operating mode:

- **O (OFF):** Turns the heater off.
- **Fan Only (Cold Air):** Activates the fan without heating, providing a cool airflow. This mode is indicated by a fan icon.
- **Heat Setting I (1000W):** Provides low-level heating. This mode is indicated by a single wave icon.
- **Heat Setting II (2000W):** Provides high-level heating. This mode is indicated by a double wave icon.

## **4.2. Temperature Control (Thermostat)**

Once a heating mode (Heat Setting I or II) is selected, use the left knob (thermostat) to set the desired room temperature:

- Turn the thermostat knob clockwise to increase the desired temperature.
- Turn the thermostat knob counter-clockwise to decrease the desired temperature.
- The heater will cycle on and off to maintain the set temperature.

## **4.3. Indicator Light**

A red indicator light on the front panel illuminates when the heater is operating (fan or heating modes).



Figure 3: The fan heater positioned in a room, demonstrating its compact and portable nature.

## 5. MAINTENANCE

---

Regular cleaning and maintenance will help ensure the longevity and efficient operation of your heater.

1. **Before Cleaning:** Always unplug the heater from the power outlet and allow it to cool down completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces of the heater with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the plastic housing.

3. **Air Inlet/Outlet:** Use a vacuum cleaner with a brush attachment to gently remove dust and debris from the air inlet and outlet grilles. Ensure these areas are clear of obstructions.
4. **Storage:** When not in use for extended periods, store the heater in its original packaging or a clean, dry place.
5. **Do Not Immerse:** Never immerse the heater or its power cord in water or any other liquid.

## 6. TROUBLESHOOTING

---

If you encounter issues with your Mesko MS7719 heater, please refer to the following common troubleshooting steps:

- **Heater does not turn on:**

- Check if the power cord is securely plugged into a working electrical outlet.
- Ensure the mode selector knob is set to a heating or fan mode, not 'O' (OFF).
- Verify that the thermostat knob is set to a temperature higher than the current room temperature.
- Check your household's circuit breaker or fuse box.

- **Heater turns off unexpectedly (Overheat Protection):**

- The heater has an automatic overheat protection system. If it shuts off, unplug it immediately.
- Allow the heater to cool down for at least 10-15 minutes.
- Inspect the air inlet and outlet grilles for any obstructions (dust, lint, objects). Clear any blockages.
- Ensure the heater is placed on a stable surface and has adequate clearance around it.
- Plug the heater back in and restart. If the issue persists, contact customer support.

- **No heat in heating mode:**

- Ensure the mode selector is set to Heat Setting I or II.
- Adjust the thermostat to a higher setting.

If these steps do not resolve the issue, please contact Mesko customer support or your retailer for assistance.

## 7. SPECIFICATIONS

---

Technical specifications for the Mesko MS7719 Portable Electric Fan Heater:

Feature	Specification
Brand	Mesko
Model Number	MS 7719
Color	White
Product Dimensions (L x W x H)	14 x 17 x 22 cm
Material	Plastic

<b>Feature</b>	<b>Specification</b>
Power Settings	2 (1000W / 2000W)
Airflow Modes	Cold Air (Fan Only), Warm Air (1000W), Hot Air (2000W)
Thermostat	Yes
Overheat Protection	Yes
Automatic Shut-off	No (but has overheat protection)
Product Weight	1 kg
Power Source	Electric Cable
Heating Method	Forced Air
Recommended Use	Home (Indoor)
Mounting Type	Tabletop



Figure 4: Dimensions of the Mesko MS7719 Portable Electric Fan Heater.

## 8. WARRANTY AND SUPPORT

---

For warranty information, please refer to the warranty card included with your purchase or consult the retailer where the product was purchased. Mesko provides a standard manufacturer's warranty against defects in materials and workmanship.

For technical support, spare parts, or service inquiries, please contact your local Mesko distributor or the retailer from whom you purchased the product. Please have your model number (MS7719) and proof of purchase ready when contacting support.