

[Manuals.plus](#) /

› [Motorola](#) /

› Motorola Vervebuds 110 True Wireless Compact Headphones User Manual

Motorola SHO39WH

Motorola Vervebuds 110 True Wireless Compact Headphones User Manual

Model: SHO39WH

INTRODUCTION

The Motorola Vervebuds 110 are compact, water-resistant true wireless headphones designed for on-the-go connectivity. They offer a lightweight, secure fit with rich stereo sound. These earbuds are created with IPX4 waterproof protection and are compatible with most smartphones, tablets, and computers. They provide up to 12 hours of playtime with the portable charging case and feature a built-in microphone for hands-free calls, supporting smart voice assistants like Siri, Google Assistant, and Alexa.

WHAT'S IN THE BOX

- True wireless earbuds
- Portable Charging Case
- Earbud set (ear tips)
- USB Charging Cable
- Quickstart guide



Image: The Motorola Vervebuds 110, showing both earbuds and the open charging case. The earbuds are white with silver accents, and the case is also white with the Motorola logo.

SETUP

1. Charging the Case and Earbuds

Before first use, fully charge the portable charging case and earbuds. The charging case provides an additional 8 hours of playtime, extending the total battery life to 12 hours.

1. Connect the provided USB charging cable to the charging port on the case and to a compatible USB power source.
2. The LED indicators on the case will show charging status.
3. Place the earbuds into their respective slots in the charging case. Ensure they are properly seated to initiate charging.
4. The earbuds will also have indicators to show their charging status.



Image: The Motorola Vervebuds 110 charging case, closed, with the two earbuds placed beside it. The charging port and LED indicators on the case are visible.

2. Pairing with Your Device

The Vervebuds 110 use Bluetooth 5.0 for wireless connectivity.

1. Ensure the earbuds are charged and placed in the charging case.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your smartphone, tablet, or computer, navigate to the Bluetooth settings.
4. Search for available devices and select "Vervebuds 110" from the list.
5. Once connected, a confirmation sound or indicator will be present.
6. The earbuds can be used individually (mono mode) or together (stereo mode).

OPERATING INSTRUCTIONS

Basic Controls

The Vervebuds 110 feature touch-sensitive controls on each earbud for easy management of audio and calls.

- **Play/Pause:** Tap once on either earbud.
- **Next Track:** Double-tap the right earbud.
- **Previous Track:** Double-tap the left earbud.
- **Answer/End Call:** Tap once on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant:** Triple-tap either earbud.



Image: A close-up view of the two Motorola Vervebuds 110 earbuds, highlighting their compact design and the Motorola 'M' logo on the touch surface.

Voice Assistant Integration

The earbuds are compatible with popular smart voice assistants, including Alexa, Siri, and Google Assistant. Triple-tap either earbud to activate your device's default voice assistant.

Water Resistance (IPX4)

The Vervebuds 110 are IPX4 water-resistant, meaning they are protected against splashing water from any direction. This makes them suitable for use during workouts or in light rain. They are not designed for submersion in water.

MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Avoid using abrasive materials or harsh chemicals.
- **Ear Tips:** Remove ear tips periodically and clean them with mild soap and water. Ensure they are completely dry before reattaching.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Charging Port:** Keep the charging port free of dust and debris.

TROUBLESHOOTING

Problem	Solution
Earbuds not pairing	Ensure earbuds are charged. Place them back in the case, close the lid, then open it again to re-enter pairing mode. Check your device's Bluetooth settings and forget/remove "Vervebuds 110" if previously paired, then try pairing again.
No sound from one earbud	Ensure both earbuds are charged. Place both earbuds back in the charging case, close the lid, wait a few seconds, then take them out. This often re-syncs them. Check device's audio output settings.
Earbuds not charging	Verify the charging cable and power source are working. Ensure the earbuds are correctly seated in the charging case and that the case itself has power. Clean the charging contacts on both the earbuds and the case.
Poor audio quality	Ensure the earbuds are fully charged. Check the distance between the earbuds and your device (Bluetooth range is up to 33 feet). Reduce interference from other wireless devices. Ensure ear tips provide a good seal in your ear.

SPECIFICATIONS

- **Model Name:** Vervebuds 110
- **Connectivity Technology:** Bluetooth 5.0
- **Bluetooth Range:** Up to 10 meters (33 feet)
- **Battery Life (Earbuds):** Up to 4 hours playtime
- **Battery Life (with Charging Case):** Up to 12 hours total playtime
- **Charging Case Charging Time:** Approximately 3 hours
- **Water Resistance Level:** IPX4 (Water Resistant)
- **Control Type:** Voice Control, Touch Control
- **Compatible Devices:** Any smartphone, tablet, or computer with Bluetooth; Smart Speakers (select models)
- **Built-in Mic:** Yes, for hands-free calls
- **Voice Assistant Support:** Alexa, Siri, Google Assistant
- **Material:** Plastic
- **Item Weight:** 6 ounces
- **UPC:** 816479017704

- **Item Model Number:** SHO39WH

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Motorola website or contact their customer service directly. Details are typically provided in the quick start guide included with your product or on the manufacturer's support pages.