

[Manuals.plus](#) /

› [Kicko](#) /

› Kicko 11-Inch Spinning LED Disco Ball Instruction Manual

Kicko 609301176638

Kicko 11-Inch Spinning LED Disco Ball Instruction Manual

Model: 609301176638

Brand: Kicko

1. PRODUCT OVERVIEW

The Kicko 11-Inch Spinning LED Disco Ball is designed to create a vibrant and dynamic atmosphere for indoor parties and events. Featuring dazzling LED lights and a rotating mechanism, this disco ball projects colorful patterns across your space, adding a touch of fun and nostalgia.



Image 1: The Kicko 11-Inch Spinning LED Disco Ball, showcasing its colorful lights and classic design.

Key Features:

- **Dazzling Light Display:** Projects colorful, flashing LED lights.
- **360-Degree Rotation:** Ensures wide coverage and dynamic light movement.
- **Durable Construction:** Made from high-quality plastic for longevity.
- **Easy to Use:** Simple plug-and-play operation.
- **Indoor Use:** Ideal for various indoor party settings.

2. SETUP INSTRUCTIONS

Follow these simple steps to set up your Kicko Spinning LED Disco Ball:

1. **Unpack the Disco Ball:** Carefully remove the disco ball and all components from its packaging. Ensure no parts are damaged.
2. **Placement:** Place the disco ball on a flat, stable surface, or hang it using appropriate hardware (not included, but the unit is designed for hanging). Ensure it is positioned where the light can project effectively across the desired area.
3. **Connect Power:** Locate the power cord. Insert the small end of the power cord into the power input port on the disco ball unit.
4. **Plug In:** Plug the larger end of the power cord into a standard electrical outlet.
5. **Power On:** Locate the On/Off switch on the power cord or the unit itself (if present) and switch it to the 'On' position. The disco ball should immediately begin to light up and rotate.



Image 2: The Kicko Disco Ball showing its power cord connection, ready for setup.

3. OPERATING INSTRUCTIONS

The Kicko Spinning LED Disco Ball operates with ease, providing instant party ambiance.

Basic Operation:

- Once plugged in and powered on, the disco ball will automatically start its light show and rotation.
- To turn off the unit, simply switch the On/Off button on the power cord to the 'Off' position or unplug it from the power outlet.

Remote Control (If Applicable):

Some models may include a remote control for enhanced functionality. If your model includes a remote, refer to the remote's specific instructions for changing light patterns, colors, or activating sound-activated modes.

Video 1: Demonstration of various colorful par light modes and sound activation. This video illustrates different lighting effects and how they respond to sound, enhancing the party atmosphere.

Video 2: A disco ball light showcasing different lighting effects suitable for Halloween and general party decorations. This video highlights the versatility of the light for various festive occasions.

Video 3: Demonstrating 9 lighting modes, including UV effects, for disco party lights. This video provides a comprehensive look at the different visual options available.

4. MAINTENANCE

To ensure the longevity and optimal performance of your disco ball, follow these maintenance guidelines:

- **Cleaning:** Regularly wipe the surface of the disco ball with a soft, dry cloth to remove dust and smudges. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Storage:** When not in use, store the disco ball in its original packaging or a protective container in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the unit with care to avoid dropping or impacting it, which could damage the internal components or the mirrored surface.

5. TROUBLESHOOTING

If you encounter any issues with your Kicko Spinning LED Disco Ball, please refer to the following common troubleshooting steps:

- **No Power/Lights:**
 - Ensure the power cord is securely plugged into both the disco ball and a working electrical outlet.
 - Check if the On/Off switch on the power cord is in the 'On' position.
 - Test the outlet with another device to confirm it is receiving power.
- **No Rotation:**
 - Verify that the unit is placed on a level surface or hung correctly without obstruction.
 - Ensure no foreign objects are impeding the rotation mechanism.
- **Dim Lights:**

- Check if the disco ball's surface is clean and free of dust or smudges.
- Ensure the room is sufficiently dark for the lights to be prominent.

If these steps do not resolve the issue, please contact customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Model Number	609301176638
Product Dimensions	27.94 x 20.32 x 27.94 cm
Item Weight	762.04 g (1.68 Pounds)
Material	Plastic
Color	Multicolor
Power Source	Corded Electric
Supported Battery Types	No batteries required
Operation Mode	Manual
Indoor Outdoor Usage	Indoor
Assembly Required	No
Included Components	Bulb



31
POINTS

11
INCHES

360
ROTATING

5
COLORS



Image 3: Visual representation of the disco ball's key features including 31 light points, 11-inch size, 360-degree rotation, and 5 colors.

7. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific details regarding warranty coverage, returns, or technical support, please refer to the product packaging or contact Kicko customer service directly.

For any questions or assistance, please visit our official website or contact our customer support team.

© 2023 Kicko. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question