

Tefal SV7111

Tefal Express Compact Aqua Blue Steam Iron User Manual

Model: SV7111

1. INTRODUCTION

Thank you for choosing the Tefal Express Compact Aqua Blue Steam Iron. This powerful and efficient steam generator iron is designed to make your ironing tasks quicker and easier, delivering outstanding results. With its compact design, high steam pressure, and convenient features, it is an ideal solution for all your garment care needs. Please read this manual carefully before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the steam iron.
- Use the iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
- The iron must always be turned to OFF before plugging or unplugging from the outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let the iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Contact qualified service personnel for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there might be hot water in the reservoir.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Tefal Express Compact Steam Iron:

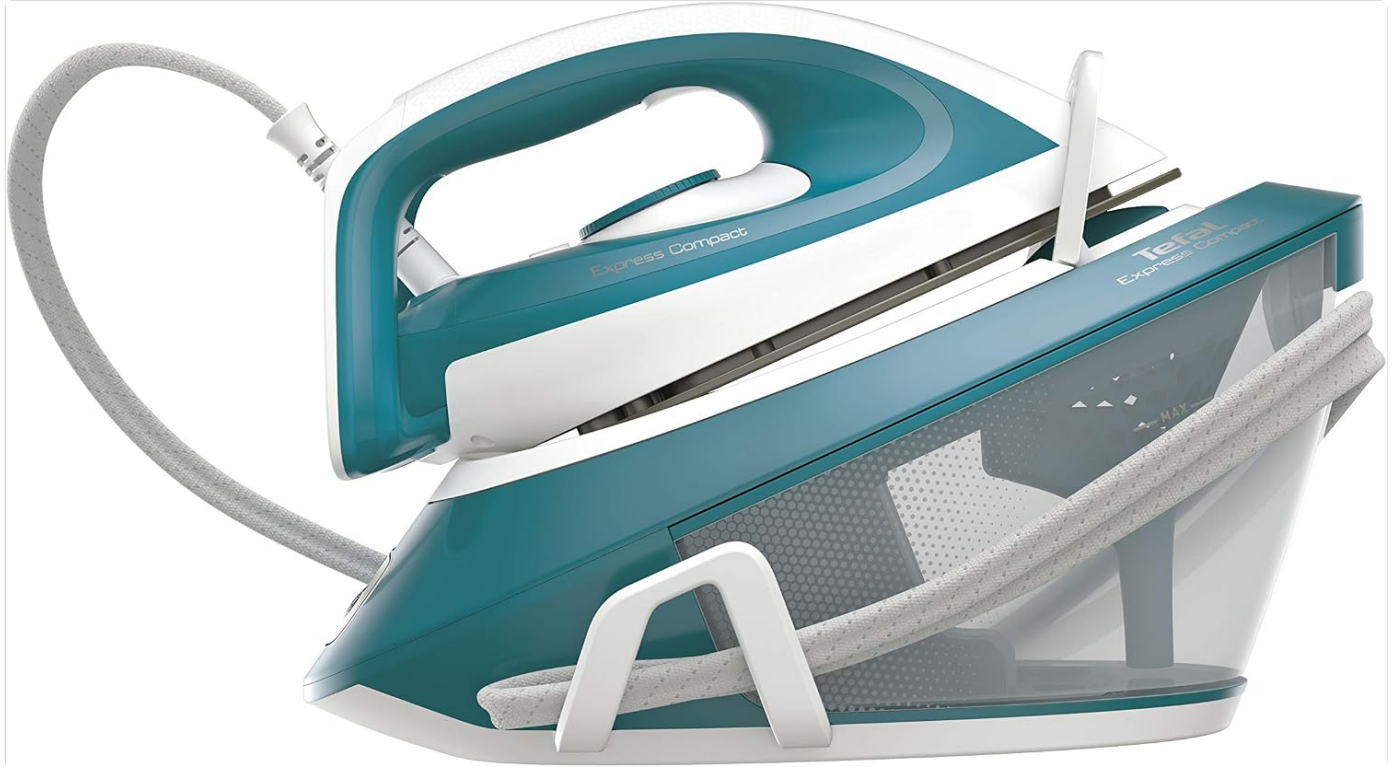


Figure 3.1: Overall view of the Tefal Express Compact Aqua Blue Steam Iron. This image shows the iron unit resting securely on its base, connected by a steam hose, highlighting its compact design and the transparent water tank.



Figure 3.2: Top view of the steam generator base, illustrating the control panel with the power button, anti-calc button, and the temperature dial on the iron itself. The steam hose connection is also visible.



Figure 3.3: The iron in action, showing steam being emitted from the soleplate. This demonstrates the powerful steam output capability of

the appliance during operation.



Figure 3.4: A person carrying the Tefal Express Compact Steam Iron by its handle, showcasing its portability and ease of transport thanks to the transport lock feature.

Key Components:

- **Iron Unit:** Features the Xpress Glide ceramic soleplate and temperature dial.
- **Steam Generator Base:** Houses the water tank, heating element, and control panel.
- **Water Tank:** Removable 1.7 L capacity for extended ironing sessions.
- **Control Panel:** Includes Power button, Anti-Calc button, and indicator lights.
- **Steam Hose:** Connects the iron unit to the steam generator base.
- **Transport Lock:** Secures the iron to its base for safe carrying and storage.
- **Cord Storage:** Integrated compartment for neat storage of the power cord.

4. SETUP

4.1 Unpacking

1. Carefully remove the appliance from its packaging.
2. Remove any protective films or stickers from the iron and soleplate.
3. Keep the packaging materials for future storage or transport.

4.2 Filling the Water Tank

1. Ensure the appliance is unplugged from the mains power supply.
2. Remove the 1.7 L water tank from the base unit.
3. Fill the water tank with tap water up to the 'MAX' level indicator. Do not use distilled water, scented water, or water

containing additives, as this can damage the appliance.

4. Replace the water tank securely into the base unit.

4.3 Initial Setup

1. Place the steam generator on a stable, heat-resistant surface, such as an ironing board designed for steam generators.
2. Unwind the power cord and plug the appliance into a suitable earthed electrical outlet (260V).
3. Ensure the iron is securely locked onto its base using the transport lock mechanism if you need to move it. Unlock it before use.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Heating Up

1. Press the Power button on the control panel. The indicator light will illuminate.
2. The appliance will begin to heat up. This usually takes a few minutes. The steam ready indicator light will stop flashing and remain solid when the iron is ready for use.

5.2 Setting Temperature

1. Turn the temperature dial on the iron unit to select the appropriate temperature for your fabric type. Refer to the garment care label for guidance.
2. Allow a few moments for the soleplate to reach the selected temperature.

5.3 Steam Ironing

1. Once the iron is ready (steam ready light is solid), press and hold the steam trigger located under the handle to release continuous steam.
2. For stubborn creases or thicker fabrics, press the steam boost button (if available, usually a double-press of the steam trigger) for an extra powerful burst of steam (up to 340 g/min).
3. Move the iron smoothly over the fabric.

5.4 Vertical Steaming

The Express Compact is suitable for vertical steaming of hanging garments, curtains, and other fabrics.

1. Hang the garment on a hanger.
2. Set the iron to the maximum temperature.
3. Hold the iron a few centimeters away from the fabric and press the steam trigger to release steam. Move the iron up and down the fabric.
4. *Caution:* Do not allow the hot soleplate to touch the fabric directly during vertical steaming to avoid damage.

5.5 Eco Mode

To reduce energy consumption by up to 20% without compromising performance, activate the Eco Mode. This setting optimizes steam output for everyday ironing tasks.

- Refer to your appliance's control panel for the specific Eco Mode button or setting.

5.6 Auto Shut-Off

For safety and energy saving, the appliance features an auto shut-off function. If the iron is left unattended on its heel for 8 minutes, it will automatically turn off.

5.7 Finishing Your Ironing Session

1. Press the Power button to turn off the appliance.
2. Unplug the power cord from the electrical outlet.
3. Allow the iron to cool down completely before storing.

6. MAINTENANCE AND CLEANING

6.1 Descaling (Anti-Calc System)

The Tefal Express Compact features an integrated flush system for easy descaling. The anti-calc button will flash to remind you when descaling is needed.

1. Ensure the appliance is cool and unplugged.
2. Place the steam generator on the edge of a sink or basin.
3. Remove the water tank.
4. Press and hold the Anti-Calc button for 3 seconds. The appliance will automatically flush out scale deposits.
5. Once the process is complete, empty any remaining water from the base unit and replace the water tank.
6. *Note:* Perform this operation regularly to maintain optimal steam performance and prolong the life of your appliance.

6.2 Cleaning the Soleplate

The Xpress Glide ceramic soleplate is designed for easy cleaning.

- Ensure the iron is cool and unplugged.
- Wipe the soleplate with a damp cloth. For stubborn marks, use a non-abrasive cleaning stick specifically designed for iron soleplates.
- Do not use abrasive pads, scouring powders, or harsh chemicals, as these can damage the soleplate.

6.3 Storage

1. Ensure the iron is completely cool and the water tank is empty.
2. Lock the iron onto its base using the transport lock.
3. Wrap the power cord neatly into its storage compartment.
4. Store the appliance in a dry, safe place, away from children.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam is being produced.	Water tank is empty. Iron not hot enough. Steam trigger not pressed. Appliance needs descaling.	Fill the water tank. Wait for the steam ready indicator light to become solid. Press and hold the steam trigger. Perform the descaling procedure (Section 6.1).
Water droplets are coming from the soleplate.	Iron temperature is too low for steam. Steam boost used too frequently.	Increase the iron temperature setting. Allow more time between steam boosts.

Problem	Possible Cause	Solution
The iron is not heating up.	Appliance not plugged in or power switch off. Auto shut-off activated.	Check power connection and ensure the power button is pressed. Press the power button to restart the appliance.
Anti-Calc light is flashing.	Descaling is required.	Perform the descaling procedure (Section 6.1).

8. TECHNICAL SPECIFICATIONS

Brand	Tefal
Model Number	SV7111 (sv7111go)
Color	Aqua Blue
Dimensions (L x W x H)	34.2 x 21.7 x 18.4 cm
Weight	4 Kilograms
Water Tank Capacity	1.7 Litres
Power	2600 Watts
Voltage	260 Volts
Max. Pump Pressure	Up to 5.8 bar
Continuous Steam Output	Up to 120 g/min
Steam Boost	Up to 340 g/min
Soleplate Material	Ceramic (Xpress Glide)
Auto Shut-off	Yes (after 8 minutes of inactivity)

9. WARRANTY AND SUPPORT

This Tefal appliance is covered by a manufacturer's warranty, subject to the terms and conditions specified at the time of purchase. Please retain your proof of purchase for any warranty claims.

For technical assistance, spare parts, or repair services, please contact Tefal customer support in your region. You can usually find contact information on the official Tefal website or on the warranty card included with your product.

For more information, visit the official Tefal website:www.tefal.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question