

- [Manuals.plus](#) /
- › [ROMP](#) /
 - › ROMP Juke Vibrating Cockring: User Manual

ROMP Juke

ROMP Juke Vibrating Cockring: User Manual

Model: Juke

INTRODUCTION


Thank you for choosing the ROMP Juke vibrating cockring. This device is designed for personal pleasure and is made from body-safe silicone. It features multiple vibration settings to enhance your experience. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image: The ROMP Juke vibrating cockring, showcasing its ergonomic design and main control button.

IMPORTANT SAFETY INFORMATION

- This product is for adult use only.
- Do not use if the device appears damaged or if the silicone is torn.
- Discontinue use immediately if you experience any discomfort or pain.
- Consult a healthcare professional if you have any medical conditions or concerns before using this product.
- Keep out of reach of children.
- Only use water-based lubricants with this device. Oil-based lubricants can damage silicone.

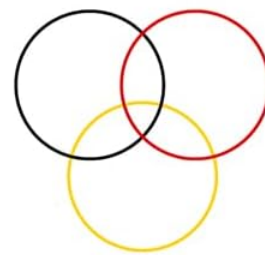

German
**PRODUCT
DESIGN**

Image: The ROMP Juke device, emphasizing its construction from body-safe silicone.

WHAT'S INCLUDED

- ROMP Juke Vibrating Cockring
- USB Charging Cable
- User Manual (this document)



Image: The ROMP Juke product box, indicating the device and accessories inside.

INITIAL SETUP

Before first use, fully charge your ROMP Juke device. Refer to the "Charging Instructions" section for detailed guidance.

CHARGING INSTRUCTIONS

1. Locate the charging port on your ROMP Juke. This is typically a small, discreet port on the device.
2. Connect the provided USB charging cable to the device's charging port.
3. Plug the other end of the USB cable into a USB power source (e.g., computer, USB wall adapter).
4. The indicator light on the device will illuminate to show it is charging.
5. Allow the device to charge completely. A full charge provides approximately 60 minutes of runtime.
6. Once fully charged, disconnect the cable.



Image: The ROMP Juke device connected to its USB charging cable, illustrating the charging process.

OPERATING INSTRUCTIONS

Power On/Off

- To turn on: Press and hold the power button (the yellow button) for 2-3 seconds until the vibrations begin.
- To turn off: Press and hold the power button again for 2-3 seconds until the vibrations stop.

Changing Vibration Modes and Speeds

- Once the device is on, short press the power button to cycle through the 6 different vibration speeds.
- Continue short pressing the power button to cycle through the 4 distinct vibration patterns.
- Experiment with the different settings to find your preferred intensity and pattern.



Come as you are
6 vibration modes



Shake it up!
4 pattern modes



Ssshhh!
Whisper quiet

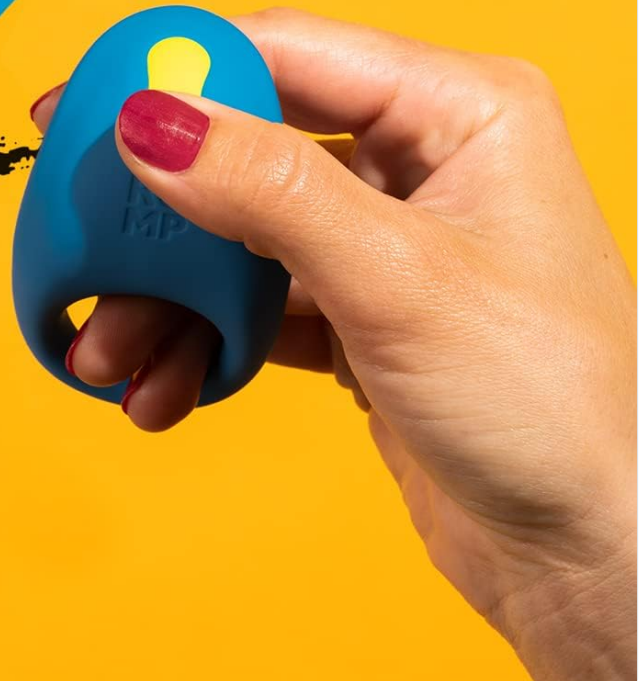


Image: The ROMP Juke device, highlighting its features including 6 vibration modes and 4 pattern modes.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your ROMP Juke and ensure hygienic use.

1. Always clean the device before and after each use.
2. The ROMP Juke is 100% waterproof. Wash the device with warm water and a mild, toy-safe soap.
3. Rinse thoroughly to remove all soap residue.
4. Pat dry with a lint-free cloth or allow to air dry completely before storing.
5. Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.



Image: The ROMP Juke device shown in water, illustrating its waterproof design and ease of cleaning.

STORAGE

Store your ROMP Juke in a clean, dry, and cool place, away from direct sunlight and extreme temperatures. Keep it separate from other silicone toys if they are not made by the same manufacturer, to prevent potential material reactions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully.
Vibrations are weak or inconsistent.	Low battery.	Recharge the device.

Problem	Possible Cause	Solution
Device not charging.	Charging cable or power source issue.	Ensure the cable is properly connected and try a different USB port or power adapter.

SPECIFICATIONS

- **Model:** Juke
- **Brand:** ROMP
- **Material:** Body-safe Silicone
- **Vibration Modes:** 6 speeds, 4 patterns
- **Water Resistance:** 100% Waterproof
- **Battery:** Rechargeable Lithium-ion
- **Runtime:** Approximately 60 minutes (on highest speed)
- **Dimensions:** 130 x 75 x 60 mm (L x W x H)
- **Weight:** 47 grams



Image: The ROMP Juke product box with dimensions indicated.

WARRANTY INFORMATION

For detailed warranty information, please refer to the original product packaging or visit the official ROMP website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your ROMP Juke, please contact ROMP customer support through their official website or the contact information provided on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07Y3VDRNW>

More documents and user manuals: <https://manuals.plus/>