Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > EASTROCK /
- > EASTROCK Double Row Tambourine Instruction Manual

EASTROCK Double Row Tambourine

EASTROCK Double Row TambourineInstruction Manual

Models: Black, Blue, Red

1. Introduction

Thank you for choosing the EASTROCK Double Row Tambourine. This manual provides essential information for the proper use, care, and maintenance of your new musical instrument. Please read it thoroughly to ensure optimal performance and longevity.



Image 1.1: The EASTROCK Double Row Tambourine set, featuring black, blue, and red instruments.

2. PRODUCT OVERVIEW AND FEATURES

The EASTROCK Double Row Tambourine is designed for durability and clear sound production, suitable for various musical settings. Each tambourine features a robust construction and ergonomic design.

2.1 Key Features:

- **High-Quality Materials:** Constructed from environmentally friendly ABS material for the frame and stainless steel for the jingles, ensuring strength, durability, and resistance to wear.
- **Double Row Jingles:** Each tambourine is equipped with double rows of metal jingles, designed to produce a crisp and pleasant sound.
- **Ergonomic Design:** Features a semi-circular arc appearance and a concave-convex handle for a secure, non-slip grip, enhancing comfort and control during use.
- Safe Edges: The edges around the jingles are curled to prevent hand injuries, allowing for confident handling.

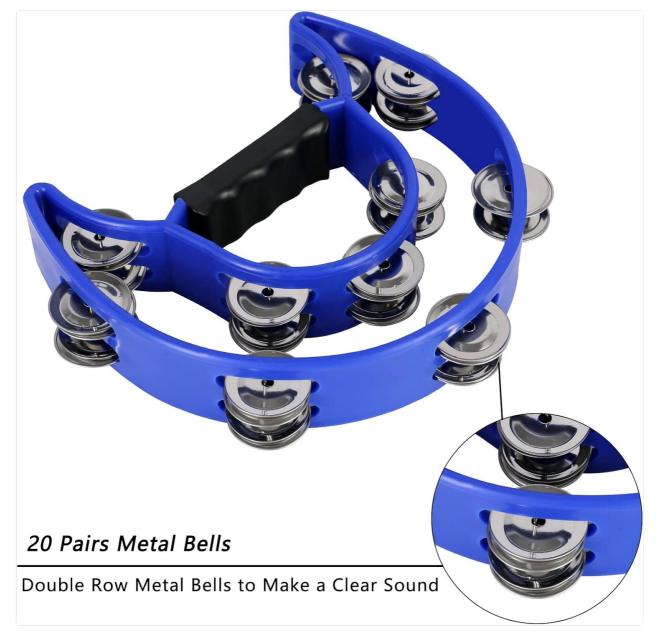


Image 2.1: Detail of the blue tambourine, showing the double row metal jingles.



Image 2.2: The red tambourine, illustrating the ergonomic handle for comfortable use.

3. SETUP

The EASTROCK Double Row Tambourine requires no assembly. It is ready for use directly out of the packaging.

3.1 Unpacking:

- 1. Carefully remove the tambourines from their packaging.
- 2. Inspect each tambourine for any signs of damage during transit. If any damage is found, please refer to the 'Support and Contact' section.

4. OPERATING INSTRUCTIONS

The tambourine is a versatile percussion instrument that can be played in various ways to produce different sounds and rhythms.

4.1 Basic Playing Techniques:

- **Shaking:** Hold the tambourine by the handle and shake it rhythmically to produce a continuous jingle sound. Vary the speed and intensity of shaking for different effects.
- **Tapping:** Gently tap the frame of the tambourine with your free hand or a soft mallet to create a percussive beat along with the jingles.
- **Striking:** For a louder, more accented sound, strike the tambourine against your thigh or palm. Ensure a firm grip to prevent accidental drops.
- **Rolling:** For a sustained jingle sound, hold the tambourine vertically and rotate your wrist rapidly, causing the jingles to continuously strike each other.



Image 4.1: Proper grip for holding the tambourine.



Image 4.2: Tambourines are suitable for various group musical activities.

5. MAINTENANCE

Proper care will help maintain the sound quality and appearance of your tambourines.

- **Cleaning:** Wipe the tambourine frame with a soft, dry cloth. For the metal jingles, use a dry cloth to remove any dust or fingerprints. Avoid using abrasive cleaners or harsh chemicals.
- **Storage:** Store the tambourines in a dry place, away from extreme temperatures and direct sunlight, to prevent material degradation.
- Inspection: Periodically check the jingles and frame for any loose parts or damage.

6. TROUBLESHOOTING

Most issues with a tambourine are minor and easily resolved.

Problem	Possible Cause	Solution
Dull sound from jingles	Dust or debris on jingles; jingles are not moving freely.	Clean jingles with a dry cloth. Ensure no obstructions are preventing free movement.
Loose jingles	Wear and tear over time.	If a jingle becomes loose, it may need professional repair or replacement if it affects playability.
Cracked frame	Impact or excessive force.	Discontinue use if the frame is significantly cracked to avoid further damage or injury. Contact support for advice.

7. Specifications

Detailed specifications for the EASTROCK Double Row Tambourine:

- Included Components: Tambourine x 3 (Black, Blue, Red)
- Finish Type: Metal (Jingles)
- Item Weight: Approximately 1.1 pounds (500 grams) per tambourine
- Package Dimensions: 10.08 x 8.31 x 5.94 inches
- Material Type: Stainless Steel (Jingles), ABS (Frame)
- Size: Approximately 9.8 inches (25 cm) length x 8.3 inches (21 cm) height
- Handle Size: Approximately 3.5 inches (9 cm)

Image 7.1: Dimensions of the EASTROCK Double Row Tambourine.

8. SUPPORT AND CONTACT

EASTROCK is committed to providing quality products and customer service. If you have any questions, concerns, or require assistance with your tambourines, please do not hesitate to contact us. While specific warranty details are not provided in this manual, EASTROCK aims to ensure customer satisfaction. For any product-related inquiries or support, please reach out to our customer service team through the retailer's platform or the official EASTROCK website.

We are dedicated to providing friendly and effective support to address your needs.

© 2025 EASTROCK. All rights reserved.