

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FORIOUS](#) /

› [FORIOUS Black Kitchen Faucet with Pull Down Sprayer \(Model FF0200B\) - Instruction Manual](#)

## FORIOUS FF0200B

# FORIOUS Black Kitchen Faucet with Pull Down Sprayer (Model FF0200B)

Instruction Manual

## INTRODUCTION

Thank you for choosing the FORIOUS Black Kitchen Faucet with Pull Down Sprayer. This manual provides detailed instructions for the installation, operation, and maintenance of your new faucet. Please read this manual thoroughly before installation and retain it for future reference.

This modern high-arc gooseneck faucet is designed for both functionality and style, featuring a durable stainless steel construction and a convenient pull-down sprayer with dual modes.

## SPECIFICATIONS

Feature	Detail
Brand	FORIOUS
Model Name	Kitchen Faucet (FF0200B)
Material	Stainless Steel (SUS304)
Finish Type	Matte Black
Mounting Type	Deck Mount
Hole Count	1 (or 3 with included deck plate)
Number of Handles	1
Spout Height	10.04 Inches
Spout Reach	8.83 Inches
Faucet Height	17.32 Inches
Hose Length	23.63 Inches (Pull-down sprayer with 17.7-inch reach)

Maximum Flow Rate	1.8 Gallons Per Minute
Special Features	360° Swivel, Adjustable Hot Limit, Dual Function Sprayer, Lead Free, Pull Down Sprayer
Certifications	CUPC, CEC



**Figure 1:** Faucet dimensions and installation options for 1 or 3 holes. Faucet height is 17.32 inches, spout height is 10.04 inches, and spout reach is 8.83 inches. The optional deck plate covers pre-existing holes up to 10.24 inches wide. Water supply connection is 3/8 inch, minimum clearance to backsplash is 2.5 inches, and mounting hole size is 1.31-1.5 inches.

## SETUP AND INSTALLATION

---

Before beginning installation, ensure you have all necessary tools and components. Turn off the main water supply before starting any plumbing work.

### Included Components:


- Kitchen Faucet Assembly
- Deck Plate (for 3-hole installation)
- Installation Hardware
- Sprayer Hose with Weight
- Instruction Manual

### Installation Steps:

1. **Insert Faucet:** Insert the faucet into the countertop hole. If using a 3-hole sink, place the included deck plate first, then insert the faucet through the center hole.
2. **Secure Faucet:** From underneath the sink, locate the steel gasket, rubber gasket, and fixed nut. Screw the nut onto the faucet shank and tighten it securely to hold the faucet in place.
3. **Connect Sprayer Hose:** Feed the sprayer hose through the faucet body and into the fast-connect fitting. Ensure it is firmly seated. Install the weight onto the sprayer hose as indicated in the diagram to ensure proper retraction.
4. **Connect Water Supply:** Connect the hot and cold water supply hoses to the corresponding angle valves. If the hose size is too small, use the adapter provided in the package. Ensure all connections are tight to prevent leaks.

Your browser does not support the video tag.


**Video 1:** This video demonstrates the installation process for the FORIOUS Kitchen Faucet, including inserting the faucet, securing it with gaskets and nuts, connecting the sprayer hose, and attaching water supply lines.

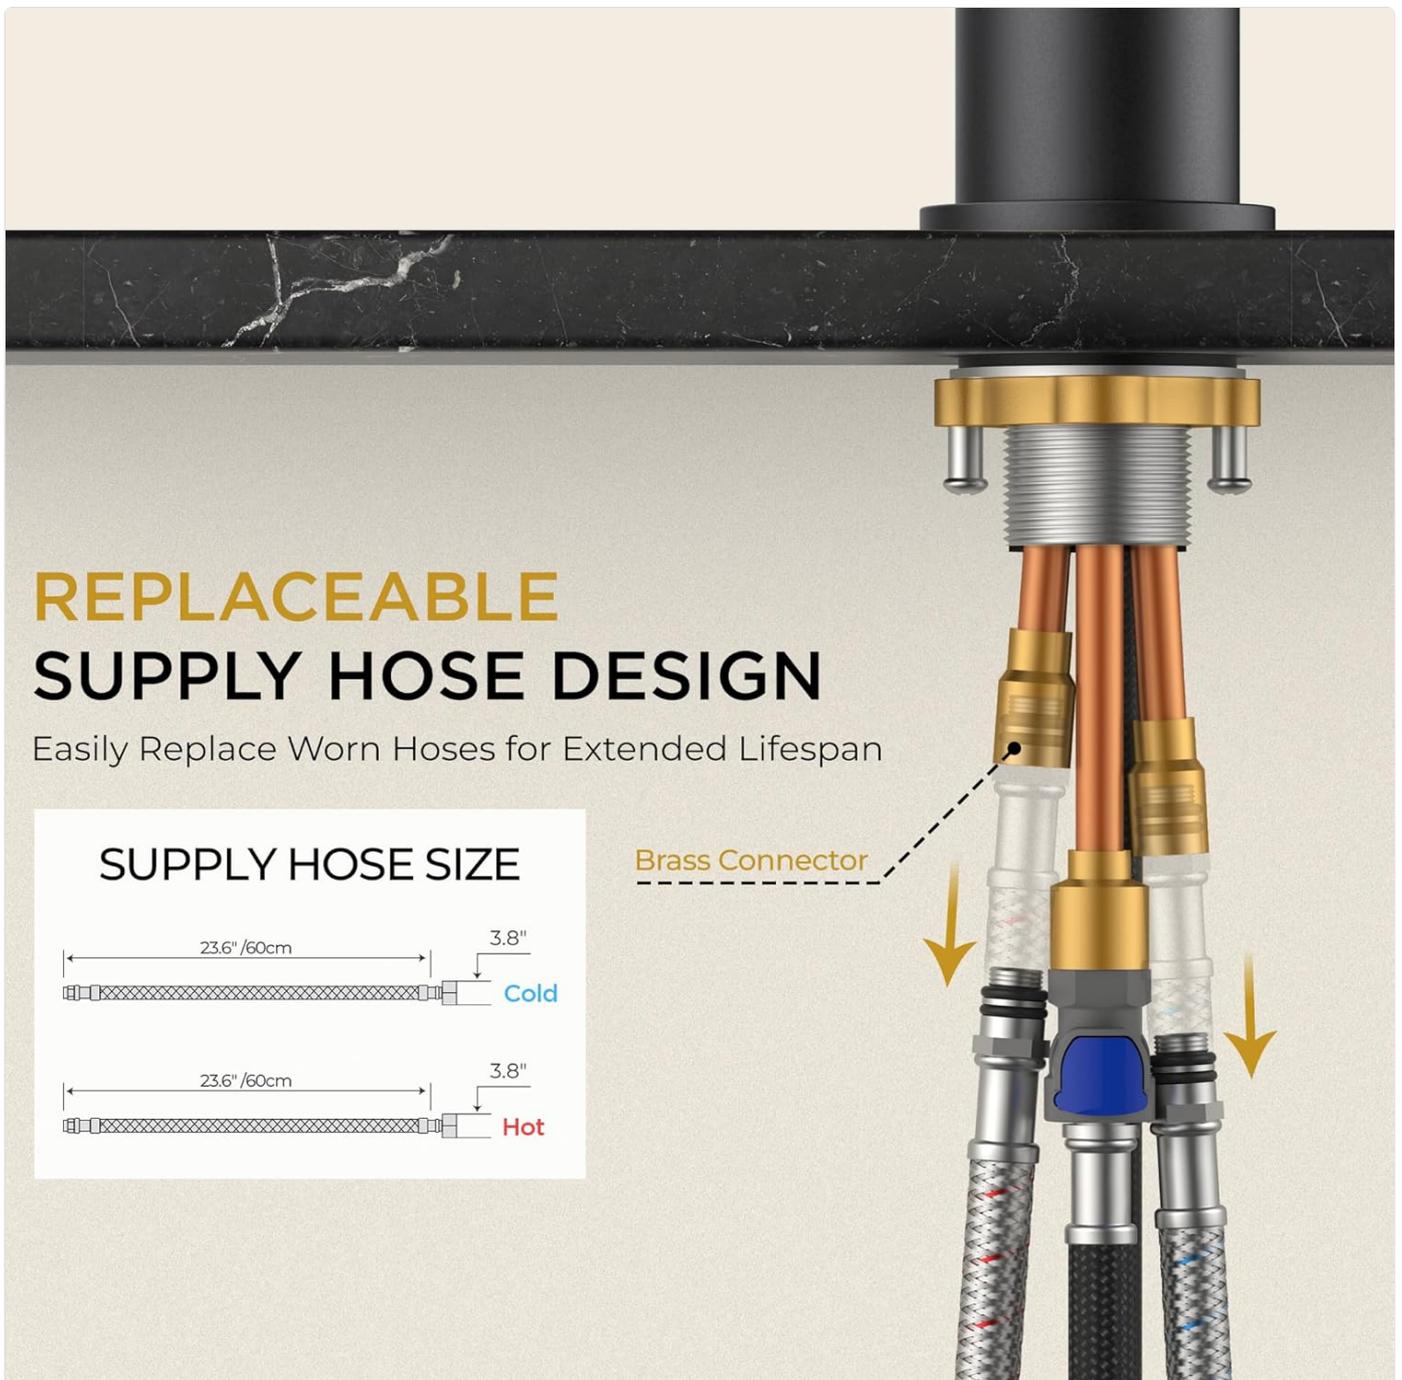

## REPLACEABLE SUPPLY HOSE DESIGN

Easily Replace Worn Hoses for Extended Lifespan

### SUPPLY HOSE SIZE

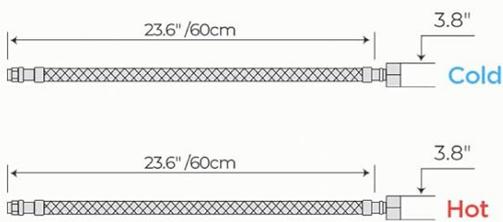

Brass Connector

**Figure 2:** Illustration of the replaceable supply hose design, featuring brass connectors and durable PEX inner hoses for hot and cold water connections.

## OPERATING INSTRUCTIONS

### Water Flow and Temperature Control:

The faucet features a single handle for controlling both water flow and temperature. Move the handle up to increase water flow and down to decrease it. Move the handle left for hot water and right for cold water. The ceramic cartridge ensures smooth and precise control.

### Pull-Down Sprayer:

The pull-down sprayer extends up to 17.7 inches, providing excellent reach for cleaning and filling. The 360° swivel spout allows for full sink coverage and flexibility.

# BRAIDED PULL DOWN HOSE

18" Hose Reach All Areas of the Sink



**Figure 3:** A hand demonstrating the extended reach of the pull-down sprayer with its braided hose, allowing access to all areas of the sink.

## Dual-Mode Sprayer:

The sprayer head offers two distinct spray modes:

- **Aerated Stream:** Ideal for everyday washing and rinsing, providing a gentle, splash-free flow.
- **Powerful Spray:** Designed for deep cleaning and rinsing stubborn food residue from dishes.

Switch between modes using the button located on the sprayer head.



**SPRAY**  
**FOR**  
**POWER WASH**



**STREAM**  
**FOR**  
**RAPID-FILL**



**Figure 4:** The top image shows the sprayer in powerful spray mode for power washing, while the bottom image shows it in aerated stream mode for rapid filling.



**Figure 5:** This diagram highlights the 360° swivel capability of both the faucet spout and the sprayer adapter, offering maximum flexibility.

## MAINTENANCE

---

### Cleaning:

To maintain the matte black finish, clean the faucet regularly with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish. For water spots, a mild soap solution followed by a rinse and dry with a soft cloth is recommended.

### Ceramic Valve:

The faucet is equipped with a drip-free ceramic valve, tested for over 500,000 cycles, ensuring long-lasting performance. No regular maintenance is typically required for the valve itself.



Figure 6: An illustration of the premium lead-free ceramic cartridge, designed for smooth, drip-free performance over many years.

### Hose Replacement:

The faucet features a replaceable supply hose design. If a hose becomes worn or damaged, it can be replaced without needing to replace the entire faucet. Refer to the installation section for hose connection details.



Figure 7: This image shows the thickened PEX hose, built to be heat-resistant and made with NSF-certified materials for safe drinking water.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Low Water Pressure	Clogged aerator; partially closed shut-off valve; kinked supply line.	Clean or replace aerator; ensure shut-off valves are fully open; check supply lines for kinks.
Leaking from Faucet Base	Loose mounting nut; worn O-rings.	Tighten mounting nut from underneath the sink; replace O-rings if damaged.
Sprayer Does Not Retract Fully	Sprayer hose weight is dislodged or insufficient.	Ensure the sprayer hose weight is correctly positioned and secured.
Water Temperature Issues	Incorrect hot/cold supply connection; water heater setting.	Verify hot and cold supply lines are connected correctly; check water heater settings.

## WARRANTY INFORMATION

---

FORIOUS offers a **lifetime parts replacement warranty** for this kitchen faucet. This warranty covers defects in material and manufacturing under normal use. Please retain your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

---

If you encounter any issues or have questions regarding your FORIOUS kitchen faucet that are not covered in this manual, please contact our customer support team. Refer to the product packaging or the official FORIOUS website for contact details.