

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Pipishell](#) /

› [Pipishell PILTK4 Tilt TV Wall Mount Instruction Manual](#)

Pipishell PILTK4

Pipishell PILTK4 Tilt TV Wall Mount Instruction Manual

Model: PILTK4

1. INTRODUCTION

This manual provides detailed instructions for the safe and proper installation and operation of your Pipishell PILTK4 Tilt TV Wall Mount. Please read all instructions carefully before beginning installation to ensure correct setup and to prevent damage or injury. Keep this manual for future reference.

2. PRODUCT OVERVIEW & FEATURES

The Pipishell PILTK4 Tilt TV Wall Mount is designed to securely hold most 37-85 inch LED, LCD, OLED, Plasma, Flat, and Curved TVs. It offers a low-profile design and a tilt function for optimal viewing.

- Universal Compatibility:** Supports TVs from 37 to 85 inches, weighing up to 132 lbs (60 kg). Compatible with VESA patterns from 200x100mm to 600x400mm.
- Low Profile Design:** Mounts your TV just 1.44 inches (3.65 cm) from the wall for a clean, sleek appearance.
- Adjustable Tilt:** Allows for a downward tilt of 0° to 7° to reduce glare and enhance viewing comfort.
- Secure Locking Mechanism:** Features pull cords for easy locking and releasing of the TV, with elegant panel edges to prevent accidental slipping.
- Easy Installation:** Designed for straightforward setup with included hardware and a clear graphical guide.

Perfect for Large TVs

TV Size: **37"–85"**

Max Load: **132 lbs**



This image illustrates the Pipishell PILTK4 mount's compatibility with large TVs, supporting sizes from 37 to 85 inches and a maximum load of 132 lbs.

3. COMPATIBILITY


Before installation, verify that your TV meets the following compatibility requirements:

- **TV Size:** Fits most 37-85 inch (94-216 cm) televisions.
- **Weight Capacity:** Supports TVs weighing up to 132 lbs (60 kg). Do not exceed this weight limit.
- **VESA Pattern:** Compatible with VESA mounting patterns ranging from 200x100mm to 600x400mm. Refer to your TV's manual or measure the distance between the mounting holes on the back of your TV (horizontal x vertical).
- **Wall Type:** Can be mounted on 16-24 inch (40-61 cm) wood stud walls, concrete walls, or brick walls **DO NOT install on drywall alone.**

VESA Pattern Compatibility

Min: **200 x 100mm**

Max: **600 x 400mm**

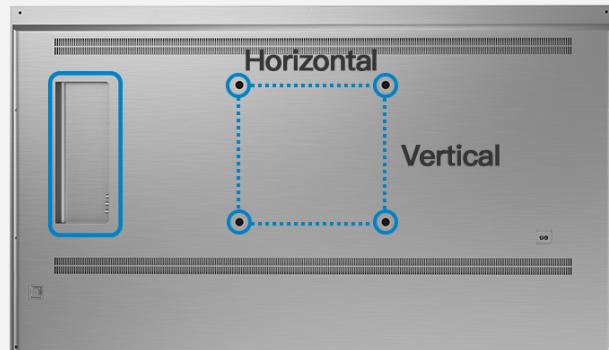

This diagram illustrates the VESA pattern compatibility, showing the minimum and maximum dimensions for mounting holes on the back of your TV.

Fits Any Wall



Do not install in drywall alone



16"/24"
Wood Studs

Concrete

Brick

This image demonstrates the suitable wall types for installation, including wood studs, concrete, and brick. It explicitly warns against installing on drywall only.

4. SAFETY INFORMATION

Improper installation can result in serious injury or damage. Please follow these safety guidelines:

- Ensure the mounting surface can safely support the combined weight of the mount and your TV.
- Do not exceed the maximum weight capacity of 132 lbs (60 kg).
- Always use a stud finder to locate wood studs accurately.
- For concrete or brick walls, use appropriate anchors (not included) and consult a professional if unsure.
- Keep children and pets away during installation.
- Check for hidden electrical wires or plumbing before drilling.

5. PACKAGE CONTENTS

Your Pipishell PILTK4 TV Wall Mount package includes the following components:

- Wall Plate Assembly
- TV Brackets (2)
- Assorted TV Screws, Washers, and Spacers
- Lag Bolts and Washers for Wall Mounting
- Concrete Anchors (for concrete/brick installation)
- Bubble Level
- Instruction Manual

6. INSTALLATION INSTRUCTIONS

Follow these steps for a secure installation. A detailed English graphical installation guide is included in your package. You can also refer to the official installation video for visual guidance.

6.1. Prepare Your TV

1. Carefully place your TV face-down on a soft, clean surface to prevent scratches.
2. Attach the TV brackets to the back of your TV using the appropriate screws, washers, and spacers from the provided hardware kit. Ensure the brackets are centered and securely fastened.

3. Check that the brackets do not block any TV ports. If they do, adjust the bracket position or use different spacers if available.

Locate TV Ports

Brackets may block connections



This image shows the back of a TV with mounting brackets, emphasizing the importance of checking that TV ports are not obstructed by the brackets.

6.2. Mount the Wall Plate

1. Determine the desired height for your TV. Mark the center of where the TV will be mounted.
2. For wood stud installation: Use a stud finder to locate the edges and center of two adjacent wood studs. Position the wall plate so its mounting holes align with the center of the studs. Use the included bubble level to ensure the wall plate is perfectly horizontal. Mark the drilling locations.
3. For concrete/brick wall installation: Use the wall plate as a template to mark the drilling locations. Ensure the wall plate is level.
4. Drill pilot holes at the marked locations. The size of the drill bit will depend on your wall type and the lag bolts/anchors used.
5. Secure the wall plate to the wall using the appropriate lag bolts and washers (and concrete anchors if applicable). Tighten all fasteners firmly.


6.3. Hang the TV

1. With assistance, carefully lift the TV and hook the attached TV brackets onto the top edge of the installed wall plate.
2. Gently lower the TV until the brackets fully engage with the wall plate.
3. Pull the quick-release cords located at the bottom of the TV brackets to ensure the TV is securely locked into place. You should hear a 'click' sound.

Easy to Install



This image visually represents the ease of installation, showing the TV being placed onto the wall mount.

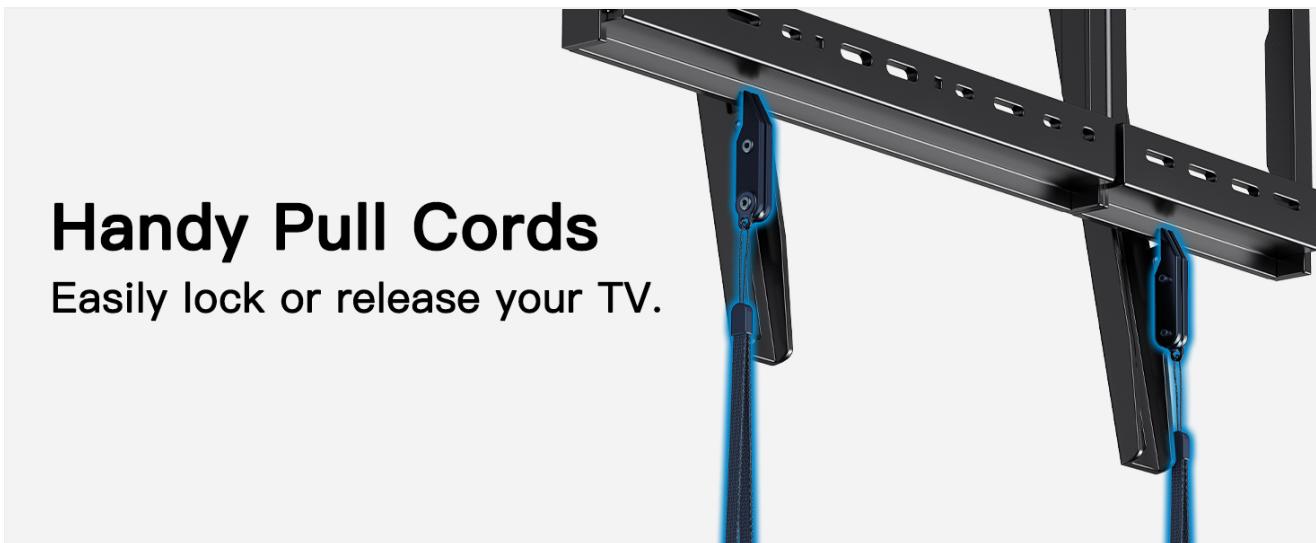


Handy Pull Cords
Easily lock or release your TV.

This image highlights the handy pull cords, which allow for easy locking and releasing of the TV from the wall mount.

Strong Security Locks

Enjoy peace of mind with locks engaged.

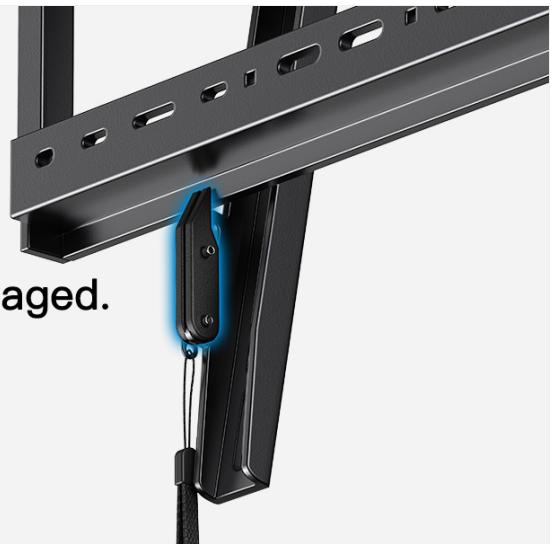

This image shows the strong security locks engaged, ensuring the TV is firmly attached to the mount.

6.4. Official Installation Videos

For a visual guide to the installation process, please watch the following official videos:

Your browser does not support the video tag.

This video provides a comprehensive overview of the Pipishell PILTK4 Tilt TV wall mount, demonstrating its features and installation process.

Your browser does not support the video tag.

This video specifically demonstrates the tilt functionality of the TV mount, showing how to adjust the viewing angle.

7. OPERATING INSTRUCTIONS

The Pipishell PILTK4 mount offers simple operation for adjusting your TV's viewing angle.

7.1. Adjusting the Tilt Angle

To adjust the tilt of your TV, gently push or pull the bottom of the TV to achieve the desired downward angle (0° to 7°). The mount is designed to hold its position once adjusted.

Reduce Glare with Tilt



This image demonstrates the tilt feature, allowing you to adjust the TV downwards by 0-7 degrees to minimize glare.

7.2. Locking and Releasing the TV

The TV is secured to the wall plate using integrated pull cords. To release the TV from the mount, pull both cords downwards simultaneously. To lock it back in place, ensure the TV brackets are properly seated on the wall plate and the cords are released, allowing the locking mechanism to engage.



This image illustrates the low-profile design, showing the TV sitting 1.44 inches from the wall, and details the pull cord for quick release.

8. MAINTENANCE

To ensure the longevity and safe operation of your TV wall mount, perform the following maintenance:

- **Periodic Checks:** Every few months, check all screws and bolts to ensure they are tight and secure. Retighten if necessary.
- **Cleaning:** Wipe the mount with a soft, dry cloth to remove dust. Avoid using abrasive cleaners or solvents.
- **Damage Inspection:** Regularly inspect the mount for any signs of wear, damage, or corrosion. If any issues are found, contact customer service immediately.

9. TROUBLESHOOTING

If you encounter any issues during or after installation, refer to the following common problems and solutions:

- **TV is not level:** Ensure the wall plate was installed level. Some mounts allow for minor post-installation

leveling adjustments; check your specific model's features. If not, you may need to re-drill pilot holes for the wall plate.

- **TV does not lock onto the wall plate:** Ensure the TV brackets are correctly seated on the wall plate. Pull the release cords to ensure the locking mechanism is not obstructed.
- **Difficulty tilting the TV:** Check for any obstructions behind the TV. Ensure all mounting screws on the TV brackets are tightened appropriately, but not excessively, to allow for movement.
- **Mount feels unstable:** Immediately remove the TV from the mount. Re-check all wall fasteners and ensure they are securely anchored into studs or appropriate concrete/brick anchors. Verify that the wall type is suitable and the weight capacity is not exceeded.

10. SPECIFICATIONS

Specification	Detail
Brand	Pipishell
Model Number	PILTK4
Compatible TV Sizes	37-85 inches
Weight Capacity	Up to 132 lbs (60 kg)
VESA Compatibility	200x100mm to 600x400mm
Mounting Type	Wall Mount
Movement Type	Tilt
Maximum Tilt Angle	7 Degrees (downward)
Profile from Wall	1.44 inches (3.65 cm)
Material	Alloy Steel
Color	Black
Item Weight	3.72 pounds (1.69 kg)
Product Dimensions	9.06 x 17.32 x 1.57 inches (23 x 44 x 4 cm)

11. WARRANTY AND SUPPORT

Pipishell stands behind the quality of its products. This TV wall mount is constructed from high-quality steel materials, ensuring strength and durability.

- **Warranty:** The product comes with a 5-year friendly customer service guarantee.
- **Customer Support:** If you have any questions, concerns, or require assistance with installation or operation, please do not hesitate to contact Pipishell customer service.