

PROSCAN pac2000

PROSCAN Action Camera Model pac2000 User Manual

Your guide to setting up and operating your PROSCAN Action Camera.

[Introduction](#) [Safety](#) [Features](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

1. INTRODUCTION

1.1 Welcome

Thank you for choosing the PROSCAN Action Camera Model pac2000. This camera is designed to capture your adventures in high definition, whether on land or underwater. This manual provides essential information on how to set up, operate, and maintain your camera to ensure optimal performance.

1.2 Package Contents

Please check the packaging to ensure all items are present. Typically, the package includes:

- PROSCAN Action Camera Model pac2000
- Waterproof Case
- Mounting Accessories
- USB Charging Cable
- User Manual

2. SAFETY INFORMATION

To prevent damage to the camera or injury to yourself, please read and follow these safety guidelines:

- Do not expose the camera to extreme temperatures or direct sunlight for extended periods.
- Ensure the waterproof case is properly sealed before submerging the camera in water.
- Keep the camera and accessories out of reach of children.
- Use only approved charging cables and power adapters.
- Avoid dropping or subjecting the camera to severe impacts.
- Do not attempt to disassemble or modify the camera.

3. PRODUCT FEATURES

The PROSCAN Action Camera Model pac2000 offers the following key features:

- **720P HD Video Recording:** Capture clear video at 30 frames per second.
- **5.0 Megapixel Photo Resolution:** Default resolution for still images (2592x1944).
- **2-inch LCD Screen:** For easy framing, playback, and menu navigation.

- **Waterproof up to 30 meters:** With the included waterproof case, suitable for various water sports.
- **Wide Angle View:** Capture more of your surroundings.
- **Micro SD Card Support:** Supports Micro SD cards up to 32GB for storage.
- **CMOS Sensor:** Equipped with a 0.3 Megapixel CMOS sensor.
- **USB Connectivity:** For data transfer and charging.

4. SETUP

4.1 Charging the Battery

Before first use, fully charge the camera's battery. Connect the camera to a USB power source using the provided USB cable. The charging indicator light will illuminate during charging and turn off when the battery is full.

4.2 Inserting a MicroSD Card

A MicroSD card (not included) is required to store photos and videos. The camera supports cards up to 32GB. Insert the MicroSD card into the designated slot with the contacts facing the correct direction until it clicks into place. To remove, gently push the card in until it springs out.

4.3 Using the Waterproof Case

The waterproof case allows the camera to be used underwater up to 30 meters. Before each use, ensure the rubber seal is clean and free of debris. Close the latch securely to prevent water leakage. It is recommended to test the waterproof case without the camera inside before first use in water.



Figure 1: PROSCAN Action Camera Model pac2000 securely housed within its transparent waterproof case, ready for underwater use. The image highlights the camera's lens, control buttons, and the attached mounting bracket.

5. OPERATING THE CAMERA

5.1 Power On/Off

To power on the camera, press and hold the Power/Mode button (usually located on the front or top) for a few seconds. To power off, press and hold the same button until the screen turns off.

5.2 Mode Switching

Press the Power/Mode button repeatedly to cycle through different modes: Video Recording, Photo Shooting, and Playback.

5.3 Recording Video

In Video Recording mode, press the Shutter/OK button (usually on the top) once to start recording. The recording indicator will flash.

Press the Shutter/OK button again to stop recording.

5.4 Taking Photos

In Photo Shooting mode, frame your shot using the LCD screen. Press the Shutter/OK button once to take a photo.

5.5 Playback

In Playback mode, use the Up/Down buttons (if available, or Shutter/OK to select) to navigate through your recorded videos and photos. Press the Shutter/OK button to view a selected item.

5.6 Menu Settings

From any mode, press and hold the Shutter/OK button (or a dedicated Menu button if present) to access the settings menu. Use the Mode button to navigate through options and the Shutter/OK button to confirm selections. Settings may include video resolution, photo resolution, date/time, loop recording, and more.



Figure 2: Front view of the PROSCAN Action Camera Model pac2000, removed from its waterproof housing. This image clearly displays the camera's lens, the 2-inch LCD screen, and the primary control buttons for operation.

6. MAINTENANCE

6.1 Cleaning

Wipe the camera body with a soft, dry cloth. For the lens, use a specialized lens cleaning cloth. After using the waterproof case in saltwater, rinse it with fresh water and allow it to air dry. Ensure no sand or debris is trapped in the seal.

6.2 Storage

Store the camera in a cool, dry place away from direct sunlight. If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

7. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following table:

Problem	Possible Solution
Camera does not power on.	Ensure the battery is charged. Connect to a power source and try again.
Cannot record video or take photos.	Check if a MicroSD card is inserted and has sufficient free space. Format the card if necessary (this will erase all data).
Poor video/photo quality.	Ensure the lens is clean. Check lighting conditions. Verify resolution settings in the menu.
Water leakage in waterproof case.	Inspect the rubber seal for dirt, hair, or damage. Ensure the latch is fully closed. Do not use if the seal is compromised.

8. SPECIFICATIONS

Feature	Detail
Brand	PROSCAN
Model Number	pac2000
Video Capture Resolution	720p
Photo Sensor Technology	CMOS
Default Photo Resolution	5.0 Megapixels (2592x1944)
Screen Size	2 Inches
Flash Memory Type	Micro SD (up to 32GB)
Video Capture Format	MP4
Connectivity Technology	USB
Special Feature	Waterproof (with case)
Optical Zoom	1.6x
Product Dimensions	12.7 x 10.16 x 10.16 cm
Item Weight	453.59 g
Manufacturer	Curtis

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details.](#)

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question