

[Manuals.plus](#) /

> [Geepas](#) /

> Geepas Digital Air Fryer GAF37501N User Manual

Geepas GAF37501N

Geepas Digital Air Fryer GAF37501N User Manual

Model: GAF37501N

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before using the appliance.

- **Read All Instructions:** Familiarize yourself with the appliance and its operation before first use.
- **Hot Surfaces:** Do not touch hot surfaces. Use handles or knobs. The exterior of the air fryer is cool-touch, but internal components and the basket will be hot during and after operation.
- **Electrical Safety:** To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Unplug When Not in Use:** Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- **Appliance Malfunction:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for assistance.
- **Avoid Accessories:** The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- **Outdoor Use:** Do not use outdoors. This appliance is for household use only.
- **Cord Safety:** Do not let cord hang over edge of table or counter, or touch hot surfaces.
- **Placement:** Do not place on or near a hot gas or electric burner, or in a heated oven.
- **Moving Hot Oil:** Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- **Overheat Protection:** This appliance is equipped with built-in overheat protection and an automatic shut-off sensor for safe operation.
- **Non-Slip Feet:** The base features non-slip feet to prevent accidental movement during operation.
- **Dual Protection Circuit:** The air fryer incorporates a dual protection circuit for maximum safety.

2. PRODUCT OVERVIEW

The Geepas Digital Air Fryer GAF37501N uses hot air circulation technology to cook your favorite foods with little to no oil, resulting in healthier meals. It features a user-friendly touch LCD screen for precise control.



Figure 1: Front view of the Geepas Digital Air Fryer GAF37501N. This image shows the sleek black exterior of the air fryer with the Geepas logo prominently displayed on the front panel. The handle for the cooking basket is visible at the bottom front.

Components:

- **Main Unit:** Houses the heating element and control panel.
- **Touch LCD Screen:** For setting time and temperature, and monitoring cooking progress.
- **Cooking Basket:** 3.5-liter capacity, non-stick, and removable for easy cleaning.
- **Basket Handle:** Cool-touch handle for safe removal of the cooking basket.
- **Air Outlet Vent:** Located at the rear of the appliance.
- **Power Cord:** For connecting to an electrical outlet.



Figure 2: Close-up view of the touch control panel on the top of the Geepas Digital Air Fryer. The digital display shows temperature and time settings, with touch icons for adjustments.

3. SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all parts are present and in good condition.

Before First Use:

1. Wipe the exterior of the appliance with a damp cloth.
2. Remove the cooking basket by pulling the handle. Wash the basket thoroughly with hot water, dish soap, and a non-abrasive sponge.
3. Rinse and dry all parts completely.
4. Place the air fryer on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides of the appliance, and 10 cm (4 inches) above it, to allow for proper air circulation.
5. Do not place anything on top of the air fryer.



Figure 3: The cooking basket of the Geepas Digital Air Fryer GAF37501N pulled out from the main unit, showing its empty, non-stick interior. This illustrates the removable nature of the basket for cleaning and loading.

4. OPERATING INSTRUCTIONS

General Operation:

1. Plug the power cord into a grounded wall outlet. The appliance will beep, and the display will light up briefly.
2. Carefully pull the cooking basket out of the air fryer using the handle.
3. Place your ingredients into the cooking basket. Do not fill the basket beyond the MAX indication.
4. Slide the cooking basket back into the air fryer. Ensure it clicks securely into place.
5. **Setting Temperature and Time:**
 - Use the touch LCD screen to set your desired cooking temperature (range: 80°C to 200°C).
 - Set the cooking time (up to 30 minutes).
6. Press the Start/Pause button to begin cooking. The air fryer will start heating up and the timer will begin counting down.
7. During the cooking process, you can pull out the basket to check the food or shake it (for even cooking of items like fries). The air fryer will pause automatically when the basket is removed and resume when it's reinserted.
8. When the set cooking time has elapsed, the air fryer will beep several times and automatically shut off.
9. Carefully pull out the basket and transfer the cooked food to a plate. Use tongs for larger items.
10. Unplug the appliance from the wall outlet after use.



Figure 4: A hand pouring french fries into the pulled-out cooking basket of the Geepas Digital Air Fryer GAF37501N, demonstrating the loading process.



Figure 5: The cooking basket of the Geepas Digital Air Fryer GAF37501N containing a whole roasted chicken, illustrating the appliance's capacity and cooking capability.

5. MAINTENANCE AND CLEANING

Clean the appliance after every use.

- 1. Unplug the air fryer and allow it to cool down completely before cleaning.
- 2. **Cooking Basket:** The non-stick cooking basket is dishwasher safe. Alternatively, you can wash it with hot water, dish soap, and a non-abrasive sponge. Do not use metal kitchen utensils or abrasive cleaning materials, as this may damage the non-stick coating.
- 3. **Interior:** Wipe the interior of the appliance with a damp cloth. If necessary, use a mild detergent.
- 4. **Exterior:** Clean the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
- 5. Ensure all parts are thoroughly dry before storing or next use.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	The appliance is not plugged in.	Ensure the power plug is securely inserted into a grounded wall outlet.
Food is not cooked evenly.	Too much food in the basket; food not shaken/turned.	Reduce the amount of food per batch. Shake or turn food halfway through cooking.
White smoke comes out of the appliance.	Fat residue from previous use; fatty ingredients.	Clean the basket thoroughly after each use. For very fatty foods, excess fat may drip and cause smoke. This is normal.
Food is not crispy.	Ingredients not suitable for air frying; not enough oil (if required).	Ensure ingredients are suitable for air frying. For some foods, a light coating of oil can help achieve crispiness.

7. SPECIFICATIONS

Feature	Specification
Model Number	GAF37501N
Capacity	3.5 Liters
Power Output	1400 Watts
Voltage	240 Volts
Temperature Range	80°C - 200°C
Timer	Up to 30 minutes
Control Method	Touch LCD Screen
Material	Non-stick material (basket), Polypropylene (exterior), Plastic (interior)
Color	Black
Product Dimensions (DxWxH)	31.2 x 26.5 x 31.4 cm
Item Weight	2.6 Kilograms
Dishwasher Safe Parts	Cooking Basket

Feature	Specification
Special Features	Temperature Control, Overheat Protection, Auto Shut-off, Cool-Touch Exterior, Non-Slip Feet

8. WARRANTY AND SUPPORT

Warranty Information:

This Geepas Digital Air Fryer GAF37501N comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

The warranty does not cover damage resulting from misuse, abuse, accident, alteration, or unauthorized repair. Please retain your proof of purchase for warranty claims.

Customer Support:

For any questions, troubleshooting assistance, or warranty claims, please contact Geepas customer support through their official website or the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07Y6PRXX9>

More documents and user manuals: <https://manuals.plus/>